

Owner's Manual



45 DEGREE LEG PRESS STERLING

TAURUS® is a registered brand of the company Sport-Tiedje GmbH. All rights reserved. Any use of this trademark without the explicit written permission of Sport-Tiedje is prohibited.

TF-SL7020

! CAUTION

Read all precautions and instructions in this manual before using this equipment.

Table Of Contents

Important Safety Instructions	3
Instructions	5
Parts List and Exploded View	6
Measurement Guide	
Assembly Instructions	20
Assembly	21
Adjust Instructions and Exercise Instructions	32
Maintenance Schedule	
General Maintenance Information	35
Weight Training Tips	36

Important Safety Instructions

Before beginning any fitness program, you should obtain a complete physical examination from your physician. When using exercise equipment, basic precautions should always be taken, including the following:

- 1. Read all instructions before using the equipment. These instructions are written to ensure your safety and to protect the unit.
- 2. Use the equipment only for its intended purpose as described in this guide. Do not use accessory attachments that are not recommended by the manufacturer: such attachments might cause injuries.
- 3. The product should only be used on a level surface and is with 0.5 meters space around the product. Do not use the equipment outdoors.
- 4. Do not allow children on or near the equipment. And children are not allowed to use this equipment. Teenagers should use this equipment with adult supervision.
- 5. Do not overexert yourself or work to exhaustion. Do not attempt to lift more weight than you can control safely. If you feel any pain or abnormal symptoms, stop your workout immediately and consult your physician.

6. This equipment is not used as medical apparatus and instruments.

- 7. Never operate the unit when it has been dropped or damaged.
 Never drop or insert anything into any opening in the equipment.
 Always check the unit and its cables before each use. Make sure that all fasteners and cables are secure and in good working condition.
 Frayed or worn cables can be dangerous and may cause injury. Periodically check these cables for any indication of wear.
 Keep hands, limbs, loose clothing and long hair well out of the way of moving parts.
- 8. Be careful when getting on or off the equipment.
- 9. Wear proper exercise clothing and shoes for your workout, no loose clothing.


Important Safety Instructions

Personal Safety During Assembly

Read each step in the assembly instructions and follow the steps in sequence. Do not skip ahead. If you skip ahead, you may learn later that you have to disassemble components and that you may have damaged the equipment.

Assemble and operate the equipment on a solid, level surface. Locate the unit a few feet from walls or furniture to provide easy access. The equipment is designed for your enjoyment. By following these precautions and using common sense, you will have many safe and pleasurable hours of healthful exercise with the equipment.

Training Area and Free Area

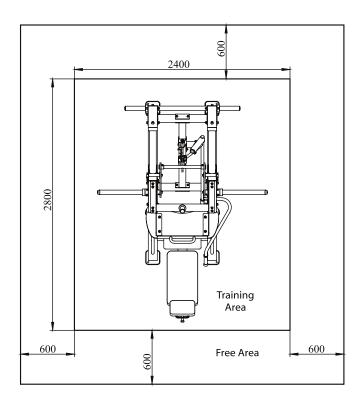

Specifications

Class: S


Maximum Wt. Capacity: 450kg/ 990lbs Maximum User Weight: 150kg/ 330lbs Product Total Surface: 2500*1880mm Product Total Mass: 249kg/ 549lbs


— 4 —


Instructions

Before beginning assembly please take the time to read instructions thoroughly. Please use the various lists in this manual to make sure that all parts have been included in your shipment. When ordering, use part number and description from the lists. Use only our replacement part when servicing. Failure to do so will void your warranty and could result in personal injury.


The equipment is designed to provide the smoothest, most effective exercise motion possible. After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call your authorized dealer. Be sure to have your serial number and this manual when calling. When all parts have been accounted for, continue on.

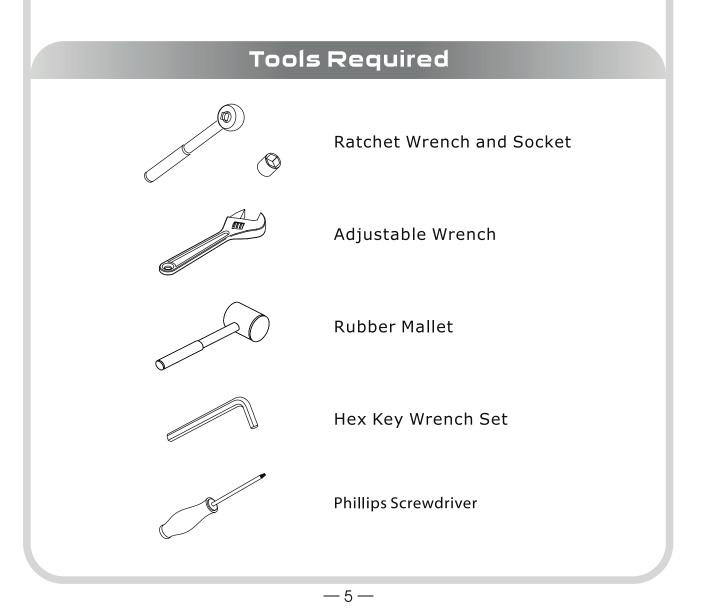

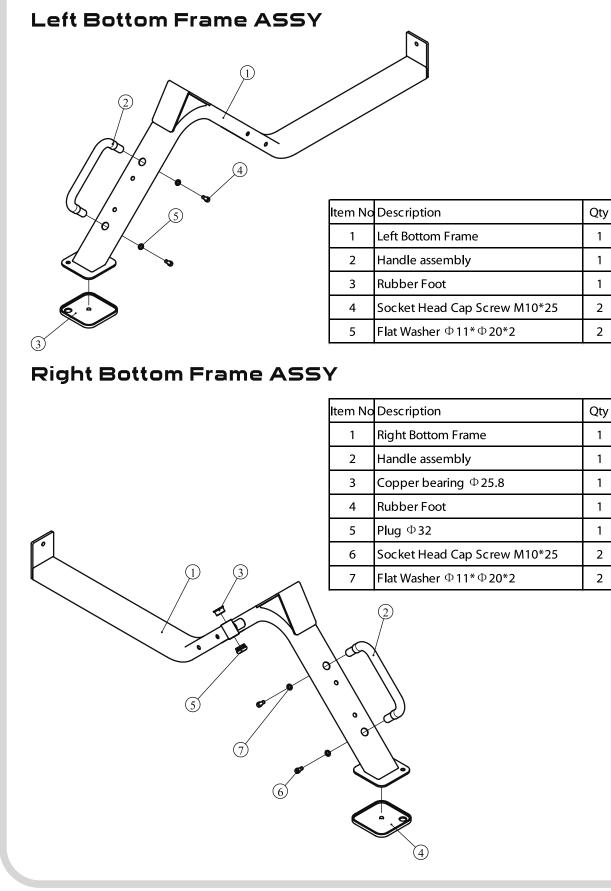

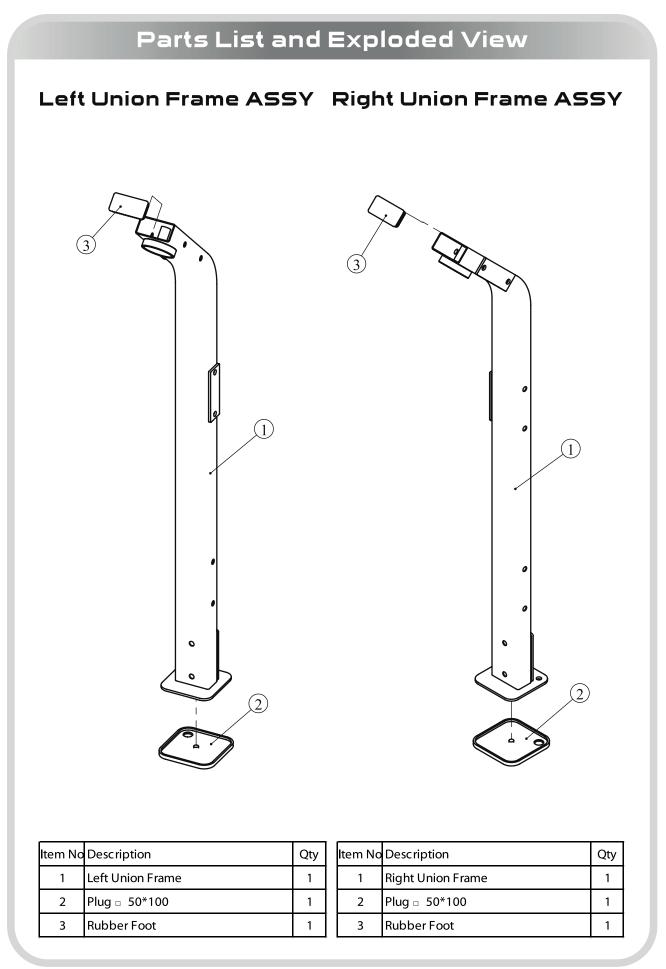


Swing frame ASSY

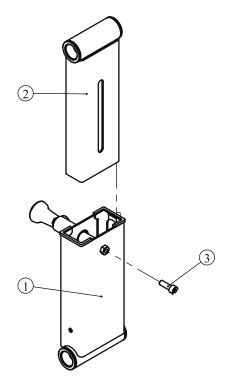


ltem No	Item No Description	
1	Swing frame assembly	1
2 Flex frame assembly		1
3	Socket Head Cap Screw M8*25	1

Seat Pad Frame ASSY

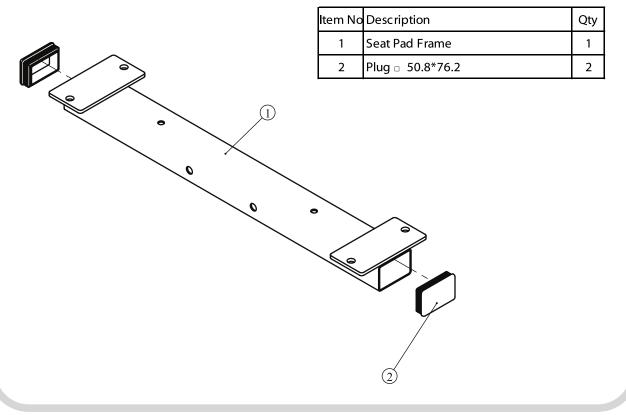


<u>-8</u>

Front Bottom Frame ASSY

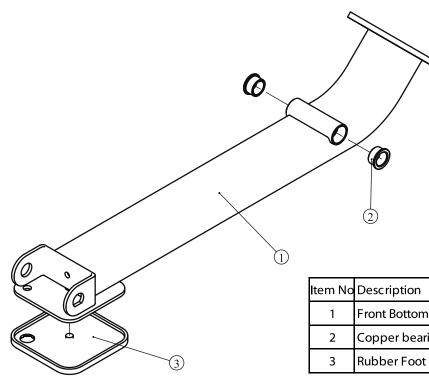


ltem No	Description	Qty
1	Front Bottom Frame	1
2	Copper bearing Φ 25.4	2
3	Rubber Foot	1

Swing Frame ASSY

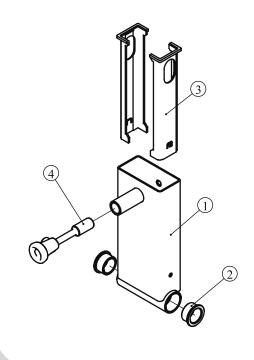


ltem No	tem No Description			
1	1 Swing frame			
2	Copper bearing Φ 25.4			
3	3 Long half set			
4	Long bolt assembly	1		

Flex Frame ASSY

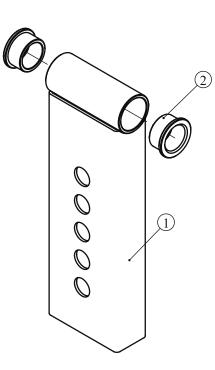


Item No Description		Description	Qty
	1	Flex frame	1
ĺ	2	Copper bearing Φ 25.4	2


Handle ASSY

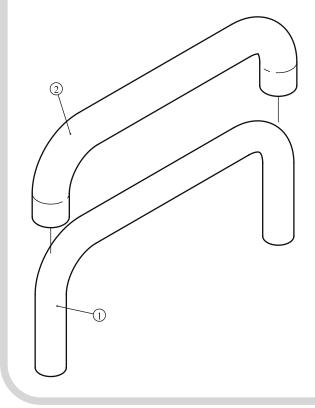


ltem No	Description	Qty
1	Handle	1
2	Put gloves	1

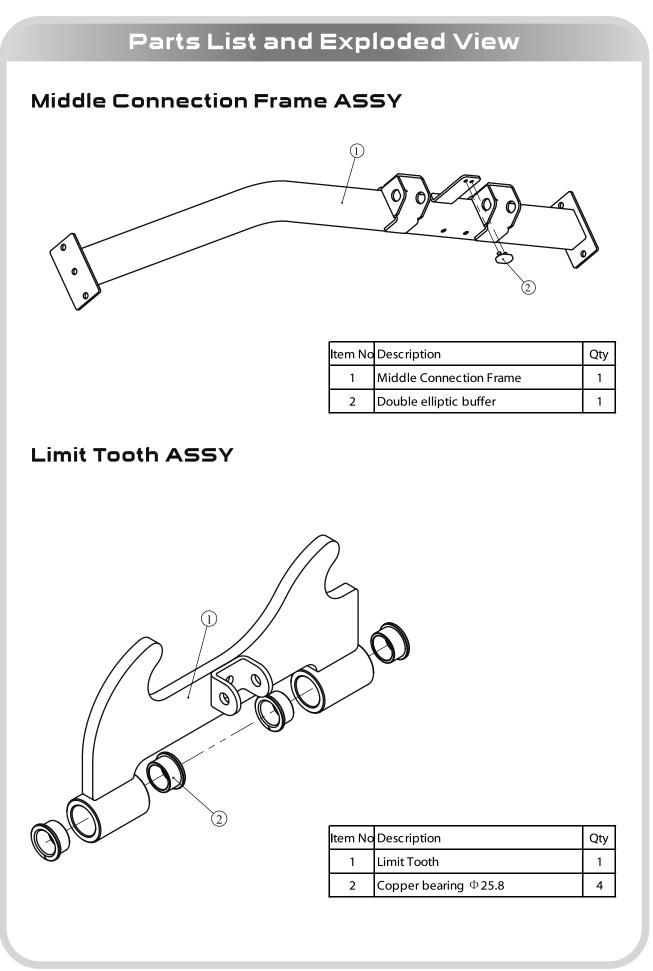

Link Frame ASSY

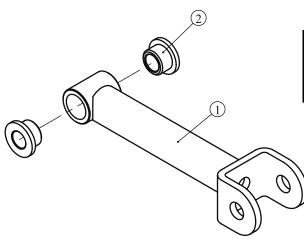


Item No Description			
1	Link Frame	1	
2	Copper bearing Φ 12.2	2	

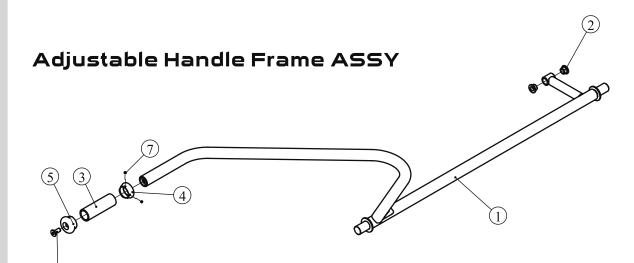


ltem No	tem No Description	
1	1 Adjustable Handle Frame	
2	Bush	2
3	Short gloves	1
4	4 Aluminum block ring	
5	5 Aluminum head	
6	Flat Head Cap Screw M10*25	1
7	Socket Set Screw 10-32*3.2	2

Adjustable Connection Frame ASSY

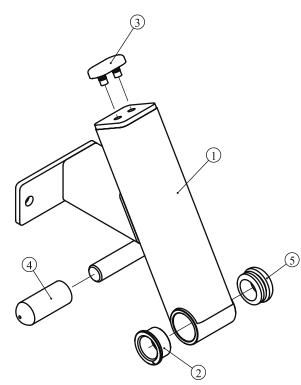


Item No Description		Qty
1	1 Adjustable Connection Frame	
2	Copper bearing Φ 25.8	1
3	Double elliptic buffer	1
4	Put gloves	1
5	Plug Φ 32	1

Right Bottom Frame ASSY

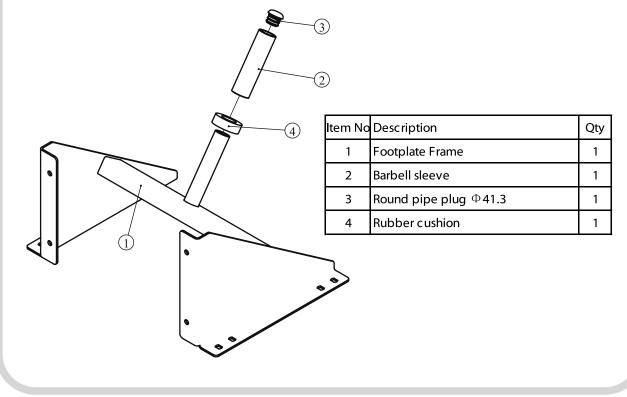


— 13 —

Lead Rail ASSY

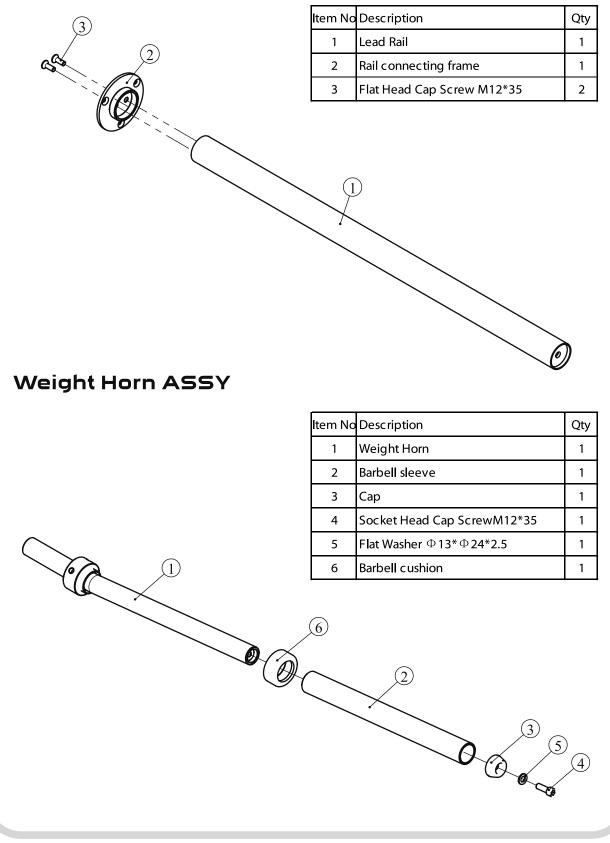


—14—

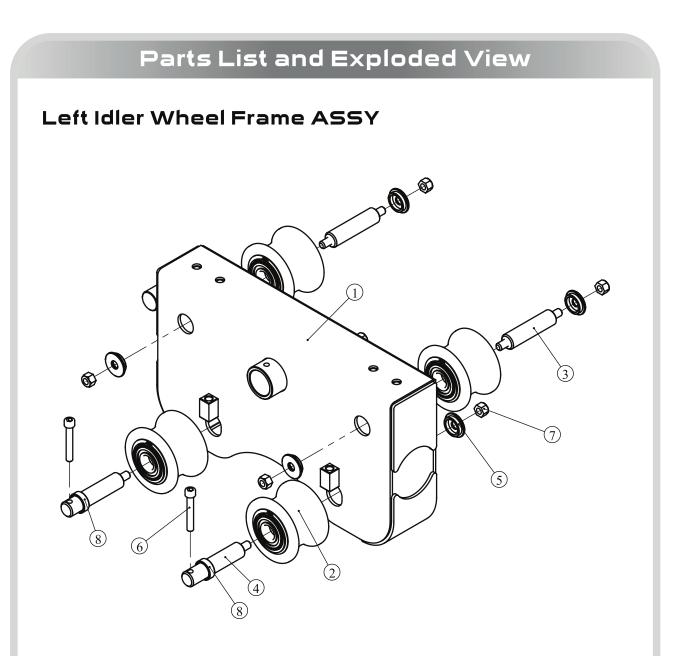

ltem No	o Description			
1	Left Idler Wheel Frame	1		
2	Roller	4		
3	Externally Threaded Sshaft			
4	Internal Threaded Shaft			
5	Bush			
6	Socket Head Cap ScrewM10*65	2		
7	7 Nylon Lock Nut M12			
8	Sleeve	2		

Right Idler Wheel Frame ASSY

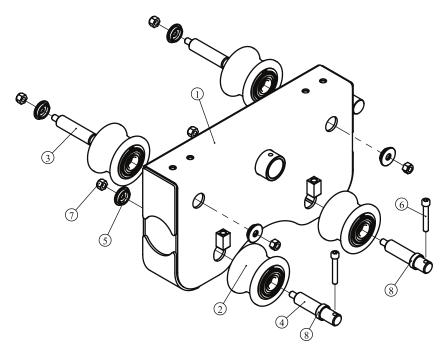

ltemNo.	Description	Qty	ltemNo.	Description	Qty
1	Right Idler Wheel Frame	1	5	Bush	6
2	Roller	4	6	Socket Head Cap ScrewM10*65	2
3	Externally Threaded Sshaft	2	7	Nylon Lock Nut M12	6
4	Internal Threaded Shaft	2	8	Sleeve	2


Weight Plate Storage ASSY

tem No	Description	Qty	
1	Weight Plate Storage	1	
2	Barbell sleeve	1	
3	Weight Horn Rubber Donut	1	
4	Pipe Plug	1	
	000		

—16—


Overall

ITEM NO.	Description	QTY	ITEM NO.	Description	QTY
1	Left Bottom Frame Assembly	1	32	End Cap	10
2	Right Bottom Frame Assembly	1	33	Flat Washer Φ 50.8* Φ 13.5*3	4
3	Left Union Frame Assembly	1	35	Socket Head Cap Screw M16*100	
4	Right Union Frame Assembly	1	36	Socket Head Cap Screw M12*135	
5	Upper Beam Frame	2	37	Socket Head Cap Screw M12*106	
6	Lower Beam Frame	1	38	Socket Head Cap Screw M12*85	
7	Seat Pad Frame Assembly	1	39	Socket Head Cap Screw M12*75	
8	Front Bottom Frame Assembly	1	40	Socket Head Cap Screw M12*70	
9	Swing Telescopic Frame Assembly	1	41	Socket Head Cap Screw M12*30	
10	Arm Pad Frame	1	42	Socket Head Cap Screw M10*100	
11	Middle Connection Frame Assembly	1	43	Socket Head Cap Screw M10*75	
12	Limit Tooth Assembly	1	44	Socket Head Cap Screw M10*25	
13	Link Frame Assembly	1	45	Socket Head Cap Screw M10*20	
14	Adjustable Handle Frame Assembly	1	46	Flat Head Cap Screw M12*30	
15	Adjustable Connection Frame Assembly	1	47	Flat Head Cap Screw M10*25	
16	Footplate Frame Assembly	1	48	Flat Head Cap Screw M10*20	
17	Deck Pedal	1	49	Socket Set ScrewM10*8	
18	Extend Frame	2	50	Nylon Lock Nut M12	
19	Lead Rail Assembly	2	51	Nylon Lock Nut M10	
20	Weight Horn Assembly	2	52	Flat Washer Φ 28* Φ 16.5*2	
21	Left Idler Wheel Frame Assembly	1	53	Flat Washer Φ 13* Φ 24*2.5	74
22	Right Idler Wheel Frame Assembly	1	54	Flat Washer Φ 11* Φ 20*2	11
23	Weight Plate Storage	4	55	Hex Key S=6	1
24	Head Pad	1	56	Hex Key S=8	1
25	Arm Pad	1	57	Hex Key S=10	1
26	Seat Pad	1	58	Hex Key S=12	1
27	Short Pivot Shaft	2	59	Hex Key S=5	1
28	Limit Shaft Φ 35	1	60	Socket Head Cap Screw M12*35	2
29	Large Rubber Bumper	2	61	Socket Head Cap Screw M10*30	2
30	Pivot Shaft Φ 25.4	2	62	Split Lock Washer Φ 10	2
31	Fixed Shaft Φ 25.4	1			

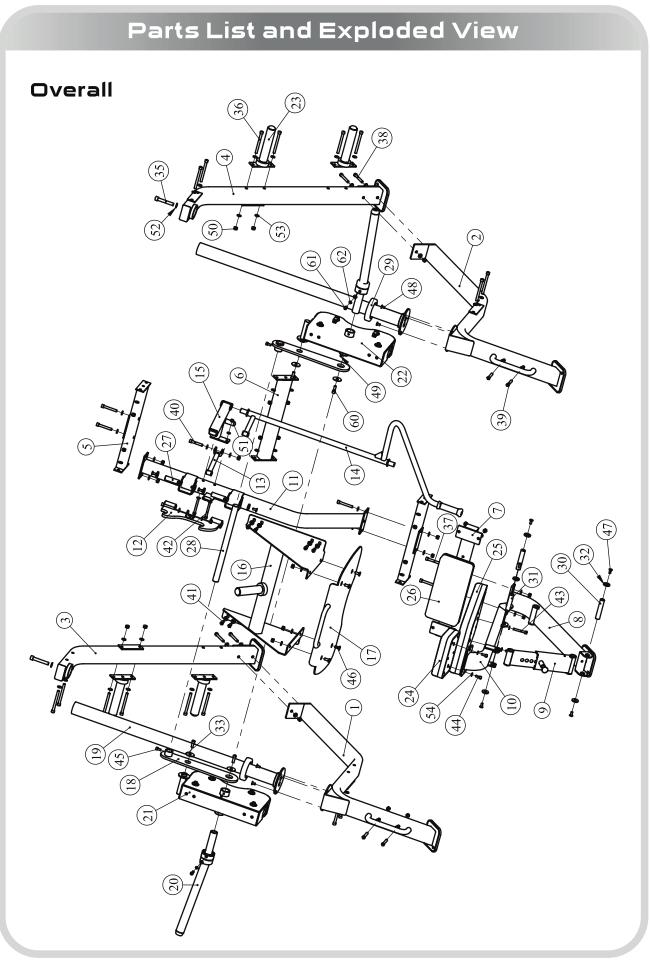

— 18 —

Measurement Guide

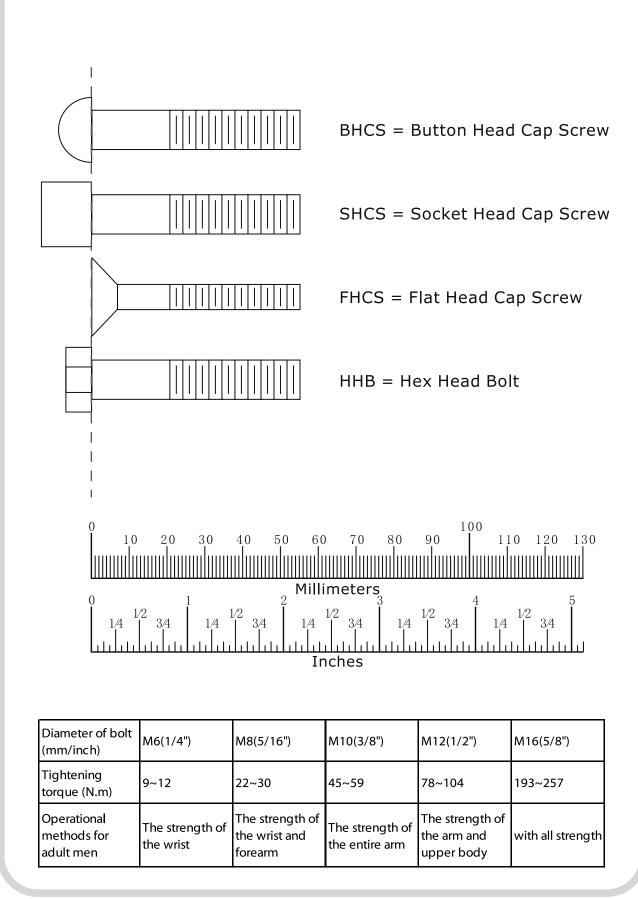

Assembly Instructions


Assembly of the equipment takes professional installers about 2 hours. If this is the first time you have assembled this type of equipment, plan to spend more time. It is strongly recommended to assemble the equipment by professional installers. You may find it quicker, safer, easier to assemble this equipment with the help of a friend, as some of components may be large, heavy or awkward to handle alone. It is important that you assemble your product in a clean, clear, uncluttered area. This will enable you to move around the product while you are fitting components and reduce the possibility of injury during assembly.

As with any assembled part, proper alignment and adjustment is critical. While tightening the fasteners, be sure to leave room for adjustments. Do not fully tighten the fasteners until instructed to do so. Be careful to assemble the components in the sequence presented in this guide.

STEP 1

The Left Bottom Frame Assembly (#1), Right Bottom Frame Assembly (#2) and one pieces of Upper Beam Frame (#5) connected together using:

- four M12*135 SHCS (#36)
- eight Φ13*Φ24*2.5 Flat Washers (#53)
- four M12 Nylon Lock Nuts (#50)

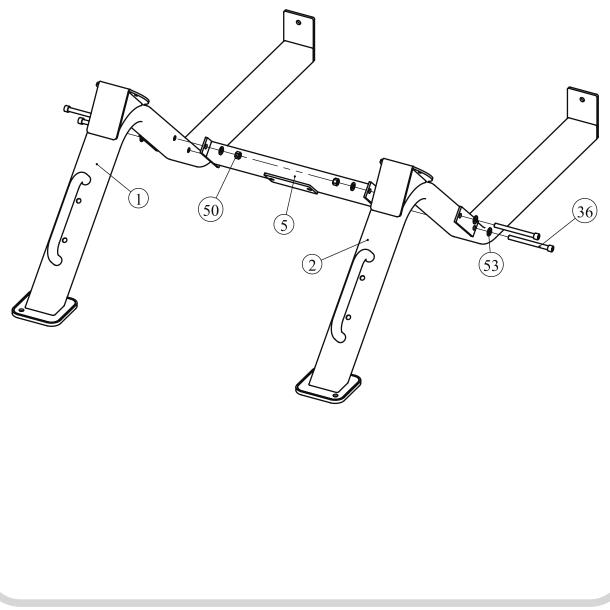


STEP 2

- 1. Two pieces of Lead Rail (#19) and Left Bottom Frame Assembly (#1), Right Bottom Frame Assembly (#2) connected together using:
 - six M10*20 FHCS (#48)
- 2. Two Large Rubber Bumper (#29), Left Idler Wheel Frame Assembly (#21), Right Idler Wheel Frame Assembly (#22) Wear into the two pieces of Lead Rail (#19).

Note:

1. Two people will be needed to complete this step safely.

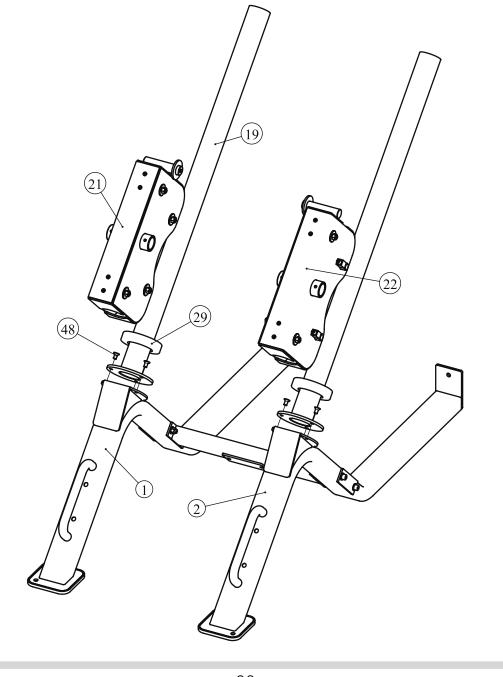

STEP 3

- 1. The Left Union Frame Assembly (#3), Right Union Frame Assembly (#4) and Left Bottom Frame Assembly (#1), Right Bottom Frame Assembly (#2), Lead Rail (#19) connected together using:
 - two M16*100 SHCS (#35)
 - four M12*85 SHCS (#38)
 - two Φ28*Φ16.5*2 Flat Washers (#52)
 - six Φ13*Φ24*2.5 Flat Washers (#53)
 - two M12 Nylon Lock Nuts (#50)
- 2. The Left Union Frame Assembly (#3), Right Union Frame Assembly (#4) and Lower Beam Frame (#6), four pieces of Weight Plate Storage (#23) connected together using:
 - eight M12*135 SHCS (#36)
 - sixteen Φ13*Φ24*2.5 Flat Washers (#53)
 - eight M12 Nylon Lock Nuts (#50)


Note: Hand tighten bolts and Nylon Lock nuts until machine is fully assembled.


STEP 4

- 1. The Middle Connection Frame assembly (#11) and two pieces of Upper Beam Frame (#5) connected together, then one pieces of Upper Beam Frame (#5) and Left Union Frame Assembly (#3), Right Union Frame Assembly (#4) connected together using:
 - four M12*135 SHCS (#36)
 - four M12*85 SHCS (#38)
 - sixteen Φ13*Φ24*2.5 Flat Washers (#53)
 - eight M12 Nylon Lock Nuts (#50)

Note: Two people will be needed to complete this step safely.


- 2. The Limit Tooth Assembly (#12) and Middle Connection Frame assembly (#11) connected together using:
 - two Φ25.4*87 Short Pivot Shaft (#27)
 - four Φ38*6 End Cap (#32)
 - four M10*25 FHCS (#47)

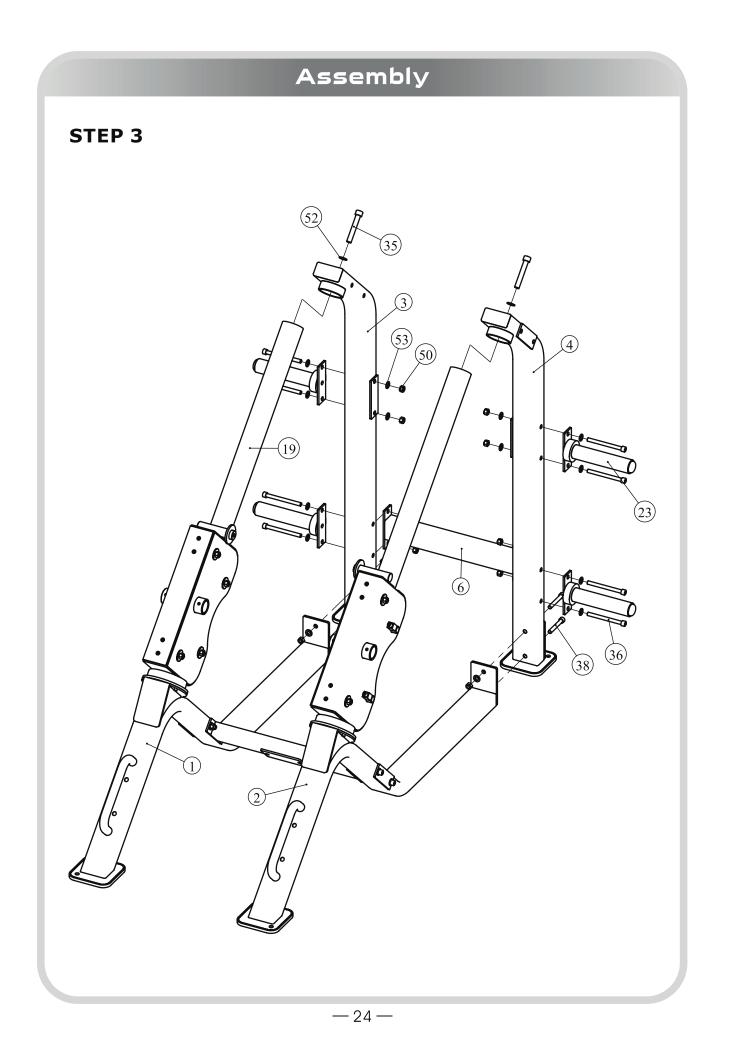

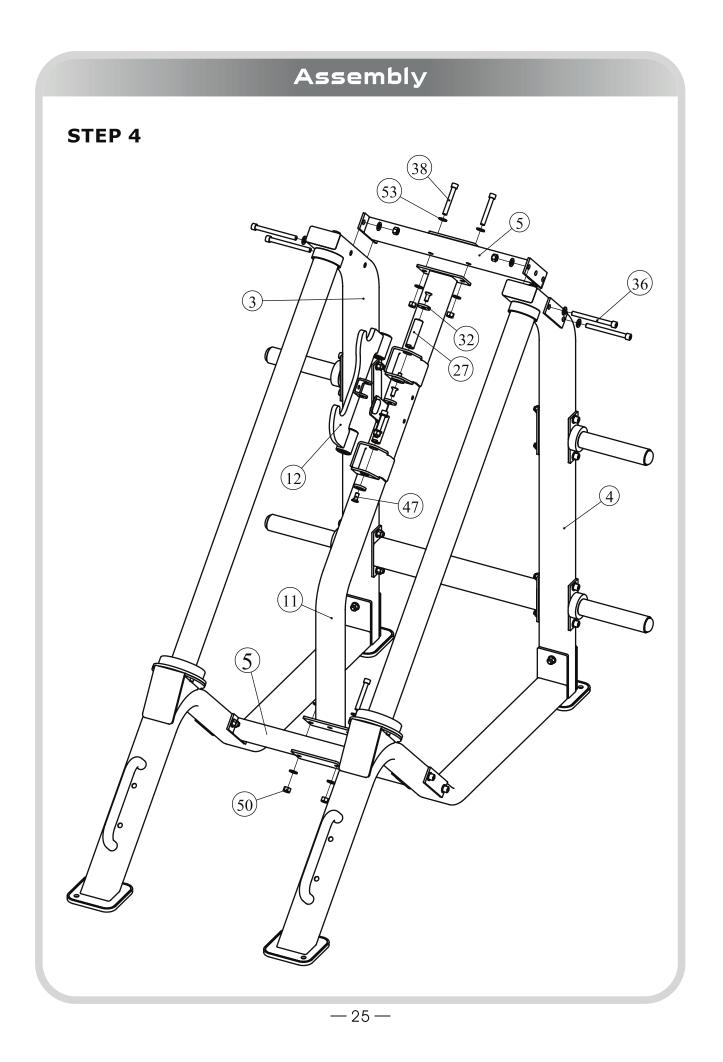

STEP 5

- 1. The Adjustable Handle Frame Assembly (#14) and Right Bottom Frame Assembly (#2) Adjustable Connection Frame Assembly (#15) connected together, then the Adjustable Connection Frame Assembly (#15) and Middle Connection Frame assembly (#11) connected together using:
 - two M10*100 SHCS (#42)
 - three Φ11*Φ20*2 Flat Washers (#54)
 - one M10 Nylon Lock Nuts (#51)
- 2. The Link Frame Assembly (#13) and Limit Tooth Assembly (#12), Adjustable Handle Frame Assembly (#14) connected together. Using:
 - two M12*70 SHCS (#40)
 - four Φ13*Φ24*2.5 Flat Washers (#53)
 - two M12 Nylon Lock Nuts (#50)

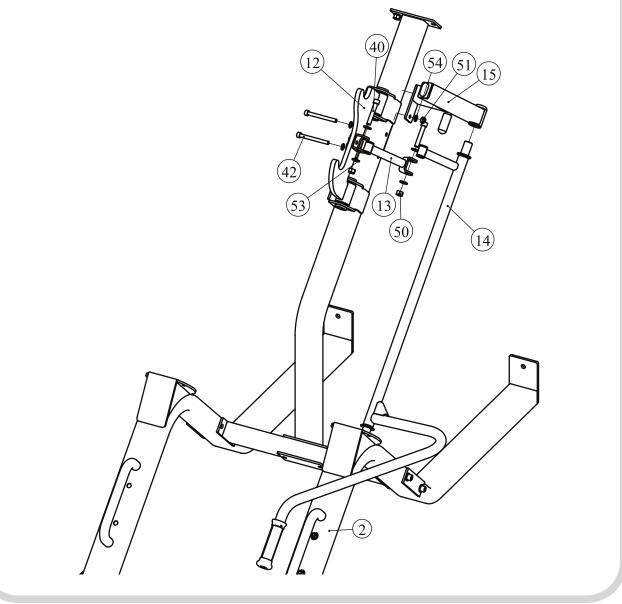

STEP 6


1. Two pieces of Weight Horn assembly (#20) and Left Idler Wheel Frame Assembly (#21), Right Idler Wheel Frame Assembly (#22) connected together using:

- two M10*8 Socket Set Screw (#49)
- two M10*30 SHCS (#61)
- two Φ10 Split Lock Washer (#62)
- two Φ11*Φ20*2 Flat Washers (#54)

2. Two pieces of Extend Frame (#18) and Left Idler Wheel Frame Assembly (#21), Right Idler Wheel Frame Assembly (#22) connected together using:

- two M12*30 SHCS (#41)
- two M12*35 SHCS (#60)
- four Φ50.8*Φ13.5*3 Flat Washers (#33)
- 3. The Limit shaft Φ 35 (#28) and two pieces of Extend Frame (#18) connected together using:
 - two M10*20 SHCS (#45)

NOTE: Attention the angle of Weight Horn Assembly (#20) as shown. Tighten all the hardware.

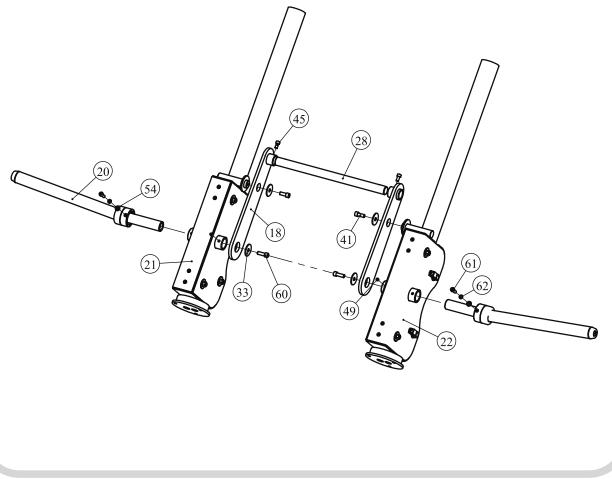


STEP 7

1. The Footplate Frame Assembly (#16) and Left Idler Wheel Frame Assembly (#21), Right Idler Wheel Frame Assembly (#22) connected together. Using:

- eight M12*30 SHCS (#41) •
- eight Φ13*Φ24*2.5 Flat Washers (#53) •

2. The Deck Pedal (#17) and Footplate Frame Assembly (#16) connected together. Using:

- four M12*30 FHCS (#46) •
- four Φ13*Φ24*2.5 Flat Washers (#53)
- four M12 Nylon Lock Nuts (#50)

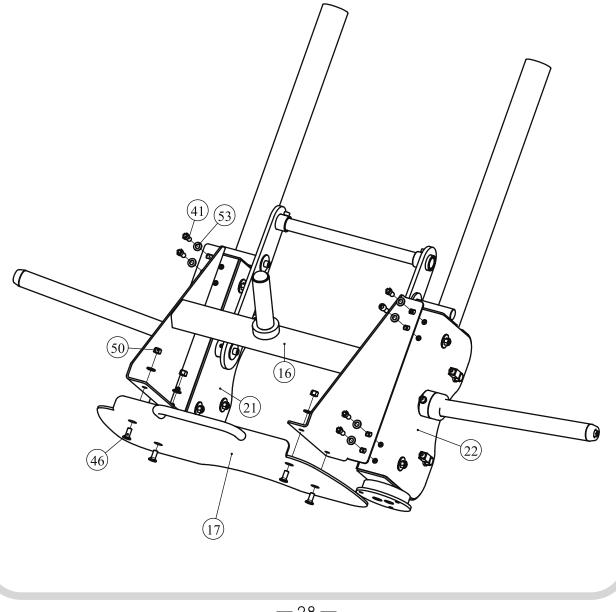


STEP 8

1. The Seat Pad Frame Assembly (#7) and Left Bottom Frame Assembly (#1), Right Bottom Frame Assembly (#2) connected together using:

- four M12*75 SHCS (#39)
- eight Φ13*Φ24*2.5 Flat Washers (#53)
- four M12 Nylon Lock Nuts (#50)

2. The Front Bottom Frame Assembly (#8) and Seat Pad Frame Assembly (#7) connected together using:


- two M12*105 SHCS (#37)
- four Φ13*Φ24*2.5 Flat Washers (#53)
- two M12 Nylon Lock Nuts (#50)

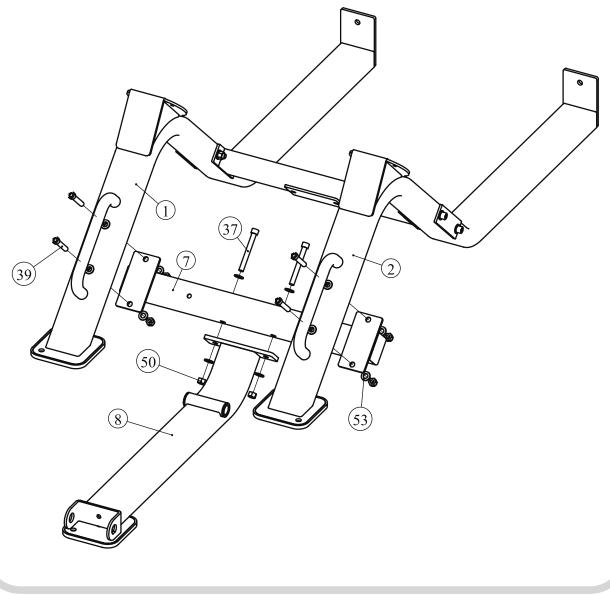

STEP 9

The Swing Telescopic Frame Assembly (#9), Arm Pad Frame (#10) and Front Bottom Frame Assembly (#8) connected together using:

- two Φ25.4*131 Pivot Shaft (#30)
- one Φ25.4*109 Fixed Shaft (#31)
- six Φ38*6 End Cap (#32)
- six M10*25 FHCS (#47)

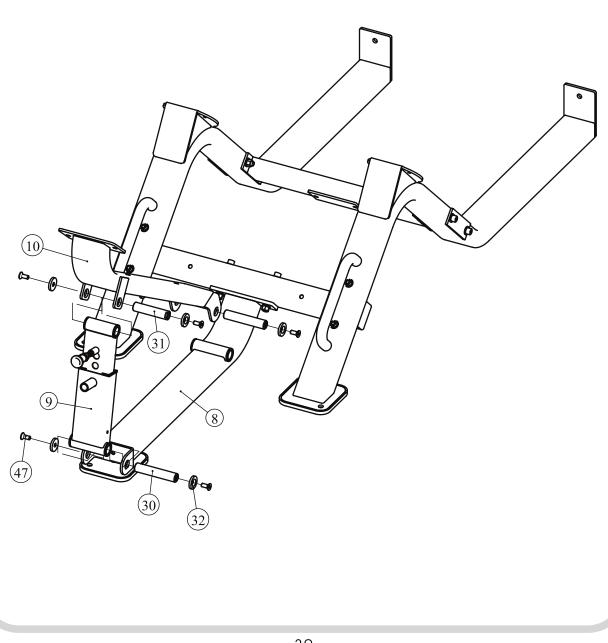


STEP 10

The Head Pad (#24), Arm Pad (#25), Seat Pad (#26) and Arm Pad Frame (#10), Seat Pad Frame Assembly (#7) connected together. Using:

- four M10*75 SHCS (#43)
- two M10*25 SHCS (#44)
- six Φ11*Φ20*2 Flat Washers (#54)

Note: Tighten all bolts and nuts before continuing.

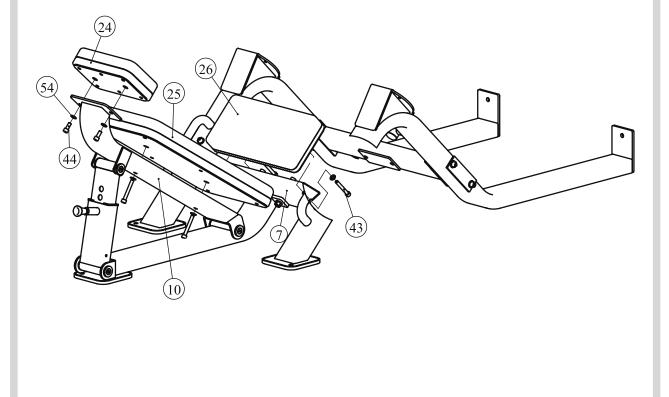


Adjust Instructions and Exercise Instructions

Exercise Instructions

- 1. Select an appropriate weight.
- 2. Seated and push footplate forward then pull the Adjustable Handle right.
- 3. Push footplate forward until legs almost straight.
- 4. Pause slightly then slowly return to the starting position.
- 5. Before finished, pull Adjustable Handle back while legs straight.

Weight Plate Installation Requirements

- 1. Please use Olympic Weight Plate which hole is greater than Φ 50mm and external diameter is less than Φ 500mm.
- 2. The total weight can not be greater than 150kg.
- 3. This equipment does not contains Weight Plate.

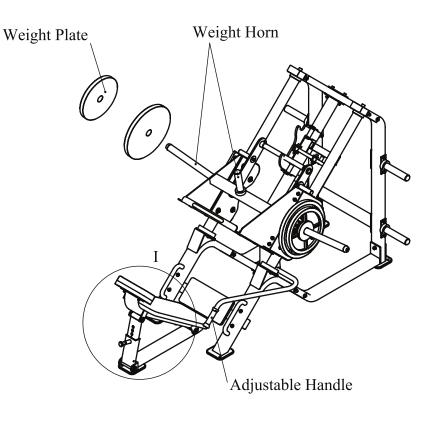


Adjust Instructions and Exercise Instructions

Head & Back Pad adjustment


1. Pull the Pull Pin and adjust pads to desired position.

2. Make sure the Pull Pin gets into the hole completely.

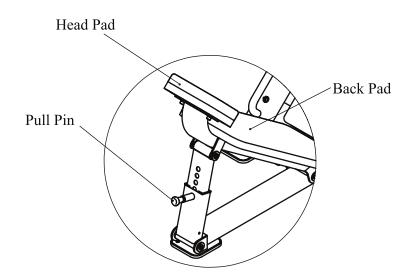

Wheel Adjustment

1. Adjust the Adjust Screws with Hex Key so that Wheels can be close to Guide Rails. 2. Tighten the Nylon Nuts.

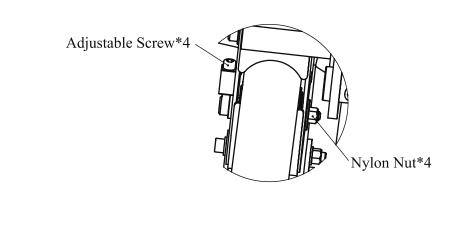

Maintenance Schedule

ROUTINE	COMMERCIAL MAINTENANCE	HOME MAINTENANCE	LATEST DATE ENTRY						
Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins	DAILY	WEEKLY							
Clean; Upholstery	DAILY	WEEKLY							
Inspect; Cables or Belts and their tension	DAILY	WEEKLY							
Inspect; Accessory Bars, and Handles	WEEKLY	3 MONTHS							
Inspect; All Decals	WEEKLY	3 MONTHS							
Inspect; All Nuts and Bolts, Tighten if needed	WEEKLY	3 MONTHS							
Inspect; Anti-Skid Surface	WEEKLY	3 MONTHS							
Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Superlube)	MONTHLY	3 MONTHS							
Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearing	MONTHLY	3 MONTHS							
Clean and Wax; All Glossy Finishes	6 MONTHS	YEARLY							
Repack with Grease; Linear Bearings	6 MONTHS	YEARLY							
Replace; Cables, Belts and Connecting Parts	YEARLY	3 YEARS							

Your equipment comes with a commercial maintenance decal. For personal, in home use, please follow the home maintenance schedule listed above.

Links, Pull-Pins, Snap Hooks, Swivels, Weight Stack Pins:

* Check all pieces for signs of visible wear or damage.

- * Check springs in snap hooks and pull-pins for proper tension and alignment.
- * If the spring sticks or has lost its rigidity, replace it immediately.

Upholstery:

- * To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be wiped down with a damp cloth after every workout.
- * Periodically take the time to use a mild soap or an approved vinyl upholstery cleaner to deter the onset of cracking or drying. Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.
- * Replace ripped or warn upholstery immediately.
- * Keep sharp or pointed objects clear of all upholstery.

Decals:

* Inspect and familiarize yourself with any safety warnings or other user information posted on each decal.

Nuts and Bolts:

- * Inspect all nuts and bolts for any loosening and tighten if needed.
- * Go through a re-tightening sequence periodically to ensure that all hardware is tensioned proper.

Anti-Skid Surfaces:

* These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.

Belts and Cables:

- * We uses only high quality belt, and mil-spec cables.
- * Visually inspect the belts and cables for fraying, cracking, peeling or discoloration.
- * While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.
- * Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables have been replaced.

Belt and Cable Tension:

- * Referring to the Owners Manual, when belts or cables are used check all bolts attachments to be sure they are properly attached.
- * Check slack in cables and re-adjust cable tension if needed.

Seat Sleeves, Guide Rods:

- * Wipe down adjusting tubes with a dust free rag before applying lubricant.
- * Lubricate seat sleeves and Guide Rods with a Silicon or Teflon based lubricant spray.

Linear Bearings:

* Referring to the Owners Manual carefully disassemble the bearing from its housing and place a finger full of light grease (lithium, super lube, etc.) into the inside of the bearing. Using your finger, press the grease into the ball-bearings and their tracks. repeat until the ball-bearing tracks are full of grease. Insert the shaft back into the bearing and wipe off excess grease.

PLEASE KEEP THIS FOR YOUR RECORDS

Weight Training Tips

Use this manual to guide you through the basic exercises you can perform on your equipment. To gain maximum results and avoid possible injury, consult a fitness professional to develop your complete exercise program.

Always consult your physician before starting any exercise program.

To be successful in your exercise program, it is important to develop an understanding of the basic principles of strength training. Now that you have your equipment, it is only natural that you want to get started immediately. First, determine a set of realistic goals and objectives for yourself. By deciding on an exercise plan that is right for you prior to starting, you will contribute significantly to your success.

Warm up properly before engaging in weight resistance training. Stretching, yoga, jogging, calisthenics or other cardiovascular exercise can help prepare your body for the heavier workload of lifting weights.

Learn how to perform the exercise correctly before using heavy weight. Correct form is important to avoid injury and to ensure that you work the proper muscle groups.

Know your limitations. If you are new to weight training or are embarking on an exercise regimen after a long layoff, start slowly and build foundational strength over a longer period of time.

Pay attention to your breathing. Exhale when you exert is a general rule of thumb. Never hold your breath.

