


Assembly and Operating Instructions







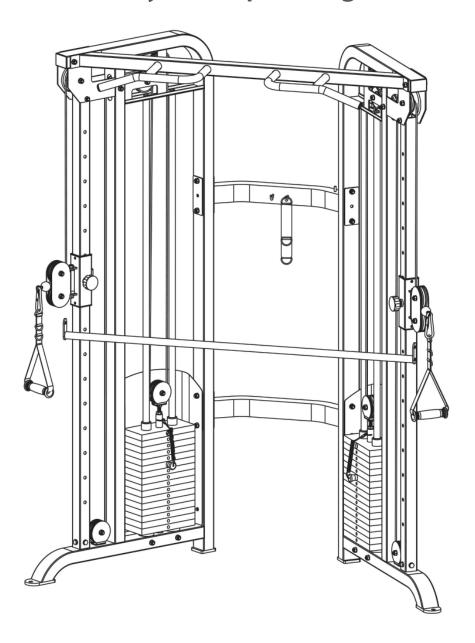

TFCF82072.01.01

Art. No. TF-CF820_72 / TF-CF820_95

Content

GENERAL INFORMATION	7
Technical Data	7
Personal Safety	8
Set-Up Place	9
ASSEMBLY	10
General Instructions	10
Scope of Delivery	10
Assembly	12
STORAGE AND TRANSPORT	22
General Instructions	22
TROUBLESHOOTING, CARE AND MAINTENANCE	23
General Instructions	23
Faults and Fault Diagnosis	23
Maintenance and Inspection Calendar	24
DISPOSAL	24
RECOMMENDED ACCESSORIES	25
ORDERING SPARE PARTS	26
Serial Number and Model Name	26
Parts List	27
Parts List: Weight Stack Upgrade	27
Exploded Drawing	28
WARRANTY	29
CONTACT	31
	Technical Data Personal Safety Set-Up Place ASSEMBLY General Instructions Scope of Delivery Assembly STORAGE AND TRANSPORT General Instructions TROUBLESHOOTING, CARE AND MAINTENANCE General Instructions Faults and Fault Diagnosis Maintenance and Inspection Calendar DISPOSAL RECOMMENDED ACCESSORIES ORDERING SPARE PARTS Serial Number and Model Name Parts List Parts List: Weight Stack Upgrade Exploded Drawing

Dear customer,

Thank you for choosing quality training equipment from the TAURUS brand. Taurus offers sports and fitness equipment for home users with high demands on quality, functionality and longevity. Also, Taurus is a well-known and experienced brand for equipping professional rooms for fitness studios and business customers. The focus of Taurus fitness equipment is on what matters most in sports: maximum performance! Therefore, the devices are developed in close consultation with athletes and sports scientists. Because athletes know best what makes perfect fitness equipment.

Further information can be found at www.taurus-fitness.com.

Intended Use

The equipment may only be used for its intended purpose.

The equipment is suitable for home use and semi-professional use (e.g. hospitals, clubs, hotels, schools, etc.). The equipment is not suitable for commercial or professional use (e.g. fitness studio).

Disclaimer



©Taurus® is a registered brand of the company Sport-Tiedje GmbH. All rights reserved. Any use of this trademark without the explicit written permission of Sport-Tiedje is prohibited.

Product and manual are subject to change. Technical data can be changed without advance notice.

ABOUT THIS MANUAL

Please carefully read the entire manual before installation and first use. The manual will help you to quickly set up the system and explains how to safely use it. Make sure that all persons exercising with the equipment (especially children and persons with physical, sensory, mental or motor disabilities) are informed about this manual and its contents in advance. In case of doubt, responsible persons must supervise the use of the equipment.

Due to ongoing changes and software optimisations, the manual may have to be updated. If you notice any discrepancies during assembly or use, please refer to the manual uploaded to the webshop. The latest manual is always available there.

This equipment has been manufactured according to the latest safety knowledge. As far as possible, potential safety hazards which could cause injury have been eliminated. Make sure to carefully follow

the instructions and that all parts are securely in place. If required, read through the instructions again to correct any mistakes.

Please pay close attention to the safety and maintenance instructions given here. The contract partner cannot be held liable for damage to health, accidents or damage to the equipment when it is not used in accordance with these instructions.

The following safety instructions may appear in this manual:

► ATTENTION

This notice indicates potentially hazardous situations which, if not avoided, may result in property damage.

CAUTION

This notice indicates potentially hazardous situations which, if not avoided, may result in slight or minor injuries!

↑ WARNING

This notice indicates potentially hazardous situations which, if not avoided, may result in death or serious injuries!

↑ DANGER

This notice indicates potentially hazardous situations which, if not avoided, will result in death or serious injuries!

(i) NOTICE

This notice indicates further useful information.

Retain these instructions in a safe place for future reference, maintenance or when ordering replacement parts.

1.1 Technical Data

Weight and Dimensions

TF-CF820_72

Packaging dimensions (L x W x H) and article weight (gross, incl. packaging) approx.:

Box 1:	216 cm x 97 cm x 17 cm	97 kg
Box 2:	146 cm x 45 cm x 12 cm	30 kg
Box 3 (6x):	27.5 cm x 14.5 cm x 11.5 cm	23 kg

Set-up dimensions (L x W x H) approx.: 168.1 cm x 80.9 cm x 212 cm

Article weight (net, excl. packaging) approx.: 256 kg

TF-CF820_95

Packaging dimensions (L x W x H) and article weight (gross, incl. packaging) approx.:

Box 1:	216 cm x 97 cm x 17 cm	97 kg
Box 2:	146 cm x 45 cm x 12 cm	30 kg
Box 3 (8x):	27.5 cm x 14.5 cm x 11.5 cm	23 kg

Set-up dimensions (L x W x H) approx. 168.1 cm x 80.9 cm x 212 cm

Article weight (net, excl. packaging) approx.: 301 kg

Weight Stack

Quantity weight stack: 2
Cables: 2

Cable width:0,48 cmPulley diameter:90 cmTransmission ratio:1:2

TF-CF820_72

Weight of weight stack:

Weight plates:

72 kg per weight stack

15 + 1 per weight stack

Cable length: 732 cm

TF-CF820_95

Weight of weight stack:

Weight plates:

95 kg per weight stack

20 + 1 per weight stack

Cable length: 709 cm

Maximum load: 300 kg Maximum user weight (pull-up): 120 kg

Class:

1.2 Personal Safety

M DANGER

- + Before you start using the equipment, you should consult your physician that this type of exercise is suitable for you from a health perspective. Particularly affected are persons who: have a hereditary disposition to high blood pressure or heart disease, are over the age of 45, smoke, have high cholesterol values, are overweight and/or have not exercised regularly in the past year. If you are under medical treatment that affects your heart rate, medical advice is absolutely essential.
- + Note that excessive training can seriously endanger your health. Please also note that heart rate monitoring systems can be inaccurate. If you notice any signs of weakness, nausea, dizziness, pain, shortness of breath, or other abnormal symptoms, stop exercising immediately and seek advice from your doctor if necessary.
- + The owner must communicate all warnings and instructions to the user.

↑ WARNING

- + This equipment may not be used by children under the age of 14.
- + Children should not be allowed unsupervised access to the equipment.
- + Persons with disabilities must have a medical license and must be under strict observation when using the equipment.
- + The equipment is strictly for use by one person at a time.
- + If your equipment provides a safety key, the clip of the safety key must be attached to your clothing before starting your training. In the event of a fall, the EMERGENCY STOP of the equipment can be initiated.
- + Keep your hands, feet and other body parts, hair, clothing, jewellery and other objects well clear of moving parts.
- + During use, wear suitable sports clothing rather than loose or baggy clothing. When wearing sports shoes, make sure they have suitable soles, preferably made of rubber or other non-slip materials. Shoes with heels, leather soles, studs or spikes are unsuitable. Never exercise barefoot.
- + Always start each workout with a light warm-up and end with a cool-down phase.
- + Using the machine as a support during stretching exercises or attaching resistance bands, ropes or other accessories to it, may cause injuries.

CAUTION

- + If your equipment needs to be connected to the power supply with a mains cable, make sure that the cable is not a potential tripping hazard.
- + Make sure that nobody is within the range of motion of the equipment during training so as not to endanger you or other persons.
- + Be aware that if adjustment devices are left protruding, they may impede the user's movement.

► ATTENTION

+ Do not insert any objects of any kind into the openings of the device.

1.3 Set-Up Place

WARNING


+ Do not place the equipment in main corridors or escape routes.

CAUTION

- + Choose a location in which to place the equipment such that there is enough free space/ clearance to the front, the rear and to the sides of the equipment.
- + The training room should be well ventilated during training and not be exposed to any draughts.
- + Choose the place in which to set up the equipment such that there is enough free space/ clearance to the front, the rear and to the sides of the equipment.
- + The free area in the direction from which the exercise equipment is accessed must be at least 0.6 m larger than the exercise area.
- + The set-up and mounting surface of the equipment should be flat, loadable and solid.
- + If your device is to be mounted on the wall/ceiling, make sure that you use the appropriate assembly material to avoid possible damages or personal injuries. The contractual partner accepts no liability for this.

ATTENTION

- + The device may only be used in one building, in sufficiently tempered and dry rooms (ambient temperatures between 10°C and 35°C). The equipment should not be used outdoors or in rooms with high humidity (over 70%) like swimming pools.
- + A floor protective mat/equipment underlay can help to protect high-quality floor coverings (parquet, laminate, cork, carpets) from dents and sweat and can help to level out slight unevenness.
- + For Class S and I equipment, the exercise equipment may only be used in areas where access, supervision and control are specifically regulated by the owner.

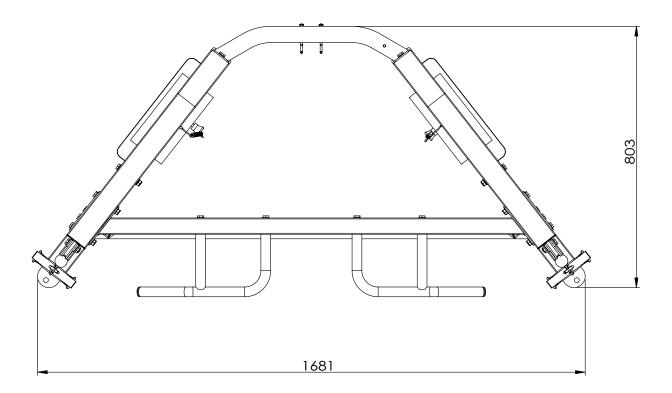

2.1 General Instructions

↑ DANGER

+ Do not leave any tools, packaging materials such as foils or small parts lying around, as otherwise there is a danger of suffocation for children. Keep children away from the equipment during assembly.

↑ WARNING

+ Pay attention to the instructions attached to the equipment in order to reduce the risk of injuries.

CAUTION

- + Ensure to have sufficient room for movement in each direction during assembly.
- + The assembly of the equipment must be carried out by at least two adults. If in doubt, seek the help of a third technically skilled person.

ATTENTION

+ To prevent damage to the equipment and the floor, assemble the equipment on a mat or packaging board.

NOTICE **(i)**

- + In order to make the assembly as simple as possible, some screws and nuts to be used can already be pre-assembled.
- + Ideally, assemble the equipment at its later set-up place.

2.2 Scope of Delivery

The scope of delivery consist of the following parts. At the beginning, check whether all parts and tools belonging to the device are included in the scope of delivery and whether damage has occurred. In the event of complaints, the contractual partner must be contacted directly.


CAUTION


If parts of the scope of delivery are missing or damaged, the assembly must not be carried out.


(i) NOTICE

This equipment is available with a lighter and a heavier weight stack. The part numbers for the resepective top weight plates with pre-installed weight selector and the cables differ depending on which version you have purchased. For the standard, lighter version, the top weight plate has the part number 11 and the cable has the part number 26. For the heavier version, the top weight plate has the part number 38 and the cable has the part number 40.

Content of box 1

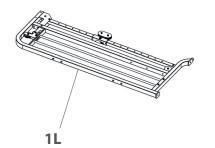

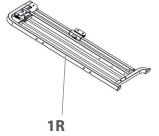


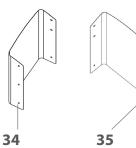



Part no.	Description	Qty.	Part no.	Description	Qty.
1L 1R	Main Upright Frame - Left Main Upright Frame - Right	1	34 35 36	Right Shield Left Shield Steel Plate	1 1 4

Content of box 2

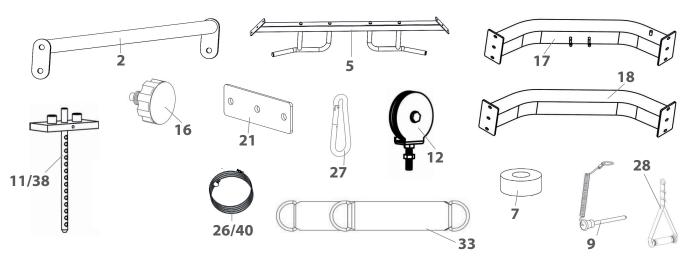

Part no.	Description	Qty.	Part no.	Description	Qty.
2	Squat Bar	1	17	Upper Cross Frame	1
5	Front Top Cross Frame	1	18	Lower Cross Frame	1
7	Rubber Bumper	4	21	Top Cross Frame Plate	2
9	Weight Select Pin	2	26/40	Cable	2
11/38	Top Weight Plate	2	27	Clip	2
12	Single Pulley Bracket	2	28	Strap Handle	2
16	Pop Pin	2	33	Ankle Strap	1

Content of box 3	
8—	

Part no.	Description	Qty.
8	Weight Stack Plate	5

2.3 Assembly

Before assembly, take a close look at the individual assembly steps shown and carry out the assembly in the order given.

(i) NOTICE


- + First loosely screw all parts together and check that they fit properly. Tighten the screws using the tool only when you are instructed to do so.
- + If you have difficulty recognising the graphics, we recommend that you open and/or download the PDF instructions stored in the webshop on your end device (e.g. smartphone, tablet or PC). There you have the option of zooming in closer.

Step 1: Assembly of the Main Upright Frames and Cross Frames

(i) NOTICE

Do not tighten the bolts and nuts completely yet.


- 1. Attach the upper cross frame (17) and two steel plates (36) to the main upright frames (1R&1L) with a total of four bolts (H10-13), eight washers (W10) and four nuts (M10).
- 2. Attach the lower cross frame (18) and two steel plates (36) to the main upright frames (1R & 1L) with a total of four bolts (H10-13), eight washers (W10) and four nuts (M10).
- 3. Attach the top cross frame (5) and two top cross frame plates (21) to the main upright frames (1R & 1L) with a total of four bolts (H10-17), eight washers (W10) and four nuts (N10).
- 4. Attach two pop pins (16) to the pre-installed left and right sliders (13 & 14).
- 5. Now tighten the bolts and nuts with the appropriate tools. Do not tighten the bolts and nuts from the lower cross frame (18).

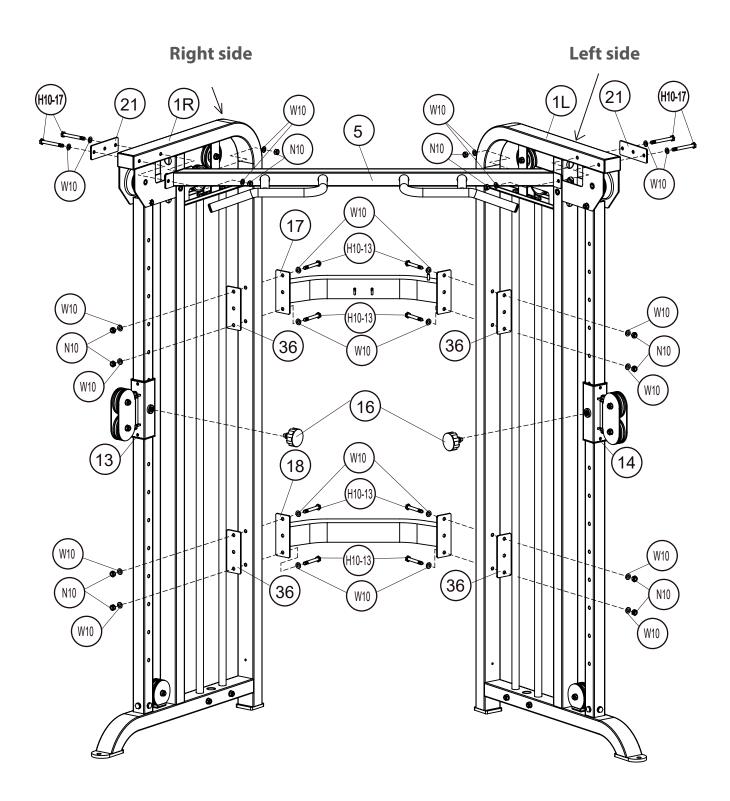

Step 2: Assembly of the Weight Stacks

(i) NOTICE

- + This cable machine is available with a lighter and a heavier weight stack. Depending on the weight stack, the part numbers for the top weight plate and the weight selector vary. For the lighter weight stack, the following is valid: top weight plate (11) and weight selector (10). For the heavier weight stack, the following is valid: top weight plate (38) and weight selector (39).
- + The drawing shows the assembly on the left side. Once the assembly is completed on the left side, the steps must be repeated on the right side as well.
- 1. Loosen the pre-installed bolts (H10-2) and washers (W10) from the top of the guide rods (6).
- 2. Slightly tilt the guide rods (6) like shown in the drawing.
- 3. Slide one rubber bumper (7) over each guide rod (6).
- 4. Carefully slide 15 weight plates (8) over the guide rods (6) one by one. Make sure the weight plates are correctly aligned with the hole facing the inside of the machine [lighter weight stack].
- 4.1. Carefully slide 20 weight plates (8) over the guide rods (6) one by one. Make sure the weight plates are correctly aligned with the hole facing the inside of the machine [heavier weight stack].
- 5. Carefully slide the top weight plate (11) over the guide rods (6), making sure the weight selector (10) goes through the centre hole of the weight plates (8) [lighter weight stack].
- 5.1. Carefully slide the top weight plate (38) over the guide rods (6), making sure the weight selector (39) goes through the centre hole of the weight plates (8) [heavier weight stack].
- 6. Place the ring of the weight select pin (9) around the top part of the weight selector (10/39).
- 7. Thread the single pulley bracket (12) at least 1/3 into the weight selector (10/39) and secure with the pre-installed lock nut.
- 8. Insert the weight select pin (9) into one of the selector holes.
- 9. Reattach the guide rods (6) to the top of the main upright frame (1) with the previously loosened bolts (H10-2) and washers (W10).
- 10. Repeat the steps 1 to 9 on the right side.

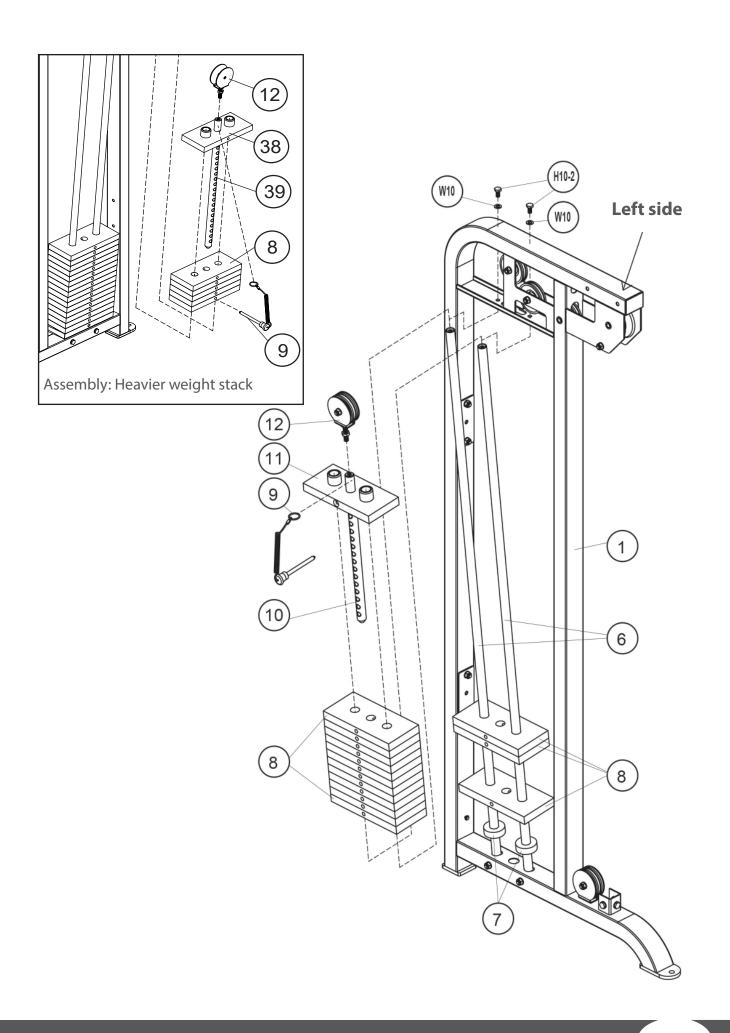


Step 3: Assembly of the Cables


ATTENTION

- + If you have the lighter weight stack, use the longer cables (26). If you have the heavier weight stack, use the shorter cables (40). The assembly is identical.
- + The cables should run along the inside of the main frames.

(i) NOTICE

- + The pulleys are pre-installed. For the proper assembly of the cables, you need to uninstall and reinstall the pulleys. Route the cables while simultaneously reinstalling the pulleys as you go. Do not fully tighten the bolts and nuts until the cables are fully installed.
- + The following steps show the assembly on the left side. The steps must be repeated on the right side as well.
- 1. Start by removing the pulley (P2) in the double pulley bracket (15).
- 2. Route the ball end of the cable (26 or 40) over the pulley (P1) and reattach the pulley (P2) to the double pulley bracket (15).
- 3. Route the cable (26 or 40) up and over the pulleys (P3 and P4).
- 4. Route the cable (26 or 40) down and under the pulley (P5).
- 5. Route the cable (26 or 40) up and over the pulleys (P6 and P7).
- 6. Route the cable (26 or 40) down and under the pulley (P8).
- 7. Thread the bolt end of the cable (26 or 40) at least 1/3 into the holder on the left slider (14) and secure with the preinstalled lock nut.
- 8. Tighten all bolts and nuts with the appropriate tools.
- 9. Attach the clip (27) and strap handle (28) to the ball end of the cable (26 or 40).
- 10. Repeat the steps 1 to 9 on the right side.

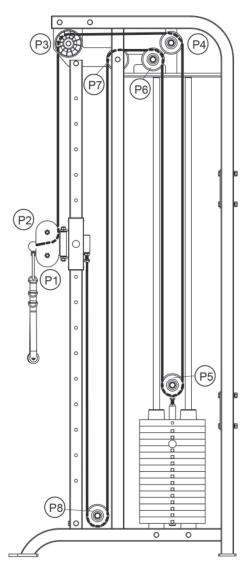

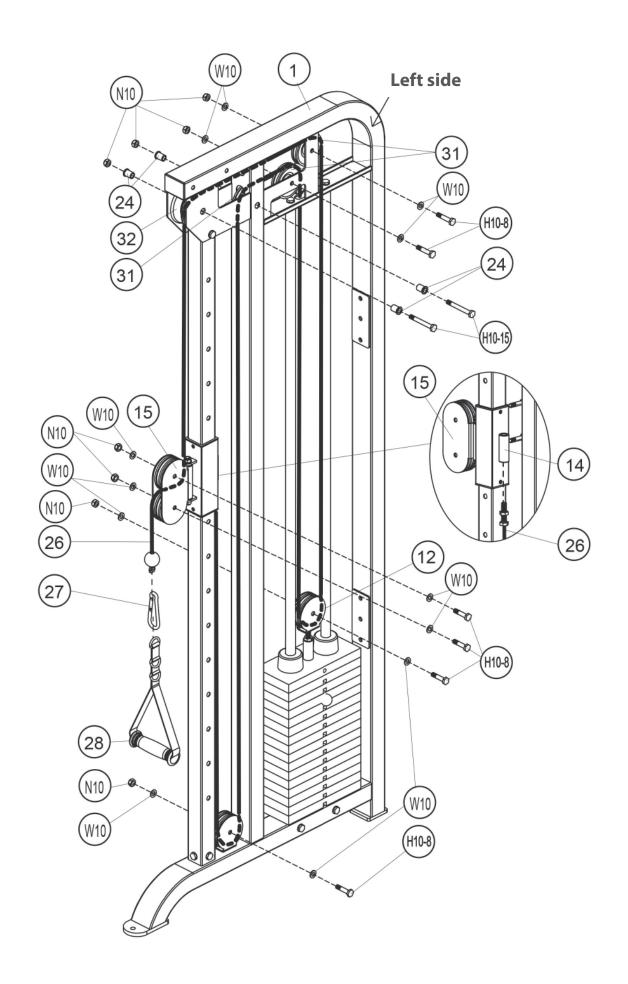

Step 4: Cable Adjustment

You can recognize the correct cable tension when the top weight plate rests very lightly on the weight stack. If the top weight plate is hanging in the air, the cable is too tight. If the cable is visibly slacking, it is too loose. If the cable is slacking or too tight, it needs adjustment. There are two points at which the cable can be adjusted.

↑ WARNING


The threaded ends must always be screwed in at least 1/3 of their length.

Option 1: Bolt End of the Cable at the Left/Right Slider

- Loosen the lock nut.
- 2. To loosen the cable, turn counterclockwise.
- 3. To tighten the cable, turn clockwise.
- 4. Tighten the lock nut.

Option 2: Bolt End of the Single Pulley Bracket

- If already attached, first remove the pulley as it will otherwise rotate when adjusting.
- 2. Loosen the lock nut.
- 3. To loosen the cable, turn counterclockwise.
- 4. To tighten the cable, turn clockwise.
- 5. Reattach the pulley.
- 6. Tighten the lock nut.

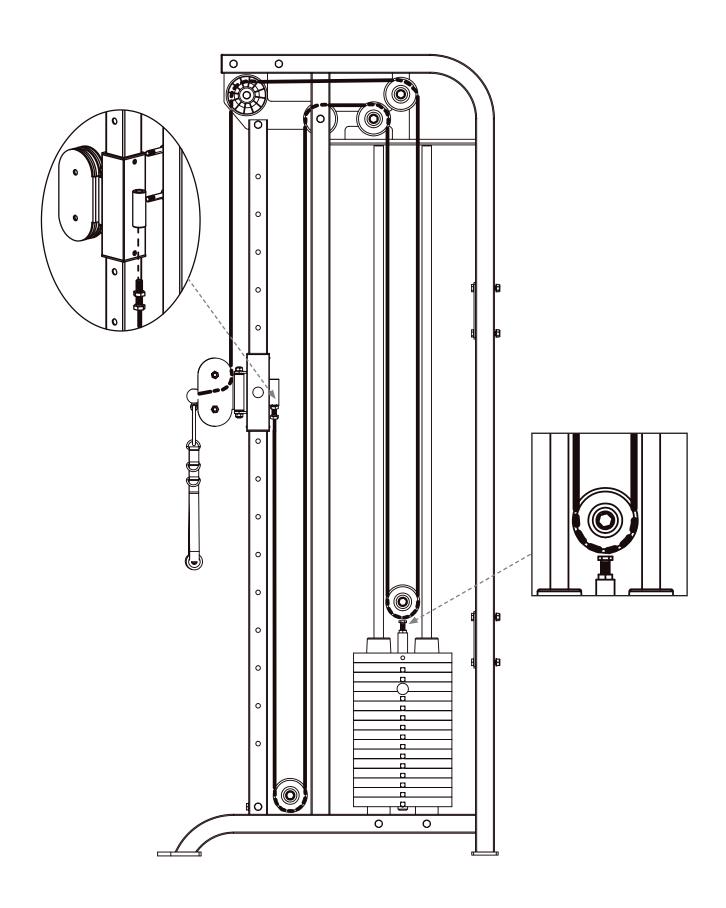

Step 5: Assembly of the Shields and Squat Bar

(i) NOTICE


It is recommended to perform the following steps on one main upright frame first and then continue on the other side. The following steps begin on the left side.

- 1. Loosen the two washers (W10) and nuts (N10) from the lower cross frame (18). Do not remove the bolts (H10-13) and two washers (W10) on the bolt side.
- 2. Attach the left shield (35) to the left main upright frame (1L) and lower cross frame (18) with the previously removed washers (W10) and nuts (N10).
- 3. Attach the left shield (35) to the left main upright frame (1L) with a total of four bolts (H6-1) and four washers (W6).
- 4. Repeat the steps 1 to 3 on the right side.
- 5. Tighten the bolts and nuts with the appropriate tools.

(i) NOTICE

The accessories such as the strap handles (28), ankle strap (33) and squat bar (2) can be used interchangeably.

6. Attach the squat bar (2) to the clips (27).

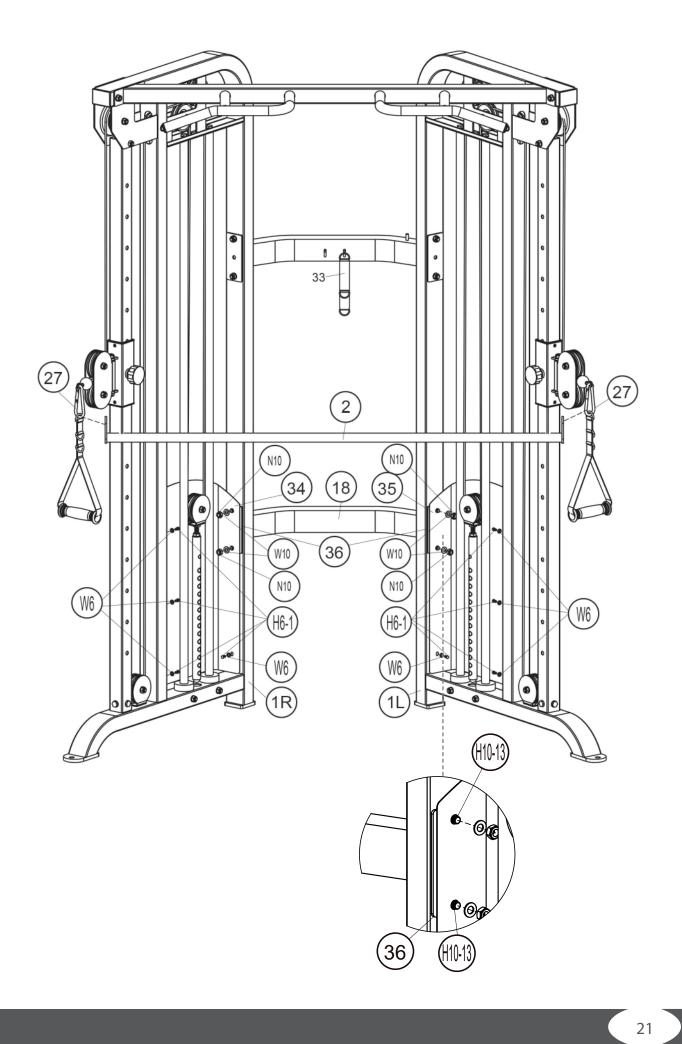

3.1 General Instructions

↑ WARNING

- + The storage location should be chosen so that improper use by third parties or children can be prevented.
- + If your equipment does not have transportation wheels, the equipment must be disassembled before transportation.

ATTENTION

+ Make sure that the equipment is protected from moisture, dust and dirt in the selected storage location. The storage location should be dry and well ventilated and have a constant ambient temperature between 10°C and 35°C.

4.1 General Instructions

WARNING

+ Do not make any improper changes to the equipment.

CAUTION

+ Damaged or worn components may affect your safety and the life of the equipment. Therefore, immediately replace damaged or worn components. In such a case, contact the contract partner. The equipment must not be used until it has been repaired. If necessary, use only original spare parts.

ATTENTION

+ In addition to the instructions and recommendations for maintenance and care given here, additional service and/or repair work may be necessary; this must only be carried out by authorised service technicians.

4.2 Faults and Fault Diagnosis

The equipment undergoes regular quality controls during production. Nevertheless, faults or malfunctions may occur. Frequently, individual parts are responsible for these disturbances, an exchange is usually sufficient. Please refer to the following overview for the most common errors and how to correct them. If the equipment still does not function properly, contact your contract partner.

Fault	Cause	Solution
Grinding noises	Cables or pulleys do not run smoothly or are damaged	 Visual inspection of the cable routing or the pulley guide If damaged, replace the defective part
Weight hanging in the air	Cable tensioned too tight	Readjust cable tension
Cable without tension	Cable too loose	+ Check cable routing+ Readjust cable tension
Squeaking & cracking noises	Screw connections loosened or too tight	+ Check or lubricate screw connections* + Check cable routing
Unit wobbles	+ Uneven ground + Loose screw connections	+ Align unit + Tighten screw connections
Heavy draught	+ Weight holders/guide rods too dry+ Faulty cable routing	+ Lubricate guide rods* + Check cable routing

^{*} With a grease-free silicone oil or silicone spray.

4.3 Maintenance and Inspection Calendar

To avoid damage from body sweat, the equipment must be cleaned with a damp towel (no solvents!) after each training session.

The following routine tasks must be performed at the specified intervals:

Part	Weekly	Monthly	Quarterly
Cables	С	I	
Screw connections		I	
Pulleys and cable routing		I	
Slide rails/Guide rods		I	
Legend: C = clean; I = inspect			

5 DISPOSAL

At the end of its operational life, this equipment cannot be disposed of in normal household waste. Instead, it must be disposed of via an recycling centre. Further information can be obtained from your local authority's recycling service.



The materials can be recycled as per their symbols. Through the reuse, recycling of materials or other forms of recovery of old equipment, you make an important contribution to the protection of the environment.

RECOMMENDED ACCESSORIES

To make your training experience even more efficient and pleasant, we recommend that you add suiting accessories to your fitness equipment. For training equipment like smith machines, weight benches or racks this could for example be a **floor mat**, which makes your fitness equipment stand more securely and also protects the floor from sweat but it could be also **additional weights**, **handles**, **foot straps** for leg exercises or **triceps ropes**. For some smith machines, there are also optional addons such as **leg presses** that make your workout even more intense and comprehensive.

Our range of accessories offers the highest quality and makes training even better. If you would like to find out more about compatible accessories, please go to the detail page of the product in our webshop (the easiest way is to enter the article number in the search field above) and go to the recommended accessories on this page. Of course, you can also contact our customer service: by telephone, e-mail, in one of our branches or via our social media channels. We will be happy to advise you!




7.1 Serial Number and Model Name

In order to provide you with the best possible service, please have the model name, article number, serial number, exploded drawing and parts list ready. The corresponding contact options can be found in chapter 9 of this operating manual.

(i) NOTICE

The serial number of your equipment is unique. It's located on a white sticker. The exact position of this sticker is shown in the following illustration.

Enter the serial number in the appropriate field.

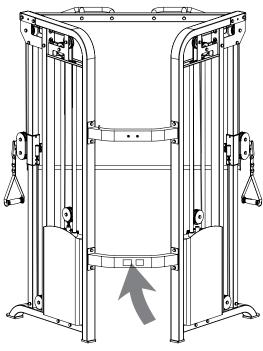

	00	
Serial number:		
Brand / Category:		
Taurus / multi gym		
Model Name:		
Dual Pulley		

Article Number:

TF-CF820_72 / TF-CF820_95

7.2 Parts List

No.	Name	Qty.	No.	Name	Qty.
1	Main Upright Frame	2	27	Clip	2
2	Squat Bar	1	28	Strap Handle	2
3	Right Slide Frame	1	29	F50X70mm Inner Cap	2
4	Left Slide Frame	1	30	Strap Hook	2
5	Front Top Cross Frame	1	31	Small Pulley	14
6	Guide Rod	4	32	Big Pulley	2
7	Rubber Bumper	4	33	Ankle Strap	1
8	Weight Stack Plate	30	34	Right Shield	1
9	Weight Select Pin	2	35	Left Shield	1
10	Weight Selector	2	36	Steel Plate	4
11	Top Weight Plate	2	37	Dia 30mm Inner Cap	2
12	Single Pulley Bracket	2	СР	Cotter Pin	2
13	Right Slider	1	H6-1	M6x10mm Hex Head Bolt	8
14	Left Slider	1	H10-	M10x20mm Hex Head Bolt	4
15	Double Pulley Bracket	2	2		
16	Pop Pin	2	H10-	M10x50mm Hex Head Bolt	12
17	Upper Cross Frame	1	H10-	M10x75mm Hex Head Bolt	8
18	Lower Cross Frame	1	13	WITOX7 SIMILITIEX FIEdd Boil	
19	Pulley Bracket Bushing	4	H10-	M10x85mm Hex Head Bolt	10
20	Axle	2	15		
21	Top Cross Frame Plate	2	H10-	M10x95mm Hex Head Bolt	4
22	Left Handle	1	17	AAC Maahay	10
23	Right Handle	1	W6	M6 Washer	10
24	Pulley Bushing	8	W10	M10 Washer	78
25	Guide Sleeve	4	N6	M6 Nut	2
26	Cable	2	N10	M10 Nut	38
			N12	M12 Nut	2

7.3 Parts List: Weight Stack Upgrade


No.	Name	Qty.	No.	Name	Qty.
8	Weight Stack Plate	10	40	Cable - Shorter	2
38	Top Weight Plate - New	2	СР	Cotter Pin	2
39	Weight Selector - 21 holes	2			

7.4 Exploded Drawing

(i) NOTICE

Please note that there are differences in parts numbers for the following parts depending on the lighter/heavier weight stack:

- + top weight plate (11/38)
- + weight selector (10/39)
- + cable (26/40)

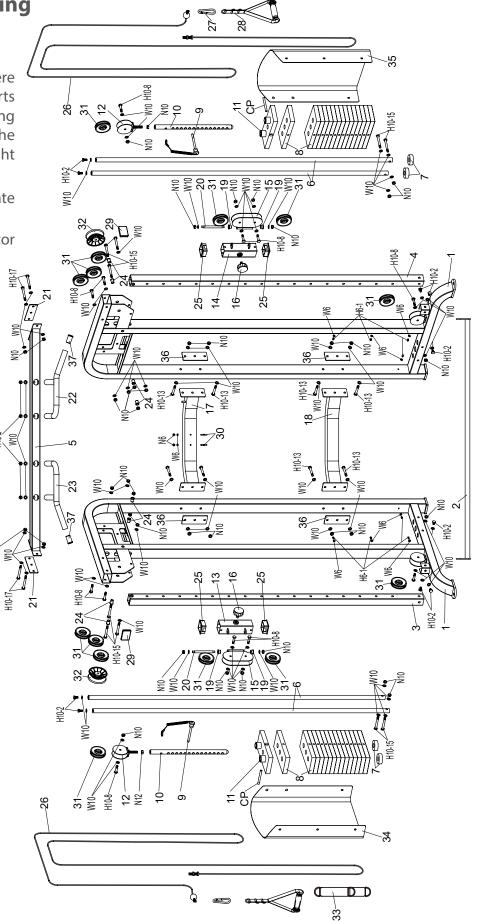

8 WARRANTY

Training equipment from Taurus® is subject to strict quality control. However, if a fitness equipment purchased from us does not work perfectly, we take it very seriously and ask you to contact our customer service as indicated. We are happy to help you by phone via our service hotline.

Error Descriptions

Your fitness equipment is developed for long-term, high-quality training. However, should a problem arise, please first read the operating instructions. For further assistance, please contact your contract partner or call our service hotline. To ensure your problem is solved as quickly as possible, please describe the defect as exactly as possible.

In addition to the statutory warranty, we provide a warranty for every fitness equipment purchased from us according to the following provisions.

Your statutory rights are not affected.

Warrantee

The warrantee is the first/original buyer and/or any person who received a newly purchased product as a gift from the original buyer.

Warranty period

The warranty periods, shown on our web shop, begin on delivery of the fitness equipment. The respective warranty periods for your equipment can be found on its product website.

Repair Costs

According to our choice, there will either be a repair, a replacement of individual damaged parts or a complete replacement. Spare parts, that have to be mounted while assembling the equipment, have to be replaced by the warrantee personally and are not a part of repair. After the expiration of the warranty period, the responsibility for parts costs, repair costs, installation costs and delivery costs lies with the warranty holder.

The terms of use are defined as follows:

- + Home use: solely for private use in private households up to 3 hours per day
- + Semi-professional use: up to 6 hours per day (e. g. rehabilitation centres, hotels, clubs, company gyms)
- + Professional use: more than 6 hours per day (e. g. commercial gyms)

Warranty Service

Within the warranty period, equipment which develops faults as a result of material or manufacturing defects, will be repaired or replaced at our discretion. Ownership of equipment or parts of equipment which have been replaced is transferred to us. The warranty period is not extended nor does a new warranty period begin following repair or replacement under the warranty.

Warranty Conditions

For the warranty to be valid, the following steps must be taken:

Please contact our customer service by email or phone. If the product under warranty has to be sent in for repair, the seller bears costs. After expiry of the warranty, the buyer bears the costs of transport and insurance. If the fault is covered by our warranty, you will receive a new or repaired equipment in return.

Warranty claims are invalid in case of damage resulting from:

- + misuse or improper handling
- + environmental influences (moisture, heat, electrical surge, dust, etc.)
- + failure to follow the current safety measures for the equipment
- + failure to follow the operating instructions
- + use of force (e. g. hitting, kicking, falling)
- + interventions which were not carried out by one of our authorized service centres
- + unauthorised repair attempts

Proof of Purchase and Serial Number

Please make sure that you are able to provide the appropriate receipt when claiming on your warranty. So that we can clearly identify the model of your equipment, and for the purposes of our quality control, you will need to give the serial number of your equipment, when contacting the service team. Where possible please have your serial number and your customer number ready when you call our service hotline. It will help us to deal with your request swiftly.

If you cannot find the serial number on your fitness equipment, our service team is at your disposal to offer further information.

Service outside of the Warranty Period

We are also happy to issue an individual cost estimate if there is a problem with your fitness equipment after the warranty has expired, or in cases which do not fall under the terms of the warranty, e. g. normal wear and tear. Please contact our customer service team to find a quick and cost-effective solution to your problem. In such a case you will be responsible for the delivery costs.

Communication

Many problems can be solved just by speaking to us as your specialist supplier. We know how important it is to you as a user of the fitness equipment to have problems solved quickly and simply, so you can enjoy working out with minimal interruption. For that reason, we also want to resolve your queries quickly and in a straightforward manner. Thus, please always keep your customer number and the serial number of the faulty equipment handy.

DE	DK	FR
TECHNIK	TEKNIK OG SERVICE	TECHNIQUE & SERVICE
+49 4621 4210-900 +49 4621 4210-698 technik@sport-tiedje.de Offnungszeiten entnehmen Sie unserer Homepage.	 & 80 90 16 50 +49 4621 4210-945 ☑ info@fitshop.dk Ů Åbningstider kan findes på hjemmesiden. 	+33 (0) 189 530984 +49 4621 42 10 933 info@fitshop.fr Vous trouverez les heures d'ouverture sur notre site Internet.
SERVICE 0800 20 20277	PL	BE
(kostenlos) 64621 4210 - 0 info@sport-tiedje.de	DZIAŁ TECHNICZNY I SERWIS 22 307 43 21 +49 4621 42 10-948	TECHNIQUE & SERVICE 02 732 46 77 +49 4621 4210 933
Öffnungszeiten entnehmen Sie unserer Homepage.	info@fitshop.pl Godziny otwarcia można znaleźć na stronie głównej.	info@fitshop.be Vous trouverez les heures d'ouverture sur notre site Internet.
1117	NII	INT
UK	NL	IINI
CUSTOMER SUPPORT	NL TECHNISCHE DIENST & SERVICE	TECHNICAL SUPPORT & SERVICE
CUSTOMER SUPPORT 00800 2020 2772 +494621 4210 944 info@sport-tiedje.co.uk vou can find the opening hours	TECHNISCHE DIENST & SERVICE +31 172 619961 service@fitshop.nl De openingstijden vindt u op	TECHNICAL SUPPORT & SERVICE +49 4621 4210-944 service-int@sport-tiedje.de Vou can find the opening

Please find a detailed overview including address and opening hours for all stores of the Sport-Tiedje Group in Germany and abroad on the following website:

www.sport-tiedje.com/en/stores

WE LIVE FITNESS

WEBSHOP AND SOCIAL MEDIA

Sport-Tiedje is Europe's largest specialist store for home fitness equipment with currently over 70 stores and one of the world's most renowned online mail order companies for fitness equipment. Private customers order via the 25 web shops in the respective national language or have their desired equpiment assembled on site. In addition, the company supplies fitness studios, hotels, sports clubs, companies and physio practices with professional equipment for endurance and strength training.

Sport-Tiedje offers a wide range of fitness equipment from renowned manufacturers, high-quality in-house developments and comprehensive services, such as a build-up service and sports scientific advice before and after the purchase. The company employs numerous sports scientists, fitness trainers and competitive athletes.

Visit us also on our social media platforms or our blog!

32



