

Assembly and Operating Instructions









FSCSTBX60.02.02

Art. No. CST-BX60-2

Content

1	GENERAL INFORMATION	8
1.1	Technical Data	8
1.2	Personal Safety	9
1.3	Electrical Safety	10
1.4	Set-Up Place	11
2	ASSEMBLY	12
2.1	General Instructions	12
2.2	Scope of Delivery	13
2.3	Assembly	15
3	OPERATING INSTRUCTIONS	26
3.1	Console display	26
3.2	Button Functions	28
3.3	Turning on and Setting up the Equipment	29
3.4	Programmes	30
	Quick-Start	30
	MAN Manual Programme	31
	PROG Preset Programmes	32
	USER - User-Defined Programme	34
	H.R.C Heart Rate-Controlled Programme	35
	WATT - Watt-Controlled Programme	36
3.5	RECOVERY - Fitness Test	37
4	STORAGE AND TRANSPORT	38
4.1	General Instructions	38
4.2	Transportation Wheels	38
5	TROUBLESHOOTING, CARE AND MAINTENANCE	39
5.1	General Instructions	39
5.2	Faults and Fault Diagnosis	39
5.3	Error Codes and Troubleshooting	40
5.4	Maintenance and Inspection Calendar	40
6	DISPOSAL	40
7	RECOMMENDED ACCESSORIES	41

8	ORDERING SPARE PARTS	42
8.1	Serial Number and Model Name	42
8.2	Parts List	43
8.3	Exploded Drawing	46
9	WARRANTY	47
10	CONTACT	49

Dear customer,

thank you for choosing fitness equipment from cardiostrong®. cardiostrong offers high-quality home fitness equipment that is optimally adapted to the conditions at home. Train at home no matter what the weather or time of the day. cardiostrong fitness equipment offers training programmes and a variety of equipment for all training levels and all training goals.

Further information can be found at www.fitshop.com or www.cardiostrong.de. We hope you enjoy your training!

Intended Use

The equipment may only be used for its intended purpose.

The equipment is only suitable for home use. The equipment is not suitable for semi-professional (e.g. hospitals, associations, hotels, schools, etc.) and commercial or professional use (e.g. fitness studios).

Legal Notice

Fitshop GmbH Europe's No. 1 for home fitness

International Headquarters Flensburger Straße 55 24837 Schleswig Germany Management:

Christian Grau

Sebastian Campmann

Dr. Bernhard Schenkel

No. HRB 1000 SL

Local Court Flensburg

European VAT Number: DE813211547

Disclaimer

© cardiostrong is a registered brand of the company Fitshop GmbH. All rights reserved. Any use of this trademark without the explicit written permission of Fitshop is prohibited.

Product and manual are subject to change. Technical data can be changed without advance notice.



Europe's No.1 for Home Fitness

ABOUT THIS MANUAL

Please carefully read the entire manual before installation and first use. The manual will help you to quickly set up the system and explains how to safely use it. Make sure that all persons exercising with the equipment (especially children and persons with physical, sensory, mental or motor disabilities) are informed about this manual and its contents in advance. In case of doubt, responsible persons must supervise the use of the equipment.

Due to ongoing changes and software optimisations, the manual may have to be updated. If you notice any discrepancies during assembly or use, please refer to the manual uploaded to the webshop. The latest manual is always available there.



This equipment has been manufactured according to the latest safety knowledge. As far as possible, potential safety hazards which could cause injury have been eliminated. Make sure to carefully follow the instructions and that all parts are securely in place. If required, read through the instructions again to correct any mistakes.

Training devices must be classified according to accuracy and use. Accuracy classes are only applicable to devices that display training data.

Accuracy classes

Class A: high accuracy.

Class B: medium accuracy.

Class C: low accuracy.

The use classes explain the intended use of the training device.

Use classes

Class S (studio): professional and/or commercial use.

These training devices are intended for the use in training rooms of facilities such as sports clubs, school facilities, hotels, clubs and studios whose access and supervision is specifically regulated by the owner (person with legal responsibility).

Class H (home use): use at home.

These stationary training devices are intended for the use in private homes where access to the training device is regulated by the owner (person with legal responsibility).

Please pay close attention to the safety and maintenance instructions given here. The contract partner cannot be held liable for damage to health, accidents or damage to the equipment when it is not used in accordance with these instructions.

The following safety instructions may appear in this manual:

ATTENTION

This notice indicates potentially hazardous situations which, if not avoided, may result in property damage.

CAUTION

This notice indicates potentially hazardous situations which, if not avoided, may result in slight or minor injuries!

↑ WARNING

This notice indicates potentially hazardous situations which, if not avoided, may result in death or serious injuries!

↑ DANGER

This notice indicates potentially hazardous situations which, if not avoided, will result in death or serious injuries!

(i) NOTICE

This notice indicates further useful information.

Retain these instructions in a safe place for future reference, maintenance or when ordering replacement parts.

1.1 Technical Data

LCD - display of

- + training time in min.
- + speed in km/h
- + distance in km
- + calories in kcal
- + pulse (when using the hand pulse sensors or a compatible chest strap)
- + watt

Braking system: electromagnetic braking system

Resistance levels: 16

Wattage

Adjustable range in the watt programme: 10 - 350 W Min. and max. wattage at 60 RPM: 25 - 235 W Min. and max. wattage at 100 RPM: 140 - 560 W

Programmes in total: 16

User-defined programmes: 1 (per user)

Heart rate-controlled programmes: 4
Watt-controlled programmes: 1
Pre-set programmes: 12

User memory: 4
Recovery function: 1

Weight and dimensions

Article weight (gross, incl. packaging) approx.: 48.9 kg
Article weight (net, without packaging) approx.: 45.5 kg

Packaging dimensions (L x W x H) approx.: 116 cm x 28.5 cm x 77.5 cm Set-up dimensions (L x W x H) approx.: 108 cm x 58 cm x 143 cm

Flywheel mass: 8 kg
Maximum user weight: 130 kg

Use class:

1.2 Personal Safety

↑ DANGER

- + Before you start using the equipment, you should consult your physician that this type of exercise is suitable for you from a health perspective. Particularly affected are persons who: have a hereditary disposition to high blood pressure or heart disease, are over the age of 45, smoke, have high cholesterol values, are overweight and/or have not exercised regularly in the past year. If you are under medical treatment that affects your heart rate, medical advice is absolutely essential.
- + Note that excessive training can seriously endanger your health. Please also note that heart rate monitoring systems can be inaccurate. If you notice any signs of weakness, nausea, dizziness, pain, shortness of breath, or other abnormal symptoms, stop exercising immediately and seek advice from your doctor if necessary.
- + The owner must communicate all warnings and instructions to the user.

↑ WARNING

- + This equipment may not be used by children under the age of 14.
- + Children should not be allowed unsupervised access to the equipment.
- + Persons with disabilities must have a medical license and must be under strict observation when using the equipment.
- + The equipment is strictly for use by one person at a time.
- + If your equipment provides a safety key, the clip of the safety key must be attached to your clothing before starting your training. In the event of a fall, the EMERGENCY STOP of the equipment can be initiated.
- + There is a risk of injury from spinning pedals and/or an exposed flywheel in the absence of a freewheel. Never get on or off the equipment when the pedals or the flywheel are still moving. Always make sure that the pedals and the flywheel have come to a complete stop.
- Support yourself with at least one hand on the handlebar when getting on and off the equipment. Only dismount from the equipment when the pedals have come to a complete stop.
- + Keep your hands, feet and other body parts, hair, clothing, jewellery and other objects well clear of moving parts.
- + During use, wear suitable sports clothing rather than loose or baggy clothing. When wearing sports shoes, make sure they have suitable soles, preferably made of rubber or other nonslip materials. Shoes with heels, leather soles, studs or spikes are unsuitable. Never exercise barefoot.

CAUTION

- + If your equipment needs to be connected to the power supply with a mains cable, make sure that the cable is not a potential tripping hazard.
- + Make sure that nobody is within the range of motion of the equipment during training so as not to endanger you or other persons.
- + Always tighten the pedal strap before you start training to prevent your feet from slipping.

CAUTION

+ Be aware that if adjustment devices are left protruding, they may impede the user's movement.

ATTENTION

- + Do not insert any objects of any kind into the openings of the device.
- + To protect the equipment from use by unauthorised third parties, always remove the power cable when not in use and store it in a safe place that is inaccessible to unauthorised persons (e.g. children).
- + Class B and C crank training equipment is not suitable for high accuracy purposes.

1.3 Electrical Safety

↑ DANGER

+ In order to reduce the risk of an electric shock, always unplug the equipment from the mains socket immediately after your workout, before assembly or dismantling, and before maintenance or cleaning. Do not pull on the cable.

↑ WARNING

- + Do not leave the equipment unattended while the mains cable is plugged into the mains socket. During your absence, the mains cable must be removed from the mains socket to prevent improper use by third parties or children.
- + If the mains cable or plug is damaged or defective, contact your contract partner. Until repair, the equipment must not be used.

► ATTENTION

- + The equipment requires a mains connection of 220-230 V with 50 Hz mains voltage.
- + The equipment may only be connected directly to an earthed socket using the supplied mains cable. Extension cables must conform to VDE guidelines. Always completely unwind the mains cable.
- + The socket must be protected by a fuse with a minimum fuse rating of "16 A, slow blow".
- + Do not make any changes to the mains cable or the mains plug.
- + Keep the mains cable away from water, heat, oil and sharp edges. Do not route the mains cable underneath the equipment or under a carpet or rug, and do not place any objects on top of it.
- + If your purchased item is equipped with a TFT console, software updates must be carried out regularly. Follow the instructions on the console to perform the update(s).
- + The software systems on gym equipment with TFT consoles are set up only for the preinstalled apps. Do not install any additional apps.

NOTICE

+ The pre-installed apps on TFT consoles are produced and provided by external manufacturers. Fitshop does not take any responsibility for the availability, functionality or contents of these apps.

1.4 Set-Up Place

WARNING

+ Do not place the equipment in main corridors or escape routes.

CAUTION

- + Choose a location in which to place the equipment such that there is enough free space/ clearance to the front, the rear and to the sides of the equipment.
- + The training room should be well ventilated during training and not be exposed to any draughts.
- + Choose the place in which to set up the equipment such that there is enough free space/ clearance to the front, the rear and to the sides of the equipment.
- + The free area in the direction from which the exercise equipment is accessed must be at least 0.6 m larger than the exercise area.
- + The set-up and mounting surface of the equipment should be flat, loadable and solid.

ATTENTION

- + The device may only be used in one building, in sufficiently tempered and dry rooms (ambient temperatures between 10°C and 35°C). The equipment should not be used outdoors or in rooms with high humidity (over 70%) like swimming pools.
- + A floor protective mat/equipment underlay can help to protect high-quality floor coverings (parquet, laminate, cork, carpets) from dents and sweat and can help to level out slight unevenness.
- + For Class S equipment, the exercise equipment may only be used in areas where access, supervision and control are specifically regulated by the owner.

2.1 General Instructions

DANGER

+ Do not leave any tools, packaging materials such as foils or small parts lying around, as otherwise there is a danger of suffocation for children. Keep children away from the equipment during assembly.

↑ WARNING

+ Pay attention to the instructions attached to the equipment in order to reduce the risk of injuries.

CAUTION

- + Ensure to have sufficient room for movement in each direction during assembly.
- + The assembly of the equipment must be carried out by at least two adults. If in doubt, seek the help of a third technically skilled person.

ATTENTION

+ To prevent damage to the equipment and the floor, assemble the equipment on a mat or packaging board.

(i) NOTICE


- + In order to make the assembly as simple as possible, some screws and nuts to be used can already be pre-assembled.
- + Ideally, assemble the equipment at its later set-up place.

2.2 Scope of Delivery

The scope of delivery consist of the following parts. At the beginning, check whether all parts and tools belonging to the device are included in the scope of delivery and whether damage has occurred. In the event of complaints, the contractual partner must be contacted directly.

CAUTION

If parts of the scope of delivery are missing or damaged, the assembly must not be carried out.

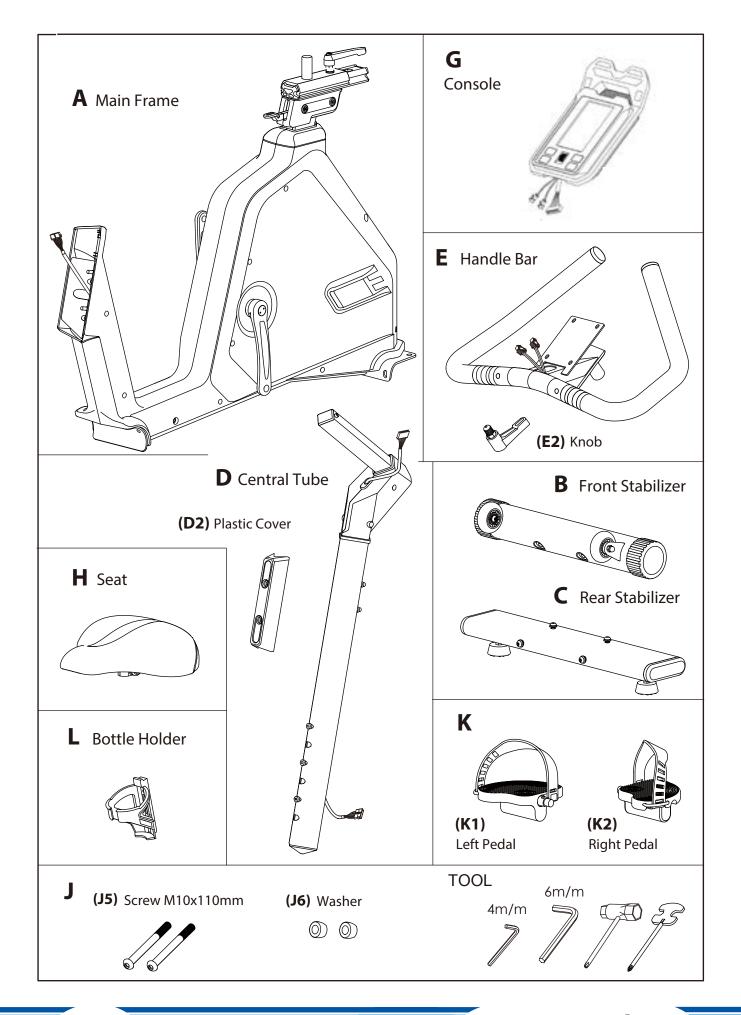

2.3 Assembly


Before assembly, take a close look at the individual assembly steps shown and carry out the assembly in the order given.

(i) NOTICE

- + First loosely screw all parts together and check that they fit properly. Tighten the screws using the tool only when you are instructed to do so.
- + If you have difficulty recognising the graphics, we recommend that you open and/or download the PDF instructions stored in the webshop on your end device (e.g. smartphone, tablet or PC). There you have the option of zooming in closer. Please note that the Adobe Acrobat Reader programme must be installed on your end device in order to open the file.

Step 1: Assembly of the Rear Stabilizer

- 1. Remove the preassembled screws (J7), spring washers (J8) and washers (J9) from the rear stabilizer (C).
- 2. Attach the rear stabilizer (C) to the main frame (A) with the screws (J7), spring washers (J8) and washers (J9).

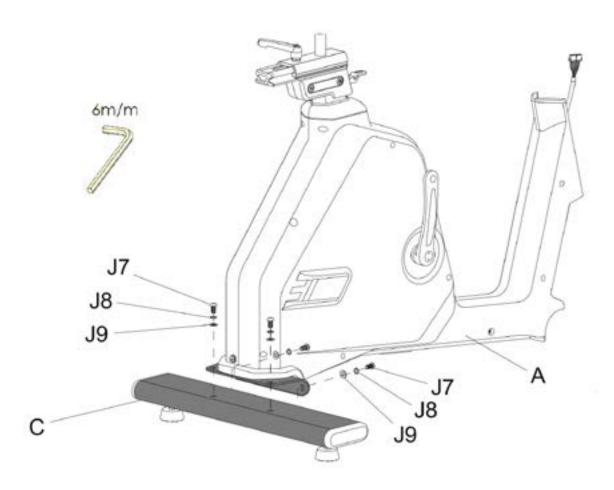

Step 2: Assembly of the Front Stabilizer


(i) NOTICE

Before starting the assembly, remove the paper tube from the front stabilizer (B).

Attach the front stabilizer (B) to the main frame (A) with two screws (J1), two spring washers (J2) and two washers (J3).

(i) NOTICE

If the machine is wobbly, you can adjust the end caps to stabilize the machine.

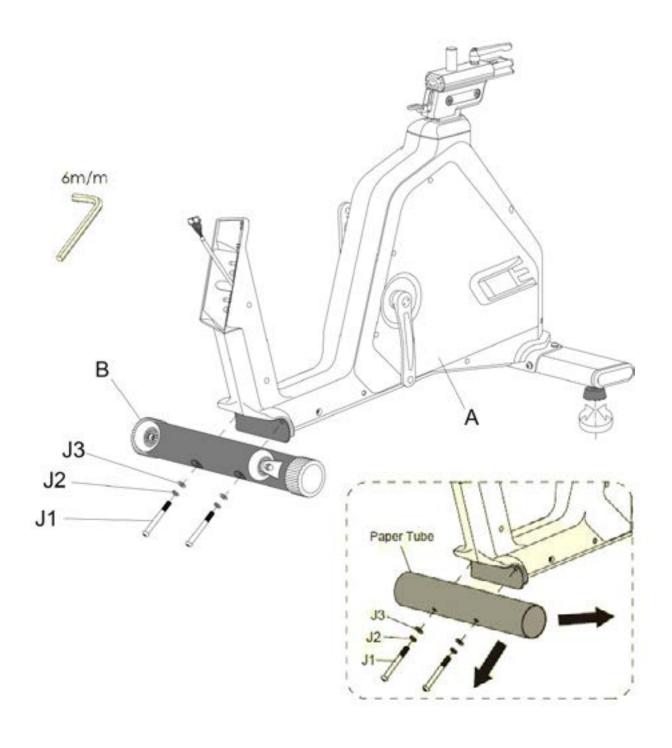

Step 3: Assembly of the Central Tube

(i) NOTICE


The central tube can be mounted at a standard or low setting according to height and personal preference. The main frame and the central tube are equipped with guiding labels for standard and low position. Align the blue lines for standard height setting (view 3-a). Align the red lines for low height setting (view 3-b).

1. Connect the cables A1 and D1.


ATTENTION

Make sure not to pinch the cables during the following steps.


- 2. Carefully push any excess cable into the main frame (A).
- 3. Attach the central tube (D) to the main frame (A) with two screws (J5) and two washers (J6).
- 4. Attach the plastic cover (D2) to the central tube (D) with two screws (J4).

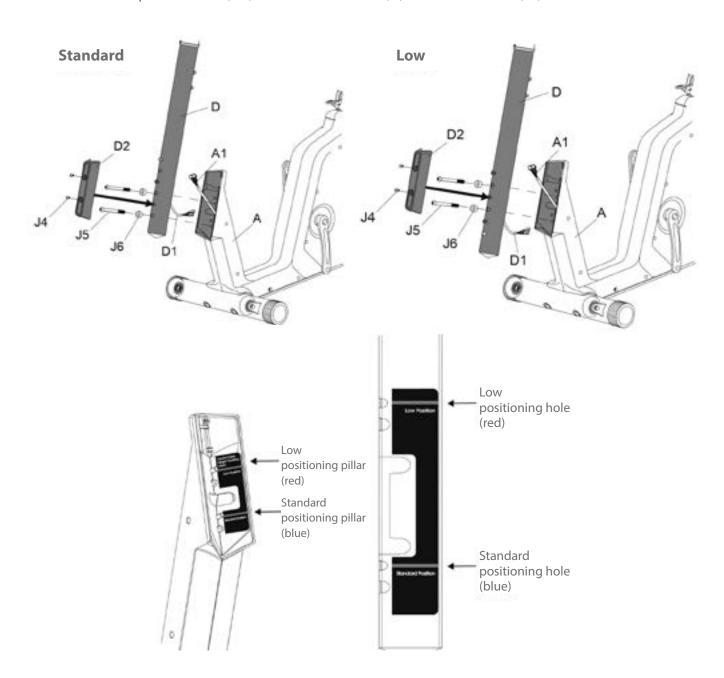

View 3-a: Standard position

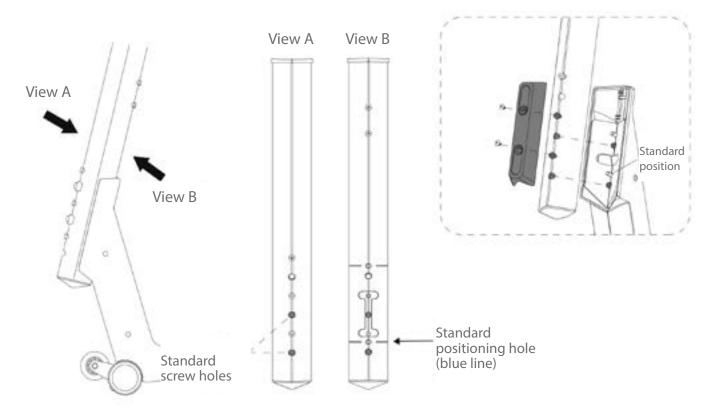


View 3-b: Low position

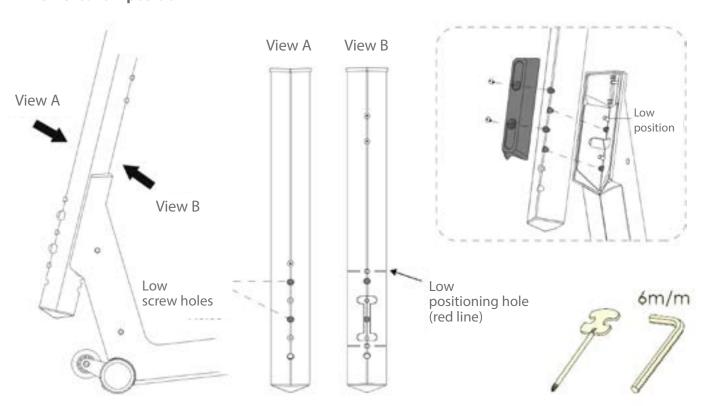


Step 4: Assembly of the Water Bottle Holder

- 1. Remove the preassembled screws (J10) from the central tube (D).
- 2. Attach the water bottle holder (L) to the central tube (D) with the screws (J10).

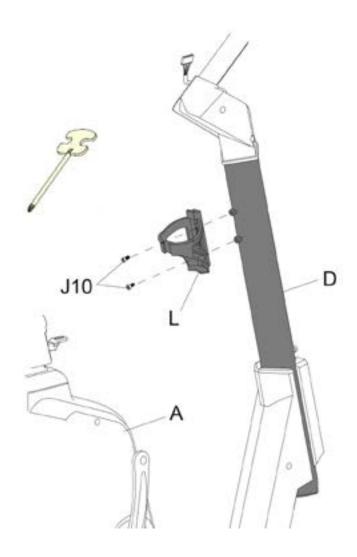


Step 5: Assembly of the Handle Bar

- 1. Remove the preassembled screw (J10) from the central tube (D).
- 2. Slide the handle bar (E) onto the central tube (D).
- 3. Fasten the handle bar (E) to the central tube (D) with one knob (E2).
- 4. Reattach the previously removed screw (J10) to the central tube (D).

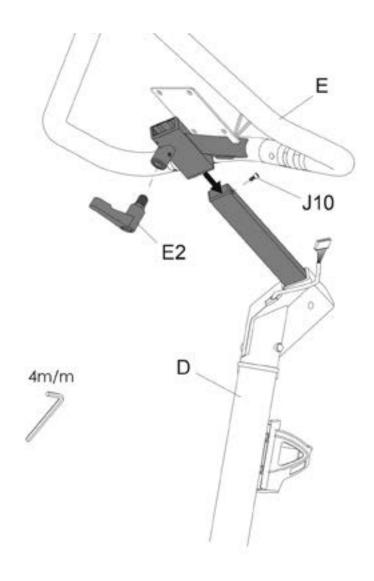

Step 6: Connecting the Cables

- 1. Carefully pass the cable (D1) through the hole.
- 2. Connect the plug (D3) to the hole of the handle bar (E).

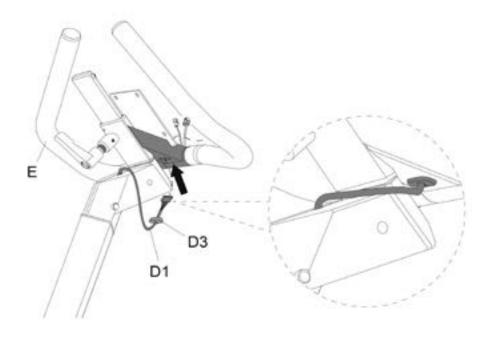


Step 7: Assembly of the Console

- 1. Remove the preassembled screws (J4) on the back of the console (G).
- 2. Connect the cables D1 and E1 with their respective components of the console (G).


► ATTENTION

- 3. Make sure not to pinch the cables during the following step.
- 4. Carefully push any excess cable into the mounting hole of the handle bar (E).
- 5. Carefully slide the console (G) onto the console housing.
- 6. Attach the console (G) to the console housing on the handle bar (E) with the previously removed screws (J4).

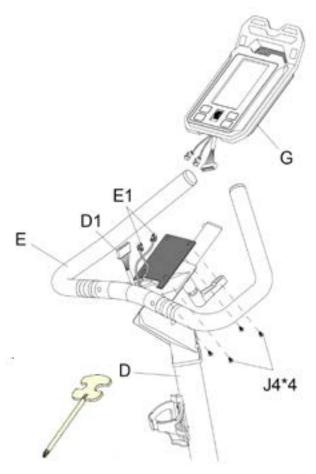

Step 8: Assembly of the Seat

Position the seat (H) onto the seat basement (H4) and tighten it with the tool.

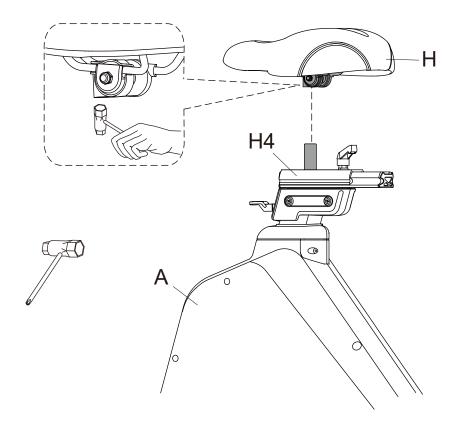

Step 9: Assembly of the Pedals


(i) NOTICE

The pedals and pedal straps are marked as left and right.

- 1. Attach the right pedal (K2) to the right crank arm on the main frame (A) by turning the pedal (K2) clockwise.
- 2. Attach the left pedal (K1) to the left crank arm on the main frame (A) by turning the pedal (K1) counterclockwise.

CAUTION

Make sure to screw in the pedals completely.

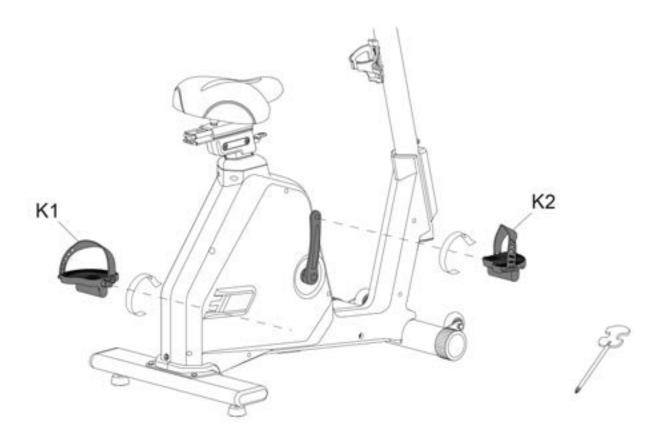

Step 10: Alignment of the Feet

If the floor is uneven, you can stabilize the equipment by turning the two setting screws under the main frame.


- 1. Lift the equipment on the desired side and rotate the setting screws under the main frame.
- 2. Rotate the screws clockwise in order to remove them and to raise the equipment.
- 3. Rotate them counterclockwise in order to lower the equipment

Step 11: Connecting the Equipment to the Mains Supply

ATTENTION

The equipment must not be connected to a multiple socket, otherwise it cannot be guaranteed that the equipment will be supplied with sufficient power. Technical errors can result.

Plug the power plug into a wall outlet that complies with the instructions in the chapter on electrical safety.

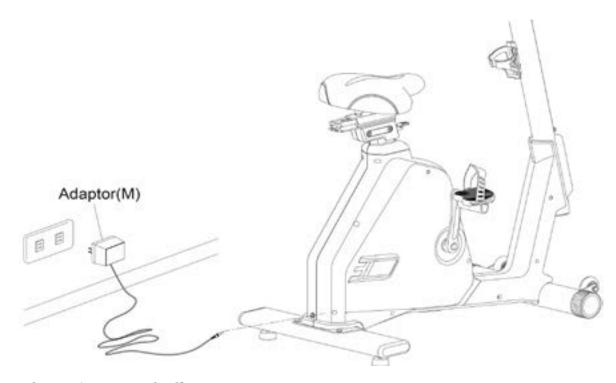


Correctly Getting On and Off

- 1. To get on, grip the handles with both hands and first step onto the left pedal with your left foot or onto the right pedal with your right foot and then place your foot onto the other pedal.
- 2. To get off, grip the handles with both hands and place one foot next to the equipment and then the other foot.

Adjustment of the Seat


- 1. To adjust the seat (H) vertically, lift the wrench (F1) and adjust the seat (H) to the desired height.
- 2. To adjust the seat (H) horizontally, loosen the knob (F2) and slide the seat (H) into the desired position.

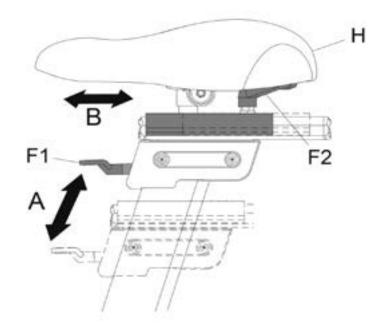

Adjustment of the Handle Bar

The height of the handle bar can be adjusted individually.

- 1. To adjust the height of the handle bar (E), first loosen the knob (E2).
- 2. Slide the handle bar (E) to the desired position and then tighten the knob (E2) again.

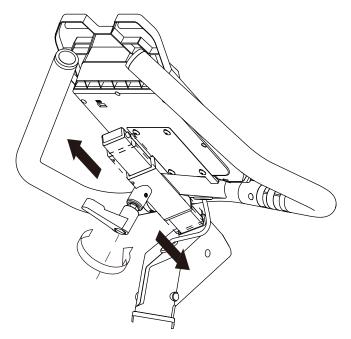

NOTICE

- + Familiarise yourself with all the functions and setting options of the device before starting training. Have the proper use of this product explained to you by a specialist.
- + Always start your training with low intensity and increase evenly and gently. End your training with a cool-down phase. If you are unsure, please consult your physician.

3.1 Console display



Time	+ Display of the training time+ Display range: 0:00-99:00 minutes
Speed	+ Display of the current training speed+ Display range: 0.0-99.9 km/h or ml/h
RPM (cadence; rotations per minute)	+ Display of the RPM + Display range: 0-999 RPM
Distance	 + Display of the training distance + Display range: 0.0-99.9 km or ml

Calories (calorie consumption)	+ Display of calorie consumption+ Display range: 0-990 Cal
Watts	+ Display of the current wattage + Display range: 0-999 W
Pulse (heart rate; heart beats per minute)	+ Display of the current heart rate + Display range: 30-230 BPM

3.2 Button Functions

	UP	Scroll to adjust settings or increase resistance.
	DOWN	Scroll to adjust settings or decrease resistance.
	ENTER	Press to confirm settings.
► II Start / Stop	START/STOP	Press to start and stop workout.
Reset	RESET	Press to reset the current settings and return to the start.
C Total Reset	TOTAL RESET	Press for total reset of the console.
Recovery	RECOVERY	Press to activate recovery function.


3.3 Turning on and Setting up the Equipment

1. To turn on the equipment, connect the power cable to the equipment or press and hold the RESET button for two seconds.

An alarm sounds for two seconds and the figure 78.0 is displayed in the lower left corner of the display (fig. 1 and fig. 2).

The console has four user profiles (U1-U4).


- 2. To select a user profile, use the jog dial and confirm with ENTER (fig. 3 and fig. 4).
- 3. To set the personal setting for SEX (male/female), AGE (in years), HEIGHT (in cm) and WEIGHT (in kg), use the jog dial and confirm each entry with ENTER (see fig. 5-8).

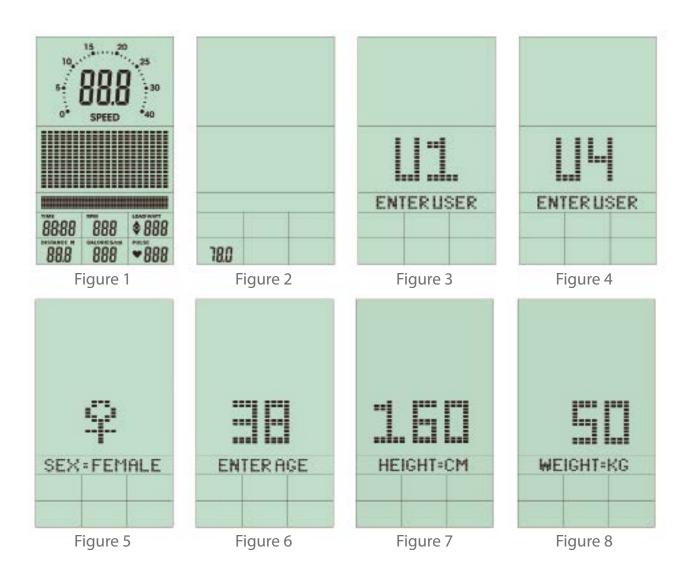

3.4 Programmes

Once you have entered all settings, use the jog dial to select one of the five programme modes (fig. 9 - 13). There are 19 programmes in total and one fitness test.

- + Manual (manual programme): 1 + Program (preset programmes): 12
- + User Program (user-defined programme): 1 (per user)
- + H.R.C. (heart-rate controlled programmes): 4
- + Watt (watt-controlled programme):+ Recovery (fitness test)







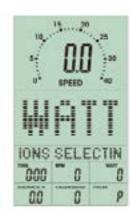


Figure 9

Figure 10

Figure 11

Figure 12

Figure 13

3.4.1 Quick-Start

1. To select quick-start and start training immediately, press START/STOP.

You automatically enter the manual programme.

The resistance level can be adjusted during the workout.

2. To end the workout, press START/STOP.

3.4.2 MAN. - Manual Programme

After you have selected the manual programme and confirmed with ENTER, you can enter the values for resistance level (1-16), time, distance, calories and pulse using the jog dial.

If you enter a target value for time, distance and calories, the workout automatically ends when one of these target values is reached. If you want to train according to only one target value, you must only enter the desired target value. The remaining values can be ignored.

If you set a target pulse value, a signal tone sounds when you exceed this value. The signal will only stop when your pulse is no longer higher than the target pulse value.

- 1. To set one or more target values, use the jog dial and confirm each entry with ENTER.
- 2. After you have set one or more target values, press START/STOP to start the workout.

The workout starts.

The resistance level can be adjusted during the workout.

- 3. To return to the programme settings, press RESET.
- 4. To end the workout, press START/STOP again.

3.4.3 PROG. - Preset Programmes

- 1. Select the PROGRAM mode.
- 2. Select one of the preset programmes P01-P12 with the jog dial.
- 3. Confirm the selection with ENTER.
- 4. Set the training time and confirm with ENTER.
- 5. To start the workout, press START/STOP.

The workout starts and the set training time is counted down. When the countdown reaches zero, the screen flashes and a beep sounds.

The resistance level can be adjusted during the workout.

- 6. To turn off the beep, press any button.
- 7. To stop the workout before the set training time has elapsed, press START/STOP again.



Figure 14



Figure 15



Figure 16


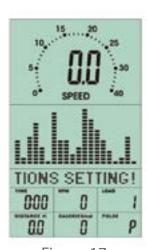


Figure 17

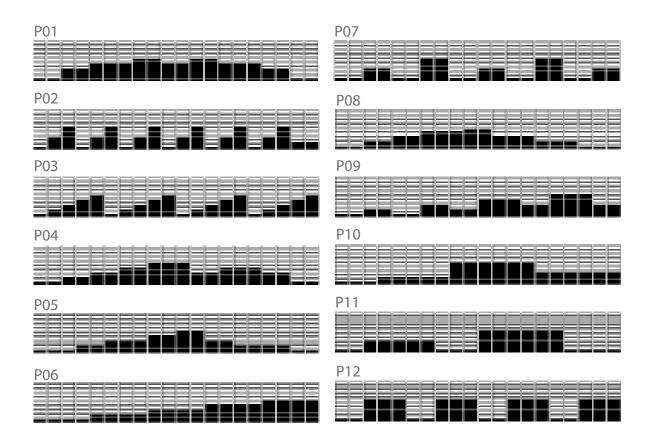

3.4.4 USER - User-Defined Programme

The user-defined programme allows you to create your own profile programme by individually setting the resistance level (1 to 16) for up to 20 segments. Each user profile can set one user-defined programme.

- 1. Select the USER PROGRAM mode and confirm with ENTER.
- 2. To set the resistance level for a segment, use the jog dial and confirm with ENTER.
- 3. Repeat the process until you have set all segments.

You can see which segment you are currently in by the flashing of the segment.

- 4. When you have set all 20 segments, press and hold ENTER for two seconds to continue setting the training time.
- 5. Set the training time and confirm with ENTER.
- 6. To start the workout, press START/STOP.

The workout starts and the set training time is counted down. When the countdown reaches zero, the screen flashes and a beep sounds.

The resistance level can be adjusted during the workout.

The user-defined programme is saved in the user's user profile.

- 7. To return to the settings of the programme, press RESET.
- 8. To turn off the beep, press any button.
- 9. To stop the workout before the set training time has elapsed, press START/STOP again.



Figure 18



Figure 19

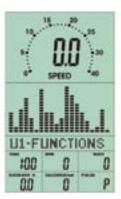


Figure 20



Figure 21



Figure 22

3.4.5 H.R.C. - Heart Rate-Controlled Programme

WARNING

Your training equipment is not a medical device. The heart rate measurement of this equipment may be inaccurate. Various factors can affect the accuracy of the heart rate measurement. The heart rate measurement serves only as a training aid.

The console has an integrated heart-rate receiver. Heart rate can be measured via the hand pulse sensors; however, a chest strap is recommended for heart-rate measurement as this measurement technique gives far more accurate values.

NOTICE

If you do not use a chest strap, both hands must permanently grip the hand pulse sensors during workout.

You can choose between four programmes: 55%, 75% or 90% of your maximum heart rate and "TAG", where you manually set a target heart rate value (fig. 23-26).

1. Select one of the four programmes (55%, 75%, 90% or TAG) and confirm with ENTER.

Your maximum heart rate is determined based on your age which you set in your user profile (220 - age).

- 2. Set the training time and confirm with ENTER.
- 3. To start the workout, press START/STOP.

The workout starts and the set training time is counted down.


A beep sounds when you exceed the set target heart rate. The beep stops when you reach the set limit again. If your heart rate continues to exceed the set value, the programme stops automatically.

When the countdown reaches zero, the screen flashes and a beep sounds.

- 4. To turn off the beep, press any button.
- 5. To stop the workout before the set training time has elapsed, press START/STOP again.

(i) NOTICE

If no heart rate signal is detected for 5 seconds, a heart symbol with a question mark lights up. This turns off as soon as a heart rate signal is detected again.

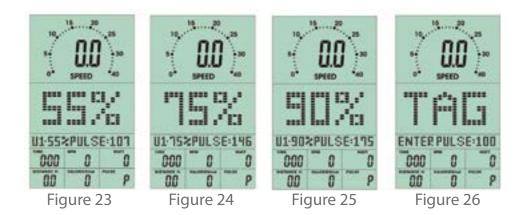

3.4.6 WATT - Watt-Controlled Programme

1. Select the WATT mode and confirm with ENTER.

The preset wattage 120 flashes in the display.

- 2. Set the desired wattage between 10 and 350 watts and confirm with ENTER.
- 3. Set the training time and confirm with ENTER.
- 4. To start the workout, press START/STOP.

The workout starts and the set training time is counted down. When the countdown reaches zero, the screen flashes and a beep sounds.

The wattage can be adjusted during the workout.

- 5. To turn off the beep, press any button.
- 6. To stop the workout before the set training time has elapsed, press START/STOP again.

The following three symbols indicate whether the wattage or speed should be increased or decreased:



The current wattage is more than 25% above the set wattage – user should slow down.



The current wattage is within the range of the set wattage – user should maintain the speed.



The current wattage is more than 25% below the set wattage – user should increase the speed.

3.5 RECOVERY - Fitness Test

After finishing any workout, you can use the recovery function to measure your recovery heart rate.

(i) NOTICE

You will get more accurate results by using a compatible cheast strap.

- 1. To measure your recovery heart rate, press RECOVERY after finishing your workout.
- 2. Grasp the hand pulse sensors with both hands, if you are not wearing a chest strap.

A countdown of 60 seconds starts. During this time, your heart rate is displayed (fig. 27).

- → After the countdown, the console determines a fitness score between F1 and F6 based on your heart rate.
- 3. To return to the main menu, press RECOVERY again.

Exercise regularly to improve your recovery heart rate.

Result	Fitness level	
F1	Very good	
F2	Good	
F3	Average	
F4	Satisfactory	
F5	Poor	
F6	Very poor	



Figure 27

(i) NOTICE

If you stop pedaling for more than four minutes, the console enters the energy-saving mode. All settings and workout data will be saved until the next workout starts.

4.1 General Instructions

↑ WARNING

- + The storage location should be chosen so that improper use by third parties or children can
- + If your equipment does not have transportation wheels, the equipment must be disassembled before transportation.

ATTENTION


Make sure that the equipment is protected from moisture, dust and dirt in the selected storage location. The storage location should be dry and well ventilated and have a constant ambient temperature between 10°C and 35°C.

4.2 Transportation Wheels

ATTENTION

If you want to transport your equipment over particularly sensitive and soft floor coverings, such as parquet, planks or laminate, lay out the transport route with cardboard or similar to avoid possible floor damage.

- Stand behind the equipment and lift it until the weight is transferred to the transportation 1. wheels. After that, you easily can move the equipment to a new position. For long transport distances the equipment should be disassembled and safely packed.
- 2. Select the new location by following the instructions in the section of this manual.

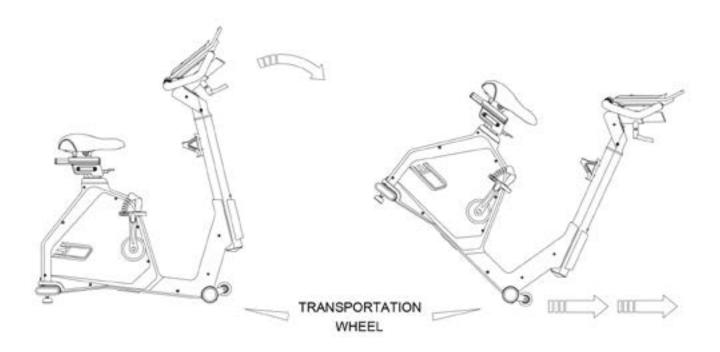

5.1 General Instructions

MARNING

+ Do not make any improper changes to the equipment.

CAUTION

+ Damaged or worn components may affect your safety and the life of the equipment. Therefore, immediately replace damaged or worn components. In such a case, contact the contract partner. The equipment must not be used until it has been repaired. If necessary, use only original spare parts.

ATTENTION

In addition to the instructions and recommendations for maintenance and care given here, additional service and/or repair work may be necessary; this must only be carried out by authorised service technicians.

5.2 Faults and Fault Diagnosis

The equipment undergoes regular quality controls during production. Nevertheless, faults or malfunctions may occur. Frequently, individual parts are responsible for these disturbances, an exchange is usually sufficient. Please refer to the following overview for the most common errors and how to correct them. If the equipment still does not function properly, contact your contract partner.

Fault	Cause	Solution	
Cracking in the pedal area	Pedals loose	Tighten the pedals	
Equipment wobbles	Equipment is not level	Align the feet	
Handlebar/saddle wobbles	Loose screws	Tighten screws firmly	
Display is blank/is not working	Batteries empty or loose cable connection	Replace batteries or check cable connections	
No pulse display	 + Sources of interference in the room + unsuitable chest strap + Wrong position of chest strap + Chest strap defective or battery empty + Pulse display defective 	 + Eliminate sources of interference (e.g. mobile phone, WLAN, lawn mower and vacuum cleaner robot, etc) + Use a suitable chest strap (see RECOMMENDED ACCESSORIES) + Reposition chest strap and/or moisten electrodes + Changing batteries + Check if pulse display by hand pulse possible 	

5.3 Error Codes and Troubleshooting

The electronics of the equipment continuously carries out tests. In case of deviations, an error code appears on the display and normal operation is stopped for your safety.

Please contact the contract partner for technical support.

5.4 Maintenance and Inspection Calendar

To avoid damage from body sweat, the equipment must be cleaned with a damp towel (no solvents!) after each training session.

The following routine tasks must be performed at the specified intervals:

Part	Weekly	Monthly
Display console	С	I
Plastic covers	С	I
Screws and cable connections		I
Check pedals for tightness		I
Legend: C = clean; I = inspect		

By scanning the QR-code with the camera function or QR-code scanner app of your smartphone/tablet, a video on general maintenance of an exercise bike opens on YouTube. The video serves to illustrate the maintenance points described in this manual.



Please note that the video may not be available in your language or with appropriate subtitles.

If you cannot scan QR-codes, you can access all Fitshop videos on YouTube by first opening YouTube and entering "Fitshop" in the search field.

6

DISPOSAL

At the end of its operational life, this equipment cannot be disposed of in normal household waste. Instead, it must be disposed of via an electricals recycling centre. Further information can be obtained from your local authority's recycling service.



The materials can be recycled as per their symbols. Through the reuse, recycling of materials or other forms of recovery of old equipment, you make an important contribution to the protection of the environment.

7

RECOMMENDED ACCESSORIES

To make your training experience even more efficient and pleasant, we recommend that you add suiting accessories to your fitness equipment. For exercise bikes this could for example be a **floor mat**, which makes your fitness equipment stand more securely and also protects the floor from sweat or **silicone spray** to keep moving parts in good shape. For many exercise bikes it is possible to replace the **saddle** or **pedals**, as these are usually the same mounts used on bicycles.

If you have purchased a fitness machine with pulse training and want to train your heart rate, we strongly recommend that you use a compatible **chest strap**, as this ensures optimum transmission of the heart rate.

Our range of accessories offers the highest quality and makes training even better. If you would like to find out more about compatible accessories, please go to the detail page of the product in our webshop (the easiest way is to enter the article number in the search field above) and go to the recommended accessories on this page. Of course, you can also contact our customer service: by telephone, e-mail, in one of our branches or via our social media channels. We will be happy to advise you!



8.1 Serial Number and Model Name

In order to provide you with the best possible service, please have the model name, article number, serial number, exploded drawing and parts list ready. The corresponding contact options can be found in chapter of this operating manual.

(i) NOTICE

The serial number of your equipment is unique. It's located on a white sticker. The exact position of this sticker is shown in the following illustration.



Enter the serial number in the appropriate field.

Brand / Category:	
cardiostrong / upright bike	
Model Name:	

Article Number:

BX60 Comfort

Serial number:

CST-BX60-2

8.2 Parts List


No.	Name	Qty.	No.	Name	Qty.
А	MAIN FRAME	1	A31	BEARING 6004ZZ	2
A1	SENSOR WIRE 850mm	1	A32	BUSH Φ20.2xΦ26x26.5L	1
A2	CHAIN COVER-L	1	A33	BUSH Φ20.5xΦ26x5L	1
A3	CHAIN COVER-R	1	A34	SMALL BELT WHEEL Φ41	1
A4	FRONT CHAIN COVER - L	1	A35	PARALLEL KEY	1
A5	FRONT CHAIN COVER - R	1	A36	WASHER Φ10xΦ30x2T	1
A6	PLASTIC COVER - L	1	A37	BUSH Φ20.2xΦ26x18.5L	1
A7	PLASTIC COVER - R	1	A38	SCREW M10x20L	1
A8	SCREW M4x14L	18	A39	IDLER WHEEL FRAME	1
A10	SCREW Φ8xΦ5xx29mm	4	A40	BOLT M8X45mm	1
A11	CRANK-L	1	A41	NUT M8	3
A12	CRANK-R	1	A42	WASHER Φ8xΦ22x1T	4
A13	END CAP Φ23x5mm	2	A43	BEARING 6202ZZ	2
A14	DC JACK	1	A44	WASHER Φ6xΦ19x2T	1
A15	SCREW M4x16mm	2	A46	SCREW M6X10L	2
A16	SCREW M5x16L	1	A47	FLY WHEEL Φ250	1
A17	SCREW M4x10L	2	A48	MAGNETIC HOUSING 11pcs	1
A18	SENSOR WIRE HOUSING	1	A49	SCREW M8x55L	1
A19	SENSOR WIRE	1	A50	SCREW M8x20mm	1
A20	SCREW M8x12mm	6	A51	IDLER WHEEL FRAME	1
A21	AXLE Φ80xΦ17x150mm	1	A52	BEARING 6000ZZ	2
A22	BELT WHEEL Φ115	2	A53	IDLER WHEEL	1
A23	AXLE Φ20x92.5L	1	A54	NUT 3/8"-26x7T	5
A24	MAGNETIC	1	A55	WASHER FIXED PLATE	2
A25	SPACER Φ17xΦ22x10L	1	A56	SCREW M6x10mm	2
A26	BEARING 6203ZZ	2	A57	BEARING 6000ZZ	2
A27	WAVE WASHER	1	A58	PULLEY Φ38	1
	Ф17.5ХФ25Х0.3Т	1	A59	BEARING 6003ZZ	2
A28	C CLIP	1	A60	BEARING 6300ZZ	1
A29	BELT 260 7PJ	1	A61	AXLE	1
A30	BELT 350 6PJ	1	A63	MOTOR	1

A64	FIX PLATE	1	E3	SPONGE HDR	1
A65	SCREW M5x25mm	1	E4	SPONGE HDR	1
A67	SCREW M6X10mm	2	E5	END CAP Φ37.5	2
A68	BOLT	1	E6	END CAP	2
A69	NUT M3	1	E7	BUSH Φ19x29mm	1
A70	SCREW M4X16mm	1	E8	UPPER HANDLE PULSE	2
A71	WASHER Φ5xΦ10x1T	2		HOUSING	
A72	NUT M4	1	E9	LOWER HANDLE PULSE HOUSING	2
A73	SOCKET Φ10xΦ15.8x9mm	2	E10	SCREW M3x10	4
A74	NUT	3			- `
A76	WASHER Φ6xΦ12x2T	2	E11	SCREW M6	1
A77	WASHER Φ3xΦ6x0.5T	4	F-2	SEAT TUBE	1
В	FRONT STABILIZER	1	F1	WRENCH COVER	1
B1	END CAP Φ76	2	F2	KNOB M10	1
B2	TRANSPORTATION WHEEL	2	F3	SCREW M4x8mm	1
B3	SCREW M8X40mm	2	F4	ADJUSTING HANDLE	1
B4	NUT M8	2	F5	BUSH Φ12xΦ4x43mm	1
B5	WASHER Φ8xΦ14x2T	2	F6	BUSH Φ16xΦ12x25mm	1
С	REAR STABILIZER	1	F7	ADJUSTING BASE	1
C1	END CAP	2	F8	NUT M8	1
C2	ADJUSTED NUT M10	2	F9	SCREW M6x10mm	2
C3	KNOB Φ49	2	F10	SCREW M4x3mm	4
D	CENTRAL TUBE	1	F11	ADJUSTING LINKAGE	1
D1	SENSOR WIRE 1000mm	1	F13	С CLIP Ф7.4xФ9.38x0.8T	1
D2	PLASTIC COVER	1	F14	BUSH Φ12xΦ8x10mm	1
D3	END CAP	2	F15	SCREW M12x18.2mm	1
D4	CENTRAL TUBE COVER - L	1	F16	PLASTIC PIPE	1
D5	CENTRAL TUBE COVER - R	1	F17	PLASTIC INSERT	1
D6	SCREW M4X20L	2	F18	PLASTIC INSERT	1
D7	END CAP	1	F19	STICKER	1
D8	END CAP	1	F20	LIMIT BLOCK	1
E	HANDLE BAR TUBE	1	F21	AXLE	2
E1	SENSOR WIRE 250mm	2	F22	SOCKET	2
E2	KNOB Φ16	1	F23	BUSH Φ16xΦ12x25mm	1

F24	С СЫР Ф11хФ13.6х1Т	2
F26	SPRING	1
F27	END CAP	1
F28	LATCH	2
G	CONSOLE	1
Н	SADDLE	1
H1	SCREW SLEEVE M10x7mm	1
H2	WASHER M10	1
H4-2	SLIDE RAILS	1
H5	END CAP	2
H6	STICKER	1
H7	LEVER COVER - L	1
H8	LEVER COVER - R	1
H9	SCREW M5x10mm	4
H10	Plastic Chute	2
J1	SCREW M8x88L	2
J2	SPRING WASHER Φ8.1x14.5x2.4T	2
J3	WASHER Φ8xΦ16x1.5T	2
J4	SCREW M5x10mm	6
J5	SCREW M10x110mm	2
J6	WASHER Φ22x12	2
J7	SCREW M8x20L	4
J8	SPRING WASHER Φ8.1x14.5x2.4T	4
J9	WASHER Φ8xΦ19x2T	2
J10	SCREW M5x10mm	3
J11	WASHER Φ8xΦ19x2T	2
K1	PEDAL - L	1
K2	PEDAL - R	1
L	BOTTLE HOLDER	1
М	ADAPTER	1
N1	SPRING	1
N2	SCREW M8x20L	2
N3	NUT M5	1

N4	WASHER Φ17.5xΦ25xΦ0.3T	1
N5	WAVE WASHER Φ10.2xΦ13x0.3T	2
N6	ONE WAY BEARING Φ35x17L	1
N7	WASHER Φ30ΧΦ34Χ0.8T	1
N8	WAVE WASHER Φ17.5XΦ22X0.3T	1
N9	WASHER Φ6.5XΦ13X2T	1
N10	SPRING	1

8.3 Exploded Drawing

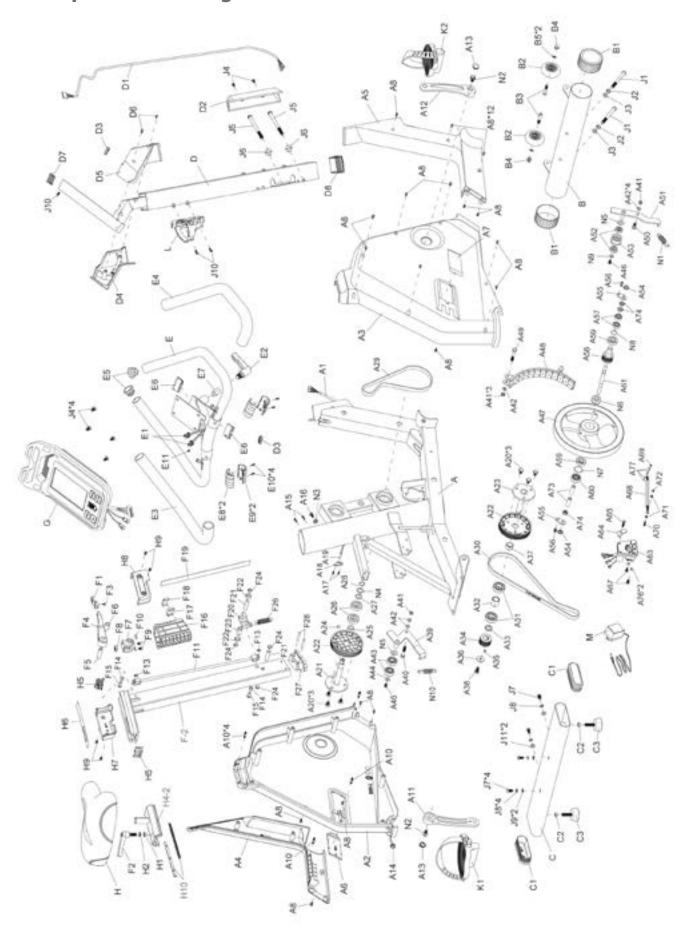

WARRANTY

Products from cardiostrong® are subject to strict quality control. However, if a fitness equipment purchased from us does not work perfectly, we take it very seriously and ask you to contact our customer service as indicated. We are happy to help you by phone via our service hotline.

Error Descriptions

Your fitness equipment is developed for long-term, high-quality training. However, should a problem arise, please first read the operating instructions. For further assistance, please contact your contract partner or call our service hotline. To ensure your problem is solved as quickly as possible, please describe the defect as exactly as possible.

In addition to the statutory warranty, we provide a warranty for every fitness equipment purchased from us according to the following provisions.

Your statutory rights are not affected.

Warrantee

The warrantee is the first/original buyer and/or any person who received a newly purchased product as a gift from the original buyer.

Warranty period

The warranty periods, shown on our web shop, begin on delivery of the fitness equipment. The respective warranty periods for your equipment can be found on its product website.

Repair Costs

According to our choice, there will either be a repair, a replacement of individual damaged parts or a complete replacement. Spare parts, that have to be mounted while assembling the equipment, have to be replaced by the warrantee personally and are not a part of repair. After the expiration of the warranty period, the responsibility for parts costs, repair costs, installation costs and delivery costs lies with the warranty holder.

The terms of use are defined as follows:

- + Home use: solely for private use in private households up to 3 hours per day
- + Semi-professional use: up to 6 hours per day (e. g. rehabilitation centres, hotels, clubs, company gyms)
- + Professional use: more than 6 hours per day (e. g. commercial gyms)

Warranty Service

Within the warranty period, equipment which develops faults as a result of material or manufacturing defects, will be repaired or replaced at our discretion. Ownership of equipment or parts of equipment which have been replaced is transferred to us. The warranty period is not extended nor does a new warranty period begin following repair or replacement under the warranty.

Warranty Conditions

For the warranty to be valid, the following steps must be taken:

Please contact our customer service by email or phone. If the product under warranty has to be sent in for repair, the seller bears costs. After expiry of the warranty, the buyer bears the costs of transport and insurance. If the fault is covered by our warranty, you will receive a new or repaired equipment in return.

Warranty claims are invalid in case of damage resulting from:

- + misuse or improper handling
- + environmental influences (moisture, heat, electrical surge, dust, etc.)
- + failure to follow the current safety measures for the equipment
- + failure to follow the operating instructions
- + use of force (e. g. hitting, kicking, falling)
- + interventions which were not carried out by one of our authorized service centres
- + unauthorised repair attempts

Proof of Purchase and Serial Number

Please make sure that you are able to provide the appropriate receipt when claiming on your warranty. So that we can clearly identify the model of your equipment, and for the purposes of our quality control, you will need to give the serial number of your equipment, when contacting the service team. Where possible please have your serial number and your customer number ready when you call our service hotline. It will help us to deal with your request swiftly.

If you cannot find the serial number on your fitness equipment, our service team is at your disposal to offer further information.

Service outside of the Warranty Period

We are also happy to issue an individual cost estimate if there is a problem with your fitness equipment after the warranty has expired, or in cases which do not fall under the terms of the warranty, e. g. normal wear and tear. Please contact our customer service team to find a quick and cost-effective solution to your problem. In such a case you will be responsible for the delivery costs.

Communication

Many problems can be solved just by speaking to us as your specialist supplier. We know how important it is to you as a user of the fitness equipment to have problems solved quickly and simply, so you can enjoy working out with minimal interruption. For that reason, we also want to resolve your queries quickly and in a straightforward manner. Thus, please always keep your customer number and the serial number of the faulty equipment handy.

DE	DK	UK
TECHNIK	TEKNIK OG SERVICE	CUSTOMER SUPPORT
+49 4621 4210-900 +49 4621 4210-698 technik@fitshop.de Öffnungszeiten entnehmen Sie unserer Homepage. SERVICE	 & 80 90 16 50 +49 4621 4210-945 ☑ info@fitshop.dk Ů Åbningstider kan findes på hjemmesiden: https://stg.fit/statit7 	 ↓ 00800 2020 2772 +494621 4210 944 ☑ info@fitshop.co.uk ☑ You can find the opening hours on our homepage: https://stg.fit/statitc
0800 20 20277	FR	BE
(kostenlos) 04621 4210 - 0 info@fitshop.de Öffnungszeiten entnehmen Sie unserer Homepage: https://stg.fit/statita	TECHNIQUE & SERVICE +33 (0) 189 530984 +49 4621 42 10 933 info@fitshop.fr Vous trouverez les heures d'ouverture sur notre site Internet: https://stg.fit/statit4	TECHNIQUE & SERVICE 02 732 46 77 +49 4621 4210 933 info@fitshop.be Vous trouverez les heures d'ouverture sur notre site Internet: https://stg.fit/statit8
ES	NL	INT
TECNOLOGÍA Y SERVICIOS 911 238 029 info@fitshop.es Consulta nuestro horario de apertura en la página web: https://stg.fit/statit5	TECHNISCHE DIENST & SERVICE	TECHNICAL SUPPORT & SERVICE +49 4621 4210-944 service-int@fitshop.de You can find the opening hours on our homepage: https://stg.fit/statita
PL	AT	CH
DZIAŁ TECHNICZNY I SERWIS	TECHNIK & SERVICE	TECHNIK & SERVICE
22 307 43 21 +49 4621 42 10-948 info@fitshop.pl Godziny otwarcia można znaleźć na stronie głównej: https://stg.fit/statit6	 ○ 0800 20 20277 (Freecall) +49 4621 42 10-0 ○ info@fitshop.at ○ Öffnungszeiten entnehmen Sie unserer Homepage: https://stg.fit/statitb 	 ♦ 0800 202 027 +49 4621 42 10-0 info@fitshop.ch Öffnungszeiten entnehmen

Please find a detailed overview including address and opening hours for all stores of the Fitshop Group in Germany and abroad on the following website:

www.fitshop.com/en/stores

WE LIVE FITNESS

WEBSHOP AND SOCIAL MEDIA

Fitshop is Europe's largest specialist store for home fitness equipment with currently over 70 stores and one of the world's most renowned online mail order companies for fitness equipment. Private customers order via the 25 web shops in the respective national language or have their desired equpiment assembled on site. In addition, the company supplies fitness studios, hotels, sports clubs, companies and physio practices with professional equipment for endurance and strength training.

Fitshop offers a wide range of fitness equipment from renowned manufacturers, high-quality in-house developments and comprehensive services, such as a build-up service and sports scientific advice before and after the purchase. The company employs numerous sports scientists, fitness trainers and competitive athletes.

Visit us also on our social media platforms or our blog!

