



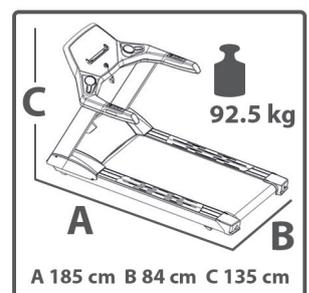

Assembly and Operating Instructions

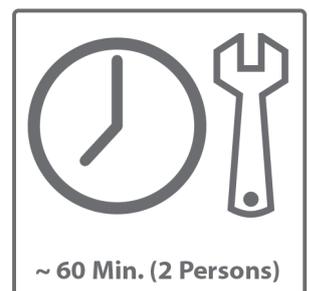

CSTTX40E.02.03

Art. No. CST-TX40e-2

Treadmill **TX40e**

Content

1	GENERAL INFORMATION	7
1.1	Technical Data	7
1.2	Personal Safety	8
1.3	Electrical Safety	9
1.4	Set-Up Place	10
2	ASSEMBLY	11
2.1	General Instructions	11
2.2	Scope of Delivery	12
2.3	Assembly	14
3	OPERATING INSTRUCTIONS	19
3.1	Console Display	20
3.2	Button Functions	22
3.3	Programmes	23
3.3.1	Pre-Set Programmes	23
3.3.2	Challenge Programmes	27
3.3.3	Custom User Programmes	28
3.3.4	Virtual Simulations	29
3.3.5	HRC Programmes (pulse control)	30
3.4	User Setting	31
4	STORAGE AND TRANSPORT	32
4.1	General Instructions	32
4.2	Folding Mechanism	32
4.2.1	Folding Up the Treadmill	33
4.2.2	Unfolding the Treadmill	34
4.3	Transportation Wheels	34
5	TROUBLESHOOTING, CARE AND MAINTENANCE	35
5.1	General Instructions	35
5.2	Faults and Fault Diagnosis	35
5.3	Error Codes and Troubleshooting	36
5.4	Care and Maintenance	37
5.4.1	Adjusting the Running Mat	37
5.4.2	Re-tensioning the Running Mat	38
5.4.3	Lubricating the Running Mat	38
5.5	Maintenance and Inspection Calendar	39
6	DISPOSAL	39

7	RECOMMENDED ACCESSORIES	40
8	ORDERING SPARE PARTS	41
8.1	Serial Number and Model Name	41
8.2	Parts List	42
8.3	Exploded Drawing	47
9	WARRANTY	49
10	CONTACT	51

Dear customer,

Thank you for choosing a high-quality equipment of the brand cardiostrong®. cardiostrong® offers sports and fitness equipment for the sophisticated home sport and the equipment of fitness studios and business customers. With cardiostrong® fitness equipment, the focus is on what sport is all about: maximum performance! Therefore, the equipment is developed in close consultation with athletes and sports scientists. Because athletes know best what makes perfect fitness equipment.

Further information can be found at www.sport-tiedje.com.

Intended Use

The equipment may only be used for its intended purpose.

The equipment is only suitable for home use. The equipment is not suitable for semi-professional (e.g. hospitals, associations, hotels, schools, etc.) and commercial or professional use (e.g. fitness studios).

Legal Notice

Sport-Tiedje GmbH
Europe's No. 1 for home fitness

International Headquarters
Flensburger Straße 55
24837 Schleswig
Germany

Management:
Christian Grau
Sebastian Campmann
Dr. Bernhard Schenkel
No. HRB 1000 SL
Local Court Flensburg
European VAT Number: DE813211547

Disclaimer



©2010 cardiostrong® is a registered brand of the company SportTiedje GmbH. All rights reserved. Any use of this trademark without the explicit written permission of Sport-Tiedje is prohibited.

Product and manual are subject to change. Technical data can be changed without advance notice.

ABOUT THIS MANUAL

Please carefully read the entire manual before installation and first use. The manual will help you to quickly set up the system and explains how to safely use it. Make sure that all persons exercising with the equipment (especially children and persons with physical, sensory, mental or motor disabilities) are informed about this manual and its contents in advance. In case of doubt, responsible persons must supervise the use of the equipment.



This equipment has been manufactured according to the latest safety knowledge. As far as possible, potential safety hazards which could cause injury have been eliminated. Make sure to carefully follow the instructions and that all parts are securely in place. If required, read through the instructions again to correct any mistakes.

Please pay close attention to the safety and maintenance instructions given here. The contract partner cannot be held liable for damage to health, accidents or damage to the equipment when it is not used in accordance with these instructions.

The following safety instructions may appear in this manual:

► **ATTENTION**

This notice indicates potentially hazardous situations which, if not avoided, may result in property damage.

⚠ **CAUTION**

This notice indicates potentially hazardous situations which, if not avoided, may result in slight or minor injuries!

⚠ **WARNING**

This notice indicates potentially hazardous situations which, if not avoided, may result in death or serious injuries!

⚠ **DANGER**

This notice indicates potentially hazardous situations which, if not avoided, will result in death or serious injuries!

ⓘ **NOTICE**

This notice indicates further useful information.

Retain these instructions in a safe place for future reference, maintenance or when ordering replacement parts.

1.1 Technical Data

LED display of

- + speed in km/h or mph
- + training time
- + training distance
- + calorie consumption
- + heart rate (when using the hand sensors or a chest strap)
- + incline in %

Motor output: 2.5 HP continuous output (DC motor)

Speed range: 0.8–20 km/h
Speed hot keys: 6
Incline range: 0–15%
Incline hot keys: 6

Total number of training programmes: 58
Manual programmes: 1
Pre-set programmes: 17
Challenge programmes: 12
Heart rate oriented programmes: 2
Customized Programmes: 20
Virtual simulations: 6

Running surface size (length x width): 142 cm x 51 cm

Weight and dimensions:

Item weight (net, without packaging): 92.5 kg

Package dimensions L x W x H): approx. 1910 mm x 920 mm x 350 mm

Set-up dimensions (L x W x H): approx. 1850 mm x 840 mm x 1350 mm

Folded dimensions (L x W x H): approx. 1180 mm x 840 mm x 1500 mm

Maximum user weight: 130 kg

1.2 Personal Safety

DANGER

- + Before you start using the equipment, you should consult your physician that this type of exercise is suitable for you from a health perspective. Particularly affected are persons who: have a hereditary disposition to high blood pressure or heart disease, are over the age of 45, smoke, have high cholesterol values, are overweight and/or have not exercised regularly in the past year. If you are under medical treatment that affects your heart rate, medical advice is absolutely essential.
- + Note that excessive training can seriously endanger your health. Please also note that heart rate monitoring systems can be inaccurate. If you notice any signs of weakness, nausea, dizziness, pain, shortness of breath, or other abnormal symptoms, stop exercising immediately and seek advice from your doctor if necessary.

WARNING

- + This equipment may not be used by children under the age of 14.
- + Children should not be allowed unsupervised access to the equipment.
- + Persons with disabilities must have a medical license and must be under strict observation when using the equipment.
- + The equipment is strictly for use by one person at a time.
- + If your equipment provides a safety key, the clip of the safety key must be attached to your clothing before starting your training. In the event of a fall, the EMERGENCY STOP of the equipment can be initiated.
- + Keep your hands, feet and other body parts, hair, clothing, jewellery and other objects well clear of moving parts.
- + During use, wear suitable sports clothing rather than loose or baggy clothing. When wearing sports shoes, make sure they have suitable soles, preferably made of rubber or other non-slip materials. Shoes with heels, leather soles, studs or spikes are unsuitable. Never exercise barefoot.

CAUTION

- + If your equipment needs to be connected to the power supply with a mains cable, make sure that the cable is not a potential tripping hazard.
- + Make sure that nobody is within the range of motion of the equipment during training so as not to endanger you or other persons.

ATTENTION

- + Do not insert any objects of any kind into the openings of the device.

1.3 Electrical Safety

DANGER

- + In order to reduce the risk of an electric shock, always unplug the equipment from the mains socket immediately after your workout, before assembly or dismantling, and before maintenance or cleaning. Do not pull on the cable.

WARNING

- + Do not leave the equipment unattended while the mains cable is plugged into the mains socket. During your absence, the mains cable must be removed to prevent improper use by third parties or children.
- + If the mains cable or plug is damaged or defective, contact your contract partner. In the meantime, the equipment must not be used.

ATTENTION

- + The equipment requires a mains connection of 220-230V with 50 Hertz mains voltage.
- + The equipment may only be connected directly to an earthed socket using the supplied mains cable. Extension cables must conform to VDE guidelines. Always completely unwind the mains cable.
- + The socket must be protected by a fuse with a minimum fuse rating of "16 amps, slow blow".
- + Do not make any changes to the mains cable or the mains plug.
- + Keep the mains cable away from water, heat, oil and sharp edges. Do not route the mains cable underneath the equipment or under a carpet or rug, and do not place any objects on top of it.

1.4 Set-Up Place



WARNING

+ Do not place the equipment in main corridors or escape routes.



CAUTION

+ The training room should be well ventilated during training and not be exposed to any draughts.


+ Choose the place in which to set up the equipment such that there is enough free space/clearance to the front, the rear and to the sides of the equipment.

+ The set-up and mounting surface of the equipment should be flat, loadable and solid.

ATTENTION

+ The device may only be used in one building, in sufficiently tempered and dry rooms (ambient temperatures between 10°C and 35°C). The equipment should not be used outdoors or in rooms with high humidity (over 70%) like swimming pools.

+ A floor protective mat/equipment underlay can help to protect high-quality floor coverings (parquet, laminate, cork, carpets) from dents and sweat and can help to level out slight unevenness.

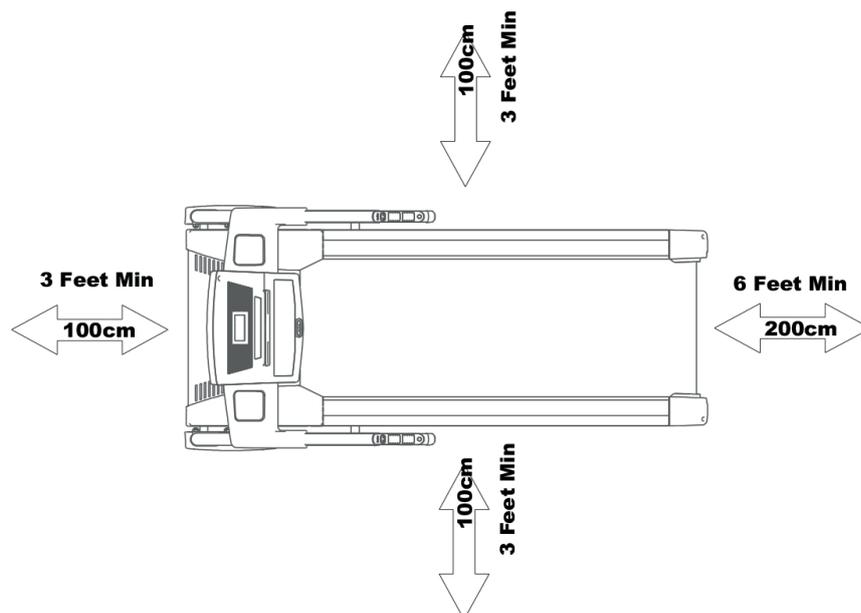

2.1 General Instructions




DANGER

- + Do not leave any tools, packaging materials such as foils or small parts lying around, as otherwise there is a danger of suffocation for children. Keep children away from the equipment during assembly.



WARNING

- + The treadmill is equipped with high-pressure shock absorbers that can cause the treadmill to suddenly open if handled incorrectly. To avoid possible personal injuries, never pull on the areas of the treadmill shown in the illustration. Never try to lift or move the treadmill at the marked areas.
- + Pay attention to the instructions attached to the equipment in order to reduce the risk of injuries.

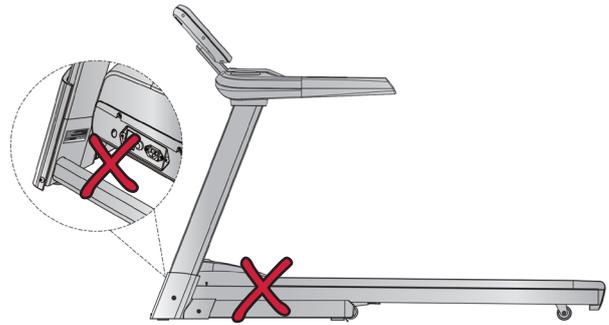

CAUTION

- + Do not open the packaging when it is lying on its side.
- + Ensure to have sufficient room for movement in each direction during assembly.
- + The assembly of the equipment must be carried out by at least two adults. If in doubt, seek the help of another technically skilled person.



ATTENTION

- + To prevent damage to the equipment and the floor, assemble the equipment on a mat or packaging board.



NOTICE

- + In order to make the assembly as simple as possible, some screws and nuts to be used can already be pre-assembled.
- + Ideally, assemble the equipment at its later set-up place.

2.2 Scope of Delivery

WARNING


Around the treadmill there is a strap that prevents the treadmill from opening during transport. This strap must be removed before assembly.

The scope of delivery consist of the following parts. At the beginning, check whether all parts and tools belonging to the device are included in the scope of delivery and whether damage has occurred. In the event of complaints, the contractual partner must be contacted directly.


CAUTION

If parts of the scope of delivery are missing or damaged, the assembly must not be carried out.

Tools

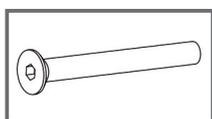

2x Flat-head screw

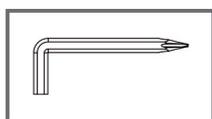


1x Allen wrench




1x Allen wrench


Pre-assembled

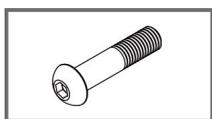


4x Hexagon head screw (M10*50L)

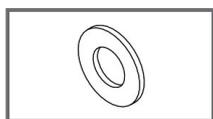


2x Washer (M10)

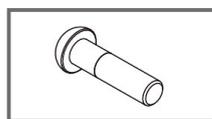


2x Hexagon head screw (M8*35L)

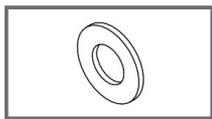


4x Washer (M8)

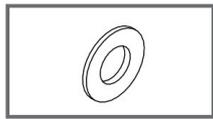

2x Washer (M4)

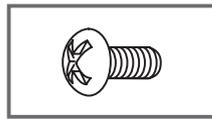

2x Screw (M4*10L)

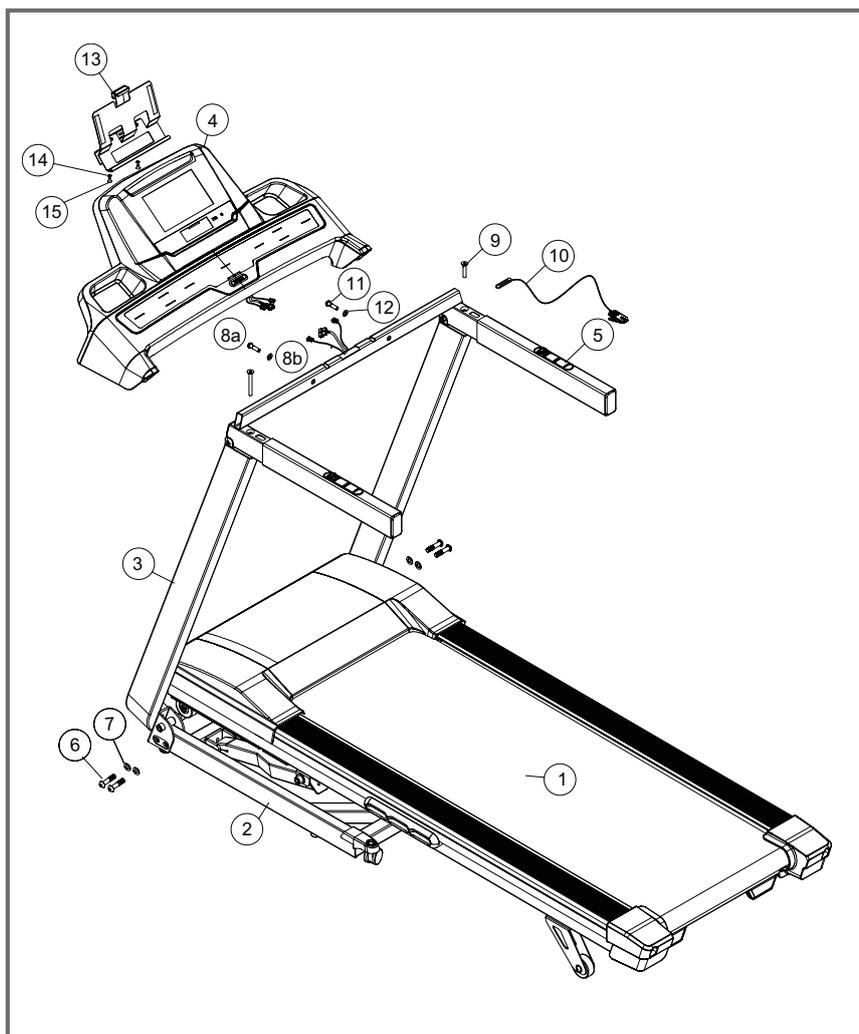

No.	Parts	No.	Parts
1	Running belt	8b	Console and pulse cable - lower part
2	Frame base	9	Flat-head screw (M8*70L)
3	Support post	10	Safety key
4	Console	11	Hexagon head screw (M8*35L)
5	Handrails	12	Washer (M8)
6	Hexagon head screw (M10*50L)	13	Holder
7	Washer (M10)	14	Washer (M4)
8a	Console and pulse cable - upper part	15	Screw (M4x10L)

2.3 Assembly


Before assembly, take a close look at the individual assembly steps shown and carry out the assembly in the order given.

① NOTICE

First loosely screw all parts together and check that they fit properly. Then tighten the screws using the tool only when you are instructed to do so.


Step 1: Unpacking

1. Open the cardboard and lay it flat on the floor.
2. Take the operating instructions, the hardware package, and the power cable. Read carefully the operating instructions before the assembly.

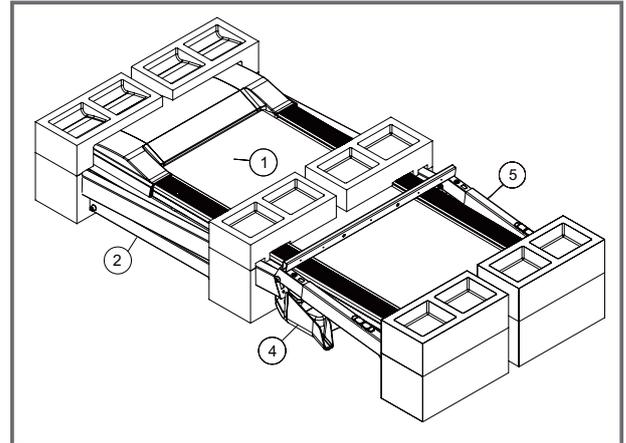


Step 2: Preparing the Assembly

1. Lift the rear side of the treadmill.
2. Take the assembly of the console (4) below the machine by lifting the main frame.

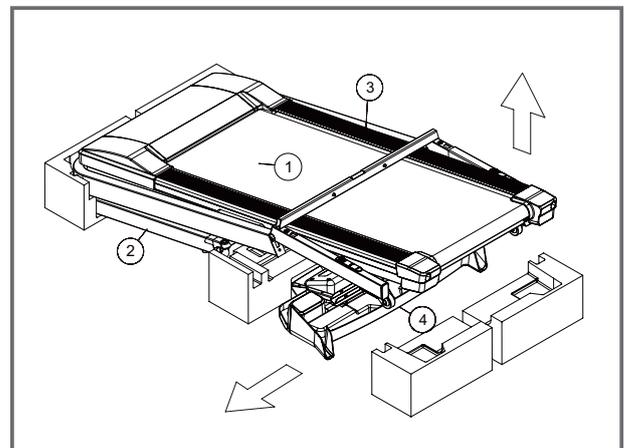


3. Remove the plastic foil and the polystyrene. Then place the main frame carefully on the floor.
4. Loosen two screws (6) and two washers (7) on the left side of the main frame (2)
5. Loosen two screws (6) and two washers (7) on the right side of the main frame (2). Keep all screws and washers for the further use.

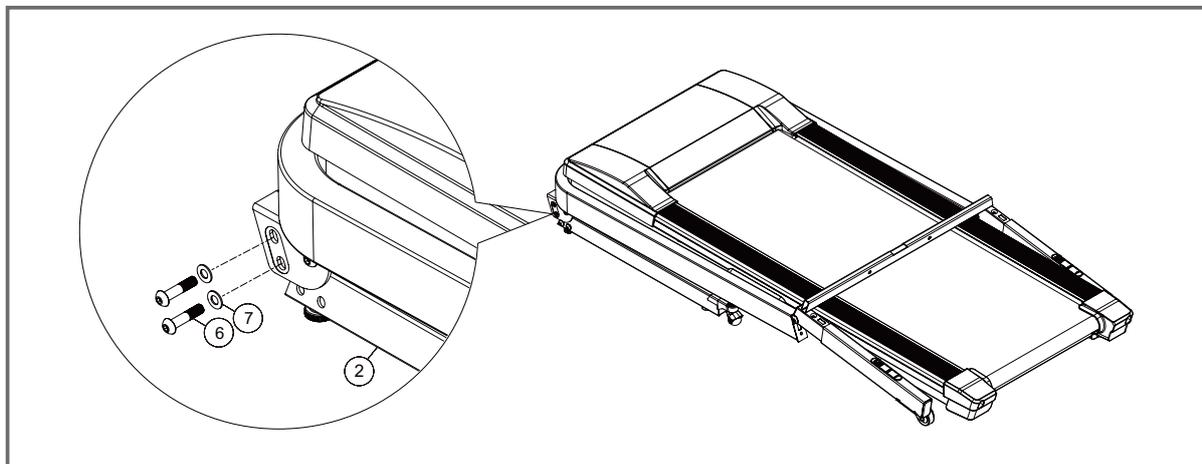


Step 3: Setting up the support frame

1. Lift the supporting frame (3) and the assembly of the handles (5).
2. Align the supporting frame so that the holes of it correspond to those of the main frame (2).

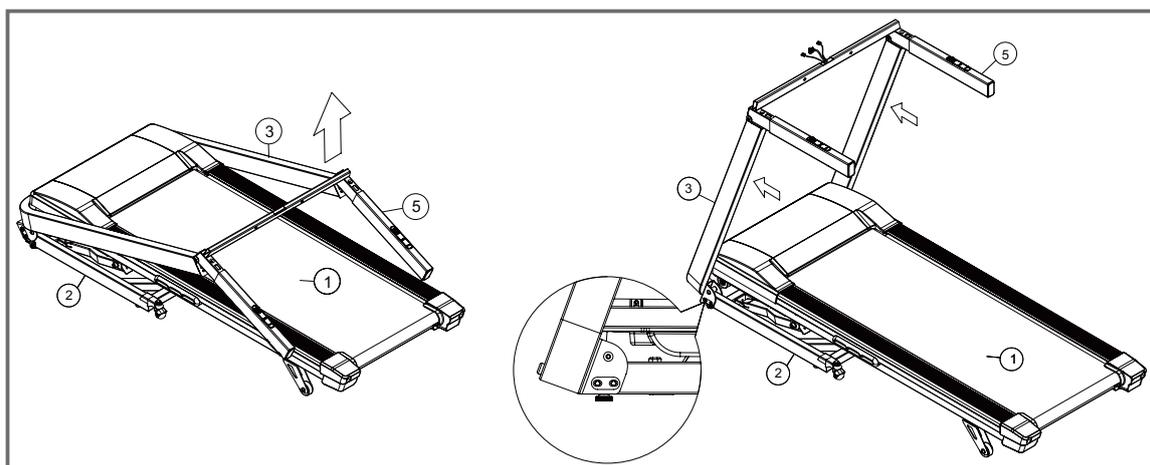


Step 4: Assembly of the support frame and handles

1. Mount two screws (6) and two washers (7) with the M6 wrench on the supporting frame (3).

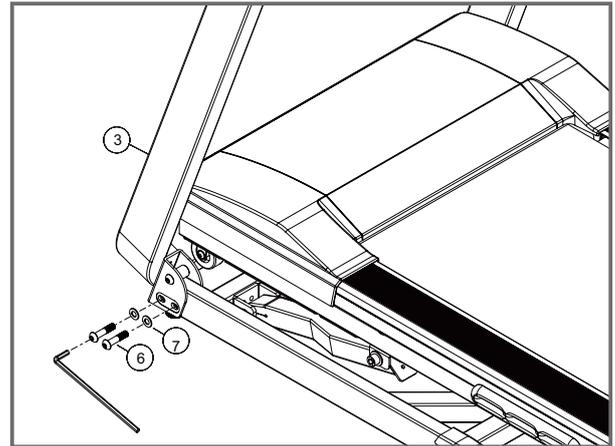


2. Take two screws (9) and the M5 wrench from the hardware package.
3. Mount the screws (9) on the assembly of the handles (5).

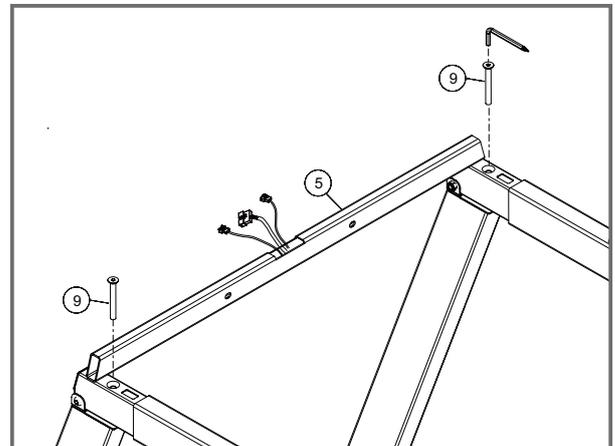


Step 5: Assembly of the console


1. Connect the console with the pulse cables (8a and 8b).
2. Place the assembly of the console (4) on the assembly of the handles (5).

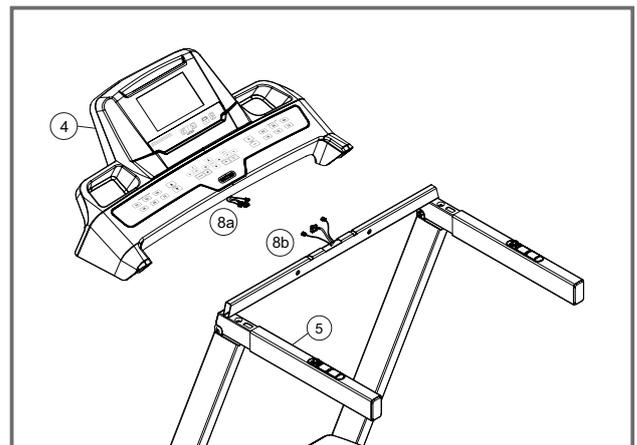

3. Plug the cables (**8a** and **8b**) at the back in the assembly of the console (**4**).

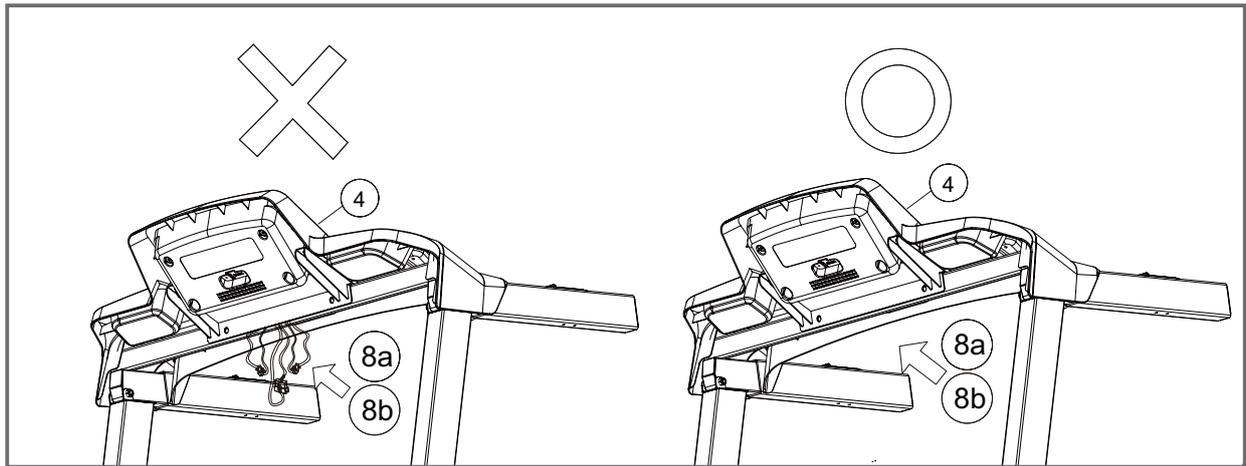


4. To close the covering, mount two screws (**11**) and two washers (**12**) with the M5 wrench.

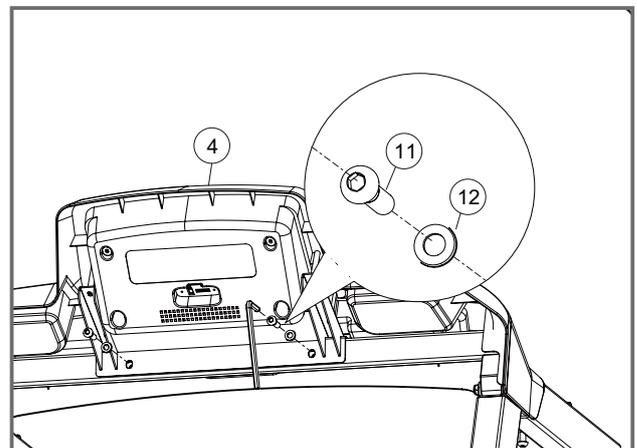

Step 6: Completion of the assembly

1. Tighten all the screws that were mentioned in the previous assembly steps.
2. Insert the safety key (**10**) in the assembly of the console.

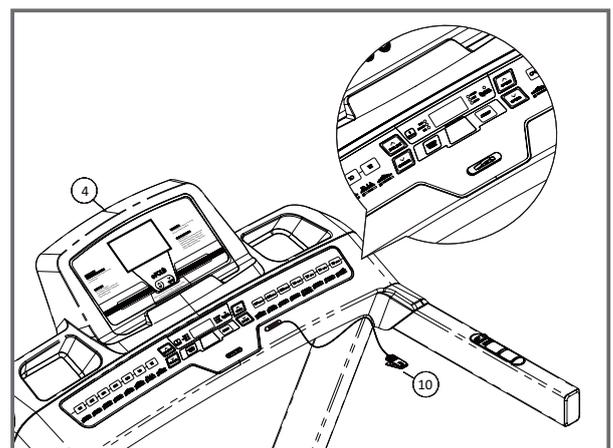


Step 7: Alignment of the feet

If the floor is uneven, you can stabilize the treadmill by turning the two setting screws under the main frame.

WARNING

The treadmill is equipped with high-pressure shock absorbers that can cause the treadmill to suddenly open if handled incorrectly. For more information, refer to the general assembly instructions.

1. Lift the treadmill on the desired side and rotate the setting screws under the main frame.
2. Rotate the screws clockwise in order to remove them and to raise the running surface.
3. Rotate them counterclockwise in order to lower the running surface.

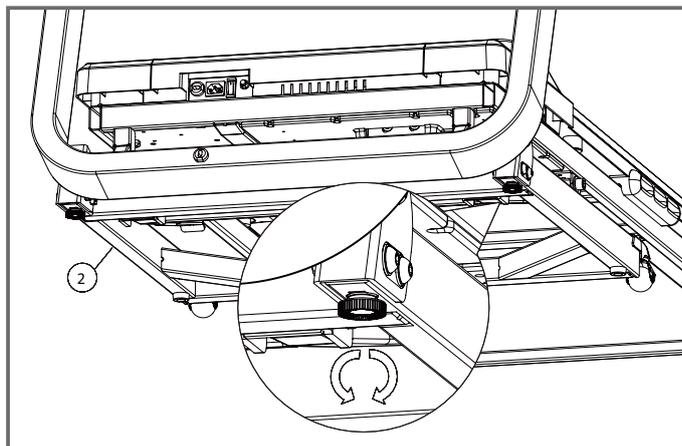

Step 8: Connecting the device to the mains supply

ATTENTION


The device must not be connected to a multiple socket, otherwise it cannot be guaranteed that the device will be supplied with sufficient power. Technical errors can result.

Plug the power plug into a wall outlet that complies with the instructions in the chapter on electrical safety.

3.1 Console Display




All important training information and entertainment functions are clearly displayed on the big, coloured screen. The display is divided in different zones.

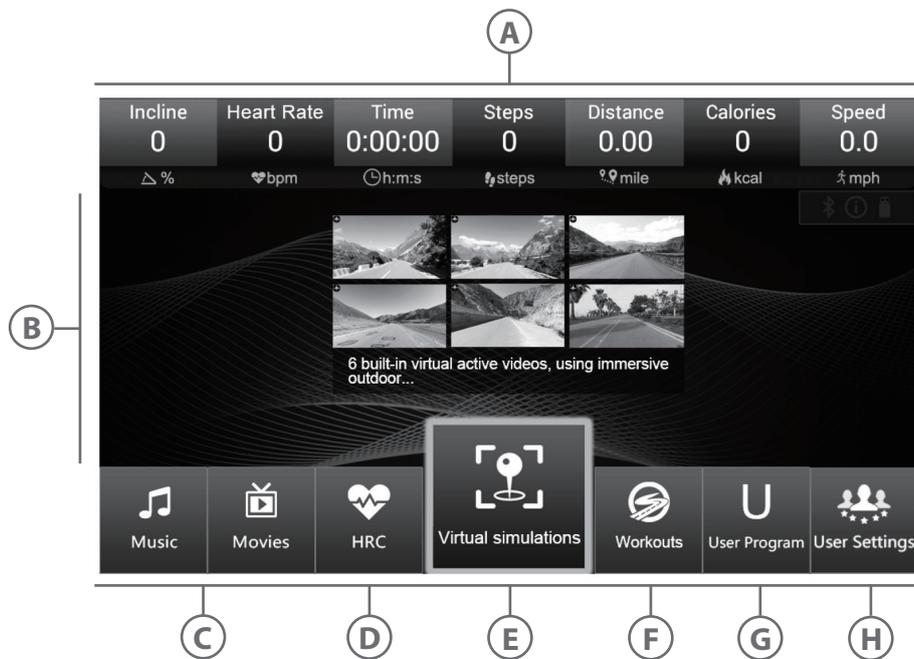

A – Training data display	All important training data are displayed at the top of the screen
B – Programme display and video screen	Training videos or programme profiles are displayed in the middle. The speed or the incline are displayed as bars per time unit.
C – Music/movies	When a USB stick is connected, MP3/WAV files as well as MP4/WKV/MOV/ AVI/FLV files can be played on the display/ loudspeakers.
D - HRC	The console offers you two HRC programmes: HRC1 as constant programme and HRC2 as interval programme. A constant pulse control is required at any time of the training to use these programmes.
E - Virtual Simulations	Six track videos are saved on the console. The speed of the video and the treadmill are adjusted to each other.
F - Workout	Here you can choose from 17 pre-installed programmes as well as 12 Challenge programmes, whereby you compete against computer opponents.
G - User programme	There are 20 individually configurable programmes, whereby you can individually choose incline and speed for each time interval.
H - User setting	<p>User settings: language, units, screen brightness</p> <p>► ATTENTION This area also contains functions that are to be used exclusively by service technicians.</p>

3.2 Button Functions

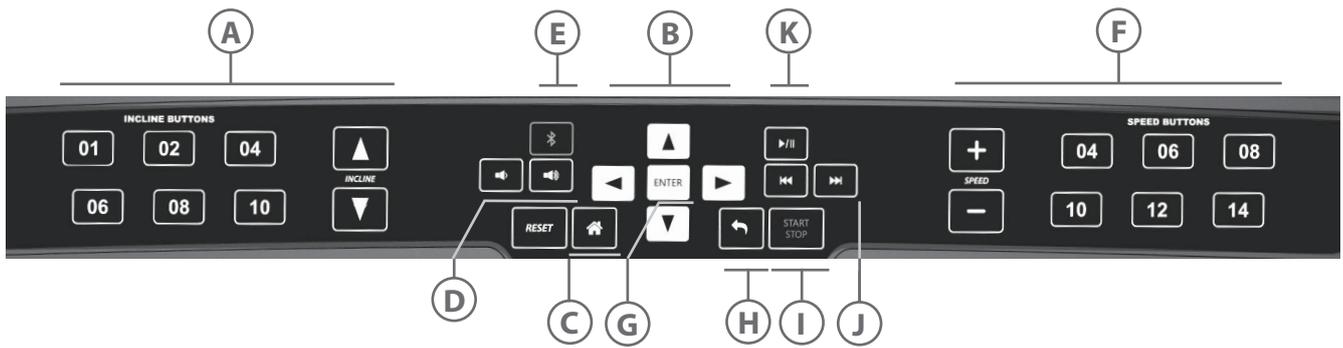

A – Incline up/down and hot keys	Increase or reduce the incline & quick access to the incline levels 1, 2, 4, 6, 8 or 10.
B – Arrow buttons	Choose menu points, options or programmes, set target values.
C – Menu	Back to the main menu.
D – Vol +/-	Increase or reduce the volume.
E – Bluetooth	Connects the treadmill with your mobile device (not for this model)
F – Speed up/down and hot keys	Increase or reduce the speed & quick access to the speed levels 4, 6, 8, 10, 12 or 14 km/h.
G – Enter	Confirm the settings and get to the next menu point.
H – Back	Back to the last page.
I – Stop/Start	Starts or ends the training.
J – Previous/Next	Play the previous or the next song.
K – Play/Pause	Start or pause the media playing from the USB stick.

In principle, the selection of programmes and the target settings are done via the arrow buttons. Then they are confirmed with ENTER. When you want to skip the entering of target values, you can also immediately start any programme by pressing START.

3.3 Programmes

Training progress only results from diversion. When you work out at the same speed, incline, and duration every day, you will be better in the beginning – however, at some point, you will come to a standstill. You won't become any better. It's sufficient to lose weight, but when you want to get more out of yourself, you have to vary your training and to challenge continuously. Here, this treadmill supports you with a lot of different and very diversified programmes. All programmes can be started either in the incline mode or in the speed mode. There are three intensity levels each. When you choose the speed mode, the treadmill varies the speed, while the incline remains constant. The values, which are not controlled by the programme, can be adjusted by means of the arrow buttons at any time.

However, when you wish to start running immediately, just press START. The treadmill slowly starts to move and all values are counted up from zero. Using the arrow buttons or hot keys, you can individually choose the exercise parameters and change these at any time.

3.3.1 Pre-Set Programmes

There are 17 pre-defined programmes, that differ in time, intensity and the changes of intensity. You can choose if you want to change the intensity by changing speed or by changing the incline.

P-01: Long, slow distance

(default 40 min.)



That's a great training for everybody. Beginners start with a light training and do this training on a weekly basis in order to maximise their cardiovascular fitness. On days, which follow a hard and intensive training, this programme is also ideal for experienced users. Once the programme is set, you go to U-1 or U-2 and press START.

P-02: Short interval

(default 20 min.)



Short intervals are ideal for beginners, who want to benefit from the use of an interval training, but are still not ready for the interval training with longer intensities. They are also ideal for experienced users to increase speed and anaerobic fitness. Please make sure that you vary the exercise intensity and duration to maximise the whole fitness. So just integrate some interval workouts in your weekly training.

P-03: Moderate interval

(default 30 min.)



Once you start a regular training and have an improved fitness, you are ready to train at a moderate intensity in the interval. Please pay attention that this training includes a change between an easy recovery and a high intensity interval. Feel good while doing your training, because the next recovery interval is always coming next. This training improves your general aerobic endurance and maximises the development of your anaerobic fitness at the same time.

Advanced programmes:

P-04: Long interval

(default 40 min.)



These exercises are excellent to maximise the calorie consumption and to improve the anaerobic fitness. Like for the moderate intervals, you have recovery intervals after each high intensity – for a constantly increasing training intensity.

P-05: Negative interval 1

(default 30 min.)



This programme offers all advantages of a training at a constant pace and motivates you to achieve a gradually higher, constant exercise intensity and allows to slowly reduce the exercise intensity then. By improving your general health and fitness, you can slowly improve to a higher level of the exercise intensity of the training.

P-06: Negative interval 2


(default 30 min.)



This training starts with a slight increase in the exercise intensity and ends with a gradual reduction of the exercise intensity. A training with an increase in and a reduction of the exercise intensity has an ideal effect on your aerobic, cardiovascular fitness. A training with the reduction of the exercise intensity is also ideal to maximise the calorie consumption – however, it needs to be over a longer period of time, for instance 40 or 50 minutes.

P-07: Fartlek

(default 30 min.)

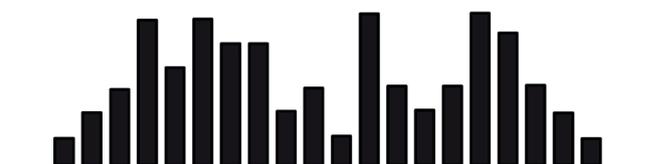

A varying exercise intensity with a constantly changing interval training, which starts at a light pace and increases to a moderate/intensive pace, offers diversion and great fitness benefits. Constantly varying intensities have a very positive effect on the improvement of the brain health according to brain research.

P-08: Climb uphill

(default 30 min.)



Increase gradually the exercise intensity with this workout. The target is to stimulate the body to improve the cardiovascular fitness and to maximise the muscle cell growth of the trained muscles. The calorie consumption is maximised in the top levels. Your body can work out longer and can still benefit from the high intensity when getting slower and returning to the starting level.

P-09: Pyramid climb

(default 30 min.)



The gradual increase of the intensity is ideal to improve the cardiovascular fitness and to maximise the muscle cell growth of the trained muscles. The calorie consumption is maximised during the top intensity. Your body can work out longer and benefits from the high intensities while slowing down gradually.

P-10: Plateau climb

(default 40 min.)



It offers all advantages of other constant workouts. However it also motivates you to keep a higher intensity. You improve your fitness and health and get yourself to a higher intensity over a longer period.

P-11: Ladder

default 30 min.)



One of the biggest advantages are the direct positive effects on the heart and the cardiovascular system. It has especially been developed to supply your heart and cardiovascular system with a series of increasingly more difficult exercise intensities. This improves your aerobic fitness and stimulates the anaerobic fitness as well. Please pay attention that it is challenging for some minutes. However each progress has to be carefully created in order to offer a recovery interval as well – that's how you motivate yourself to improve your cardiovascular fitness.

P-12: Uphill interval

(default 20 min.)



This training is unique, because the body benefits from the advantages of an interval training and of a gradual increase in intensity in addition. Start at a level, at which you feel comfortable, and increase gradually the intensity during each maximum interval and get yourself to a higher intensity each time. During the higher intensity intervals, you burn the maximum of calories and work on improving your anaerobic fitness at the same time.

P-13: Constant pace

(default 40 min.)



Improve your fitness and stimulate your body to burn more fat. It is an ideal support to improve your fitness. Most of these exercises of this kind focus on maintaining an intensity during the whole training. Your target is to work out at a low, moderate to high, moderate intensity during the whole training.

P-14: Long, slow distance

(default 40 min.)



An outstanding workout for everybody! Starters get an easy access and should do this training at least once a week to maximise their cardiovascular fitness. It is also ideal for experienced users, who do this training on days, which follow a hard, intensive training.

P-15: Cardio run

(default 20 min.)



It's a training at a constant pace but still at a higher intensity than that of "long slow distance". It is an advanced training in order to motivate to achieve a more challenging, constant pace and to keep this pace during the whole training. It is great as a preparation for a certain event.

P-16: Short interval

(default 20 min.)



Studies prove that this training is ideal for users, who want to lose more weight and who want to improve their cardiovascular fitness. Varying the intensity from moderate, slow to high over several intervals and their repetitions maximise the total number of burnt calories during the training. Another advantage is the personal decision whether the high intensity is kept during the training. The short recovery intervals allow the body to successfully do the exercises at a high intensity during a complete exercise duration.

P-17: Uphill run


(default 30 min.)



Improve your fitness and stimulate your body to burn more fat. It is an ideal support to improve your fitness. Most of the exercises of this kind focus on keeping an intensity during the whole training. Your target is to train at a low, moderate to high, moderate intensity during the whole workout.

3.3.2 Challenge Programmes

All in all, there are 12 challenge programmes, whereby the speed adjusts depending upon the level. The programmes come from the four zones: Special Forces, Olympic Game, Professional Game as well as Outdoor Running and each of them is available in three levels of selection.

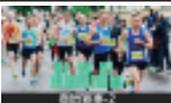	Special forces - 1
	Special forces - 2
	Special forces - 3
	Olympics game - 1
	Olympics game - 2
	Olympics game - 3
	Professional game - 1
	Professional game - 2
	Professional game - 3
	Outdoor running - 1
	Outdoor running - 2
	Outdoor running - 3

3.3.3 Custom User Programmes

There are 20 customised programmes, which you can individually create. Using these programmes, you determine the duration of the training programme first. Then you determine the desired speed and incline for each of these 20 time sequences. In contrast to the pre-set profile programmes, you can change speed AND incline at any time when using these programmes. Hence, incline and speed are separately displayed in the programme display, when using these programmes. On the left side of the screen, the incline is displayed; the speed is displayed on the right side.



3.3.4 Virtual Simulations

Six virtual simulation videos are pre-installed on the console. These are shot running tracks, which you can watch on the screen during your training. At first, you choose “virtual simulations” in the main menu and confirm the selection with ENTER.

Six preview images are displayed, which represent the tracks:



Snow Mountain Road: An interstate across the wide plain, in the background you can see the mountains. Beside the road some cattle is grazing and little streams pass the plain.

Across the Valley: A winding mountain road with oncoming traffic.

Kajun Village of Tibet: A road across a landscape of hills.

Anjiulashan Lake: A tour across smaller rural towns.

Across the Canyon: A road across a landscape of hills with some bridges and bounding walls.

Xiamen huandao road: A hilly foothills’ landscape.

You can choose the desired video with the arrow buttons and start the training with START.



During the training, you can change the speed and the incline with the arrow buttons or the hot keys at any time. The virtual simulation videos respond to your settings. When you change the speed on the treadmill, the playing speed of the video changes as well. Changing the incline does not influence the video. Some videos have some traffic volume. However, you do not have to pay attention to it, the traffic participants will avoid you.

When you press STOP, the treadmill stops and an overview of the training data is displayed. Press BACK to return to the main menu.

3.3.5 HRC Programmes (pulse control)

WARNING

Your training equipment is not a medical device. The heart rate measurement of this equipment may be inaccurate. Various factors can affect the accuracy of the heart rate measurement. The heart rate measurement serves only as a training aid.

The constant HRC programme requires the setting of a heart rate, which is kept by the console during the training. The interval HRC programme requires that you enter both a low and a high heart rate. During the HRC programmes a chest straps needs to be worn.



Set the HRC type: There are two modes of HRC programmes, HRC1 – constant and HRC2- interval. Set the preferred HRC mode with the buttons.

Set the mode: Set the speed or the incline with the buttons.

Set the age: Enter your age with the buttons.

Set the target heart rate: Enter your target heart rate with the buttons.

Set the target time: Set the programme duration of your training with the buttons.

3.4 User Setting

In the user settings you can change the screen brightness or the language settings, for instance. Choose SAVE after your selection and press ENTER.

Symbols are displayed at the top right of the screen. When a USB stick is plugged in, the USB symbol is displayed here; in addition, the maintenance symbol is displayed here every 300 km to remind you to do a little service.



Set the screen brightness



Language selection as well as units (metric or imperial)



Reset to default settings



Information about system software and hardware parameters

Information symbol:



USB drive is displayed, when you plug in the USB stick




Maintenance symbol: is displayed every 300 km

▶ ATTENTION

The following functions are only to be used by service technicians.



Development environment (only to be used by the service technician)

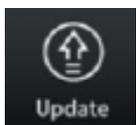

Update function (only to be used by the service technician)

4.2.1 Folding Up the Treadmill

WARNING

- + Try not to operate the equipment when it is folded up.
- + The running surface must have come to a complete stop before folding.
- + Do not stand on the treadmill during this procedure.
- + If an emergency occurs, press STOP or remove the safety key to immediately interrupt the eFOLD function.

CAUTION

- + Do not lean on the equipment when it is folded and do not place anything on top of it that may make the equipment unstable or fall down.


ATTENTION

- + Make sure that nothing is standing next to or on top of the treadmill that can be spilled or thrown or that makes it impossible to fold the treadmill.
- + If there is a power failure during folding, the unit must be restarted and the eFOLD function carried out again in standby mode.

1. Stand to the side of the treadmill.
2. Press eFOLD UP for two to three seconds.

You will hear a beep every two to three seconds.

→ *As soon as the treadmill is folded, the beep stops.*

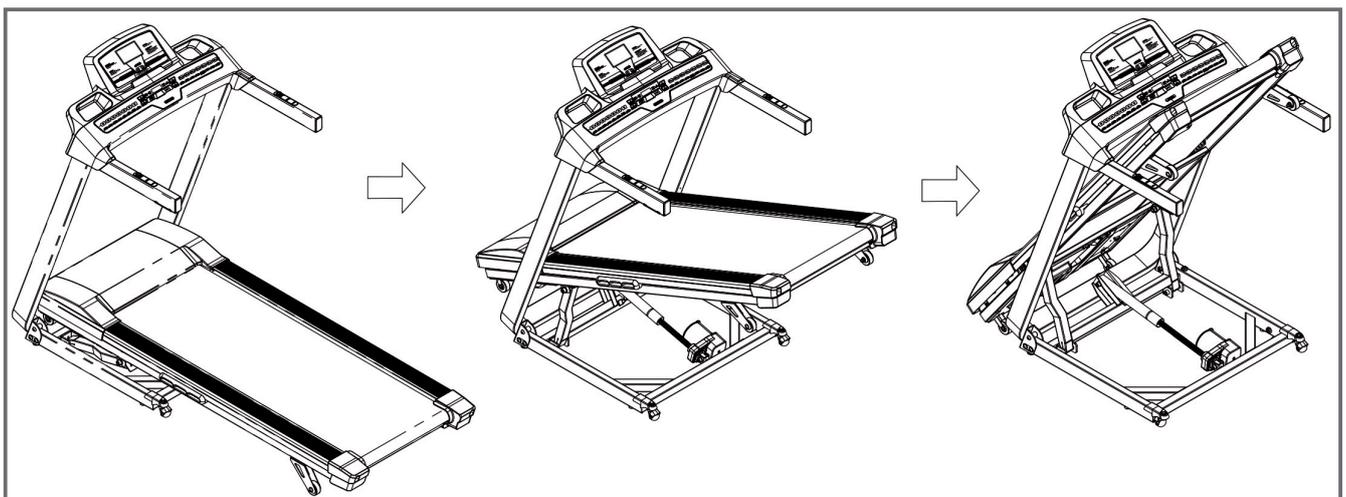


4.2.2 Unfolding the Treadmill

⚠ WARNING

- + Do not step on the incline motor or the incline linkage.
- + Ensure that there are no children or animals under the unit.

▶ ATTENTION

- + Make sure that nothing is standing next to or on top of the treadmill that can be spilled or thrown or that makes it impossible to unfold the treadmill.
- + Ensure that the treadmill has sufficient clearance on all sides. Follow the instructions in chapter 1.4 regarding the set-up place.

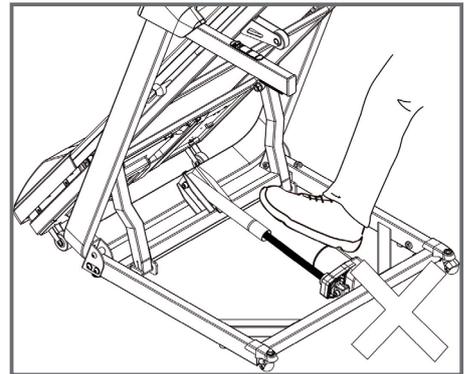

1. Stand to the side of the treadmill.
2. Press eFOLD DOWN for two to three seconds.

The running surface moves down.

You will hear a beep every two to three seconds.

→ *When the treadmill is unfolded, the beep stops.*


4.3 Transportation Wheels

▶ ATTENTION

If you want to transport your equipment over particularly sensitive and soft floor coverings, such as parquet, planks or laminate, lay out the transport route with cardboard or similar to avoid possible floor damage.

The unit is equipped with four transport wheels which are easy to use when folded.

1. Turn off the appliance by the on/off switch and unplug the appliance from the wall outlet.
2. Place both hands on the handles and push or slide the treadmill to transport it. The treadmill should be dismantled and securely packed for further transportation. For long transport distances the equipment should be disassembled and safely packed.
3. Select the new location by following the instructions in the section 1.4 of this manual.

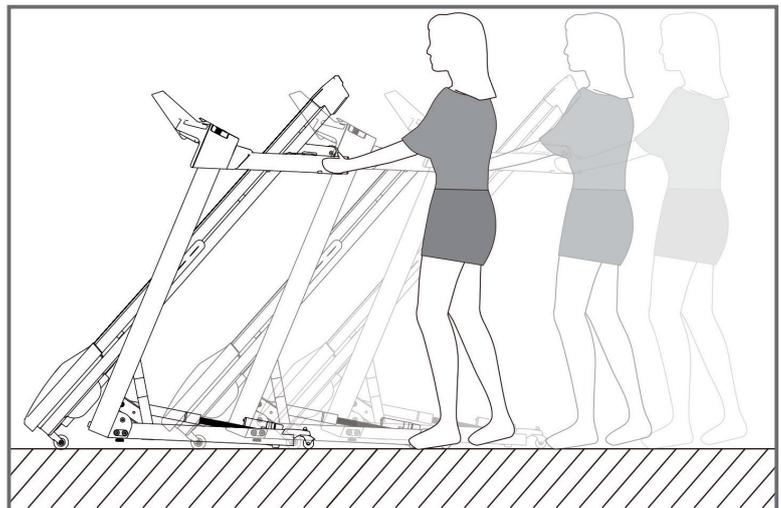

5.1 General Instructions



WARNING

+ Do not make any improper changes to the equipment.



CAUTION

+ Damaged or worn components may affect your safety and the life of the equipment. Therefore, immediately replace damaged or worn components. In such a case, contact the contract partner. The equipment must not be used until it has been repaired. If necessary, use only original spare parts.

► ATTENTION

+ In addition to the instructions and recommendations for maintenance and care given here, additional service and/or repair work may be necessary; this must only be carried out by authorised service technicians.

5.2 Faults and Fault Diagnosis

The equipment undergoes regular quality controls during production. Nevertheless, faults or malfunctions may occur. Frequently, individual parts are responsible for these disturbances, an exchange is usually sufficient. Please refer to the following overview for the most common errors and how to correct them. If the equipment still does not function properly, contact your contract partner.

Fault	Cause	Solution
Console only shows lines	Safety key missing	Check if the safety key is inserted and place it in
Running belt tilted	Running belt not aligned	Laufmatte gemäß Anleitung zentrieren
Running belt slips through/stops	Belt tension/lubrication not ok	Check belt tension/lubrication in accordance with the instructions
Scraping noises	Running belt scrapes, because it is not aligned	Align running belt in accordance with the instructions
Display does not show anything	Check plug connections (cables)	Mains switch on "on", make sure that the safety key is inserted
No pulse display	<ul style="list-style-type: none"> + Sources of interference in the room + Unsuitable chest strap + Position of the chest strap incorrect + Batteries empty 	<ul style="list-style-type: none"> + Remove sources of interference (e. g. mobile phone, speakers, WLAN, mover robot, vacuum cleaner robot etc.) + Use suitable chest strap (see recommended accessories) + Reposition chest strap and/or moisten electrodes + Change batteries

5.3 Error Codes and Troubleshooting

The electronics of the equipment continuously carries out tests. In case of deviations, an error code appears on the display and normal operation is stopped for your safety.

Please contact Sport-Tiedje for technical support.

ERR 1

1. Check the cable connections between the motor control unit and the display.
2. Turn off the treadmill on the mains plug for a few seconds. When the error is still displayed, please contact your contract partner to replace the cables.

ERR 2

1. Erratic speed – Check all cable connections of the console and make sure that they are correctly connected.
2. Check the connections of the console cable and the motor cable.
3. Turn off the treadmill on the mains plug for a few seconds. When the error is still displayed, please contact your contract partner.

ERR 4 / ERR 9

1. Error of the incline motor – Check all cable connections to the incline motor and make sure that these are correctly connected.
2. Turn off the treadmill on the mains plug for a few seconds. When the error is still displayed, please contact your contract partner.

ERR 5 / ERR 6

1. Overloading/Overcharging – Disconnect the treadmill from the power supply for a few seconds and turn it on again.
2. When the error is still displayed, please lubricate the treadmill.
3. Turn off the treadmill on the mains plug for a few seconds. When the error is still displayed, please contact your contract partner.

ERR 7

1. Invalid system parameter – Disconnect the treadmill from the power supply for a few seconds and turn it on again.
2. When the error is still displayed, please contact your contract partner.

ERR 8

1. Check the IC chip (EPROM) of the console and make sure that it is correctly mounted.
2. Check whether the pins of the IC chip might have been bent. Connect correctly the IC chip.
3. Turn off the treadmill on the mains plug for a few seconds. When the error is still displayed, please contact your contract partner.

5.4 Care and Maintenance

The most important maintenance measure is the care of the running mat. This includes adjustment, re tensioning and lubrication of the running mat. Damage resulting from insufficient or neglected care is not covered by the warranty. You should therefore carry out maintenance checks at regular intervals. Be very careful when adjusting and tightening the running mat, as a strong over voltage or under voltage can cause damage to the equipment. The running mat is adjusted at the factory according to the regulations before delivery. However, it may happen that the running mat slips during transport.

5.4.1 Adjusting the Running Mat


During training, the running mat should run as centrally and straight as possible. The alignment of the running mat can change depending on the stress and load. Another reason can be the positioning of the equipment on an uneven surface.



CAUTION

During the following maintenance nobody must be on the treadmill!

1. Let the treadmill run at a speed of 5 km/h.
2. If the running mat deviates to the left, turn the left adjusting screw at the rear end of the device max. one $\frac{1}{4}$ turn clockwise and the right adjusting screw max. one $\frac{1}{4}$ turn anticlockwise.
3. If the running mat deviates to the right, turn the right adjusting screw at the rear end of the device max. $\frac{1}{4}$ turn clockwise and the left adjusting screw max. $\frac{1}{4}$ turn anticlockwise.
4. Then observe the mat for about 30 seconds, as the change is not immediately visible.
5. Repeat this procedure until the running mat is straight again. If the running mat cannot be adjusted, please contact your contract partner.

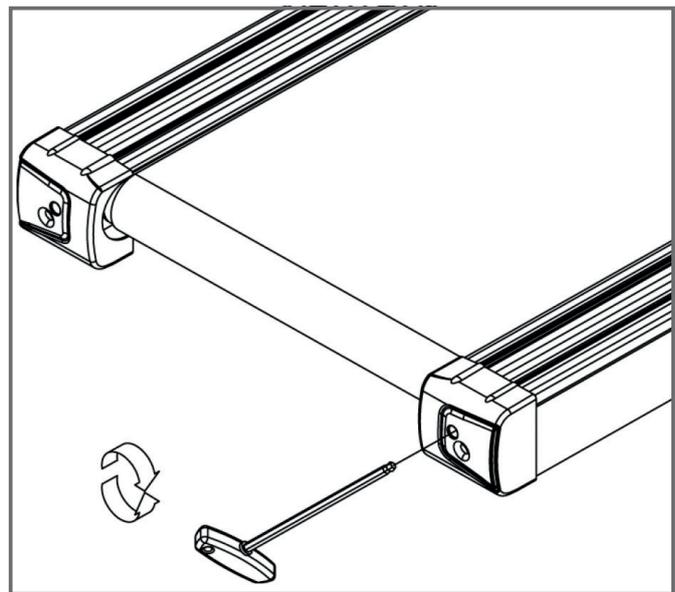

5.4.2 Re-tensioning the Running Mat

If the running mat slips over the rollers during operation (if this is the case, there is a noticeable jerk during running), the running mat must be re tightened.

In most cases, the slipping is caused by stretching of the mat through use. This is perfectly normal.

① NOTICE

Re-tensioning is carried out using the same adjusting screws that are used for adjustment.

1. Let the treadmill run at a speed of 5km/h.
2. Turn the left and right adjusting screws directly one after the other, max. one ¼ turn clockwise.
3. Then check whether the running mat continues to slip. If this is the case, you must perform the described procedure again.

5.4.3 Lubricating the Running Mat

If the running mat is not sufficiently lubricated, friction increases significantly and this leads to heavy wear of the endless belt, running plate, motor and circuit board. If you feel an increased friction of the running mat, this is an indication that you should lubricate the mat. However, lubrication should be carried out at least every 3 months or every 50 operating hours. Whichever case comes first.


① NOTICE

If your treadmill is equipped with a folding mechanism, you can also lubricate it when it is folded.

1. Raise the running mat slightly.
2. Apply some lubricating oil or silicone spray to the entire deck and distribute evenly.
3. Continue turning the belt by hand so that the entire surface between the endless belt and the running plate is lubricated.
4. Wipe off the excess lubricating oil or silicone spray.


① NOTICE

This maintenance must also be carried out after prolonged non-use of the equipment.

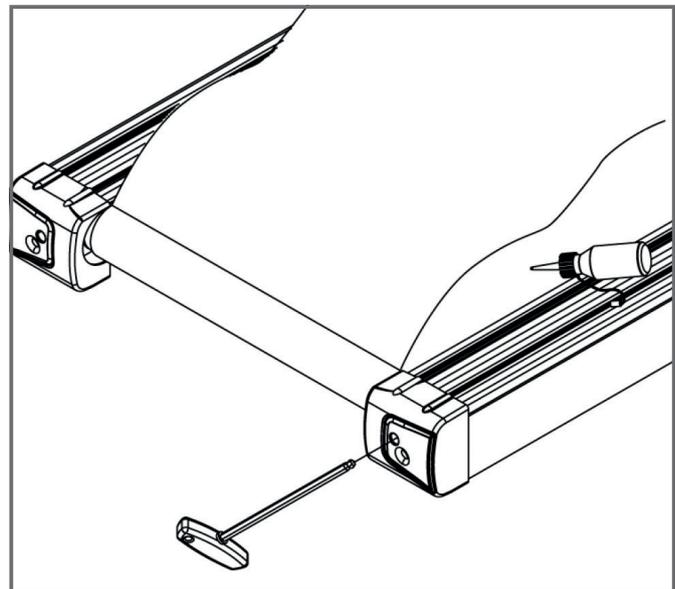

5.5 Maintenance and Inspection Calendar

The cockpit, casing, handrails and entire frame must be cleaned after every training session with a moist towel (no solvent!) in order to avoid damage caused by sweat. After 150 hours of operation, the maintenance symbol reminds you to clean the treadmill. After you have cleaned the treadmill and checked all components, turn off the symbol by simultaneously pressing the INCLINE up and INCLINE down buttons.

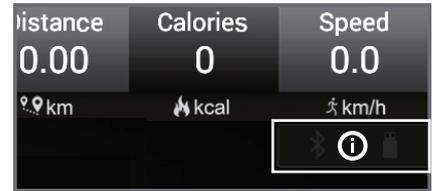

The following routine tasks must be performed at the specified intervals:

Part	Weekly	Monthly	Quarterly	Half-yearly	Yearly
Display console	C	I			
Tension of the running mat				I	
Lubrication of the running mat			I		
Plastic covers	C	I			
Screws and cable connections		I			
Legend: C = clean; I = inspect					

6 DISPOSAL

At the end of its operational life, this equipment cannot be disposed of in normal household waste. Instead, it must be disposed of via an electricals recycling centre. Further information can be obtained from your local authority's recycling service.



The materials can be recycled as per their symbols. Through the reuse, recycling of materials or other forms of recovery of old equipment, you make an important contribution to the protection of the environment.

To make your training experience even more efficient and pleasant, we recommend that you add suiting accessories to your fitness equipment. This could be a floor mat, for example, which makes your fitness equipment stand more securely and also protects the floor from falling sweat, but it could also be additional handrails on some treadmills or silicone spray to keep moving parts in good shape.

If you have purchased a fitness machine with pulse training and want to train your heart rate, we strongly recommend that you use a compatible chest strap, as this ensures optimum transmission of the heart rate. You may want to buy additional grips or weights for multi gyms.

Our range of accessories offers the highest quality and makes training even better. If you would like to find out more about compatible accessories, please go to the detail page of the product in our webshop (the easiest way is to enter the article number in the search field above) and go to the recommended accessories on this page. Alternatively, you can use the QR code provided. Of course, you can also contact our customer service: by telephone, e-mail, in one of our branches or via our social media channels. We will be happy to advise you!



floor mat



chest strap



chest strap contact gel



towels



silicon spray

8.1 Serial Number and Model Name

In order to provide you with the best possible service, please have the model name, article number, serial number, exploded drawing and parts list ready. The corresponding contact options can be found in chapter 10 of this operating manual.

NOTICE

The serial number of your equipment is unique. It's located on a white sticker. The exact position of this sticker is shown in the following illustration.



Enter the serial number in the appropriate field.

Serial number:

Brand / Category:

cardiostrong / treadmill

Model Name:

TX40e

Article Number:

CST-TX40e-2

8.2 Parts List

No.	Qty.	Supplier Parts No.	Name
(01)	1	8000003165	Main frame set
(02)	1	8000003158	Frame Base Set
(04)	1	8000003160	Incline Base
	2	511212008000114	"Round head hexagonal socket screw "
	3	541112026200114	Washer
	4	511212007000114	"Round head hexagonal socket screw "
	5	531212001200114	Nylon Nut
(05)	1	8000003161	Support post set
	1	8000003162	Support post
	2	511410005000114	"Oval head hexagonal socket screw "
	3	541110020150114	Washer
	4	511212005500114	Hexagonal socket screw
	5	531212001200114	Nylon Nut
	6	541113026200114	Washer
(06)	1	8000003163	Handrail set
(07)	1	8000003156	console bracket
	2	511408003500114	Socket Screw
	3	541108016150114	Washer
	4	521204101000114	Socket
(09)	1	8000003252	Running deck set
	1	206218068012651	Running deck
	2	531408000800111	T-nut
	3	511608003000114	Screw
	4	511408002500114	Screw
	5	541108014150114	Washer
	6	2000002588	Reinforcing bar
	7	511408003000214	Screw bolt
	8	5000000150	Foam adhesive
(10)	1	STC41501002000	Incline motor set
	1	401240132309910	Incline motor
	3	511610004000114	Hexagonal cap screw
	4	511610006500114	Hexagonal cap screw


	5	2	531210001000114	Nylon Nut
	6	2	541110020150114	Washer
(12)	1	6	342008003002001	Rubber Cushion
	2	2	342008003001802	Desk isolator-18t
	3	4	331808205602301	Wheel
	4	4	511408004000114	Screw
	5	4	541108016150114	Washer
	6	4	531208000800114	Nut
	7	8	521504115900114	Truss Head Cross Threading Die Screw
	8	1	312TC4150011004	Motor Cover-Lower
	9	2	3000000788	Cushion
	10	2	541108030200114	Washer
	11	2	322312004001004	End cap
(13)	1	4	312TC4150021004	"Infrared sensor set (front cover) "
	2	4	312TC4150031004	"Infrared sensor set (rear cover) "
	3	1	4000000465	Infrared PC board
	4	1	4000000459	Infrared receiver - Left
	5	1	4000000460	Infrared receiver - Right
	6	1	4000000463	Infrared Transmitter - Left
	7	1	4000000464	Infrared Transmitter - Right
	8	1	4000000458	Cable-3P
	9	1	4000000493	Cable-5P
	10	2	4000000461	Cable-2P
	11	1	4000000462	Cable-3P
	12	16	521102000600112	Screw M2*6L
	13	2	531204000500111	Hexagonal nut
	14	2	511504001500111	Truss head cross screw
	15	4	541105010100111	Washer
	16	8	521204112700114	Screw
	17	16	521103000800111	Screw
	14	4	591110300050011	One sided adhesive
	15	2	5000000041	One sided adhesive
(13)	1	2	341306402601001	Space Pad
	2	2	521205501900114	Screw
	3	2	351706403001101	DESK BASE FOOT, ASJUSTABLE


	4	2	331200004005801	Pulley
	5	2	544110018200114	Washer
	6	2	532009501700114	Hexagonal nut
	7	1	592400000000001	Power Cord Buckle
	8	1	592400000000013	Fixer
	9	1	522204101600115	screws
(14)	1	2	511408004700114	Hexagonal Socket Screw
	2	2	531208000800114	Nut
	3	2	541108016150114	Washer
	4	2	511908007000124	Socket Screw
(15)		1	8000003253	Motor Set
	1	1	401121104903510	Motor-220V
	2	1	205213828628501	Core
	3	1	2000002589	Motor Bracket
	4	4	511208001500214	Hexagonal socket screw
	5	2	511208001200115	"Round Head Hexagonal Socket Screw "
	6	6	544182016200114	Spring washer
	7	2	511608004500214	Hexagonal cap screw
	8	8	541108016150114	Washer
	9	4	531108000800114	Hexagonal nut
	10	1	5924000000000006	Bracket
	11	1	531203000400111	Nylon Nut
	12	1	511303000800114	Round head cross screw
	13	1	541103007100111	Flat Washer
(17)		1	8000003182	MCB set
	1	1	2000002730	Control board fixer
	2	1	4000000689	MCB-220V
	3	1	407302250160001	Switch-AC Power
	4	1	407101250100001	Overload switch
	5	1	407202250150001	POWER SOCKET
	6	2	405301010300801	Black Cable
	7	1	405301010301501	Black Cable
	8	1	405301010301502	Wire(White)
	9	1	405301010302102	White Cable
	10	1	405301010301503	Cable-yellow/green

11	4	512506401300111	Truss head cross screw
13	1	511505002500111	Screw
14	2	541105010100211	Flat Washer
15	1	543105010060111	Washer
16	1	531205000500111	Nylon Nut
17	2	531105000400111	Nut
18	6	531204000500111	Hexagonal nut
19	4	511504001000111	Screw
20	12	541105010100111	Washer
21	1	406222005231502	Choke
22	1	4000000387	Filter
23	1	592400000000001	Power Cord Buckle
24	1	591410350070012	Twin Adhesive
25	2	511504002500111	Screw
(18)	1	S000000323	Console set (w. overlay)
(20)	1	ST200101007	Safety key
1	1	204TB2100190B01	Conducting Foil
(21)	2	205234620812701	Core
3	2	592100000000010	tie
4	2	592400000000001	Power Cord Buckle
5	2	592200000000002	Wire clipper
6	1	531204000500111	Hexagonal nut
7	1	511504001500111	Truss head cross screw
8	2	541105010100111	Washer
9	1	592400000000013	Fixer
(22)	1	ST220600003	Roller Set
1	1	207117060006002	Front Roller Set
2	1	207217050006001	Rear Roller Set
3	3	512207906400115	Hexagonal socket screw
4	3	541108016150114	Washer
(23)	1	2000002848	Running Belt
(24)	2	213024011265104	Side rail
(25)	1	STC41502501004	Motor cover set
1	1	311TC4150071004	Motor cover-left
2	1	311TC4150081004	Motor cover-right

3	1	311TC4150091004	Motor cover-middle
4	8	521204101000114	Socket
5	4	512506401300114	Screw
6	2	5000000328	"Foam type single-sided adhesive "
(26)	1	STC41502601004	Rear End Cap Set
1	1	311TC4150051004	Rear End Cap-Left
2	1	311TC4150061004	Rear End Cap-Right
3	4	521204101000114	Socket
(27)	1	8000002288	Tablet holder set
1	1	8000002289	Tablet holder
2	1	8000002290	Tablet holder bracket
3	1	8000002291	Table fixed hook
4	1	5000000005	Tension band
5	4	5000000006	Skidfoam
6	3	5000000007	Skidfoam
7	2	5000000021	Screw
8	2	511504001000114	Screw
9	1	732035023005001	Plastic bag
10	1	7000000050	Carton
(32)	1	405403130318501	AC power cord - EU type
(32)	1	4000000249	AC power cord - UK type
(35)	1	2000000952	Drive belt

8.3 Exploded Drawing

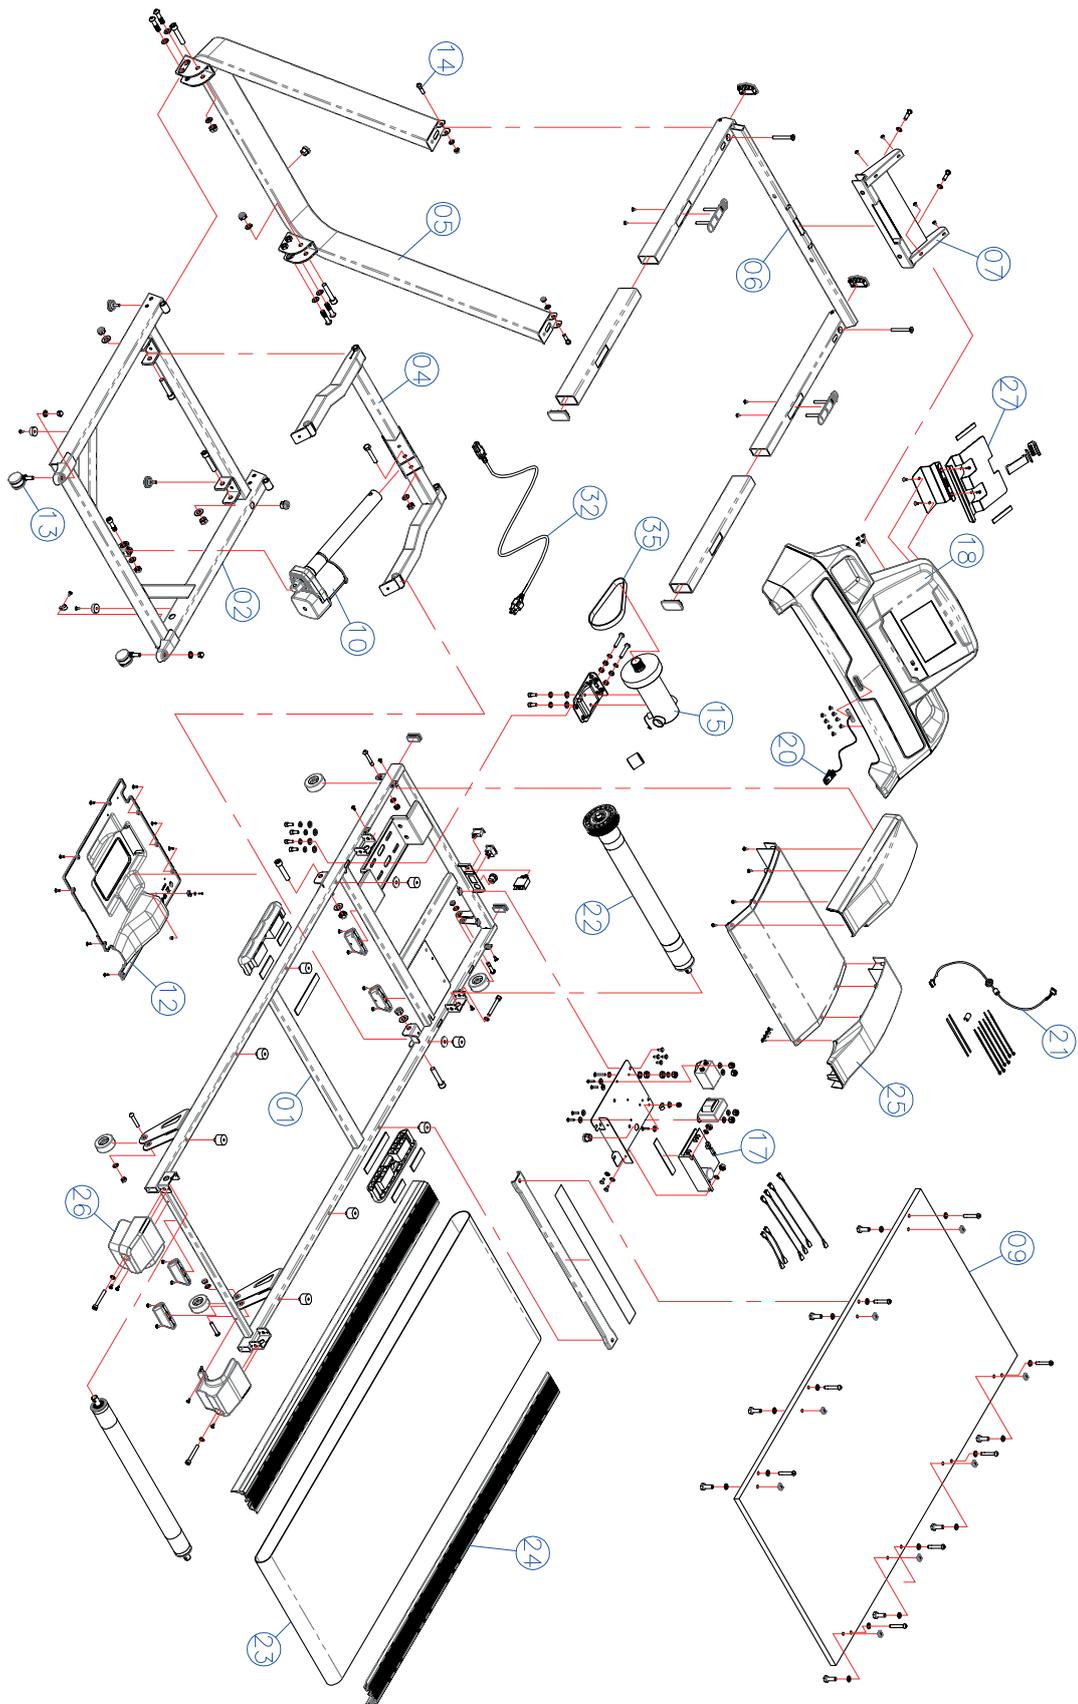

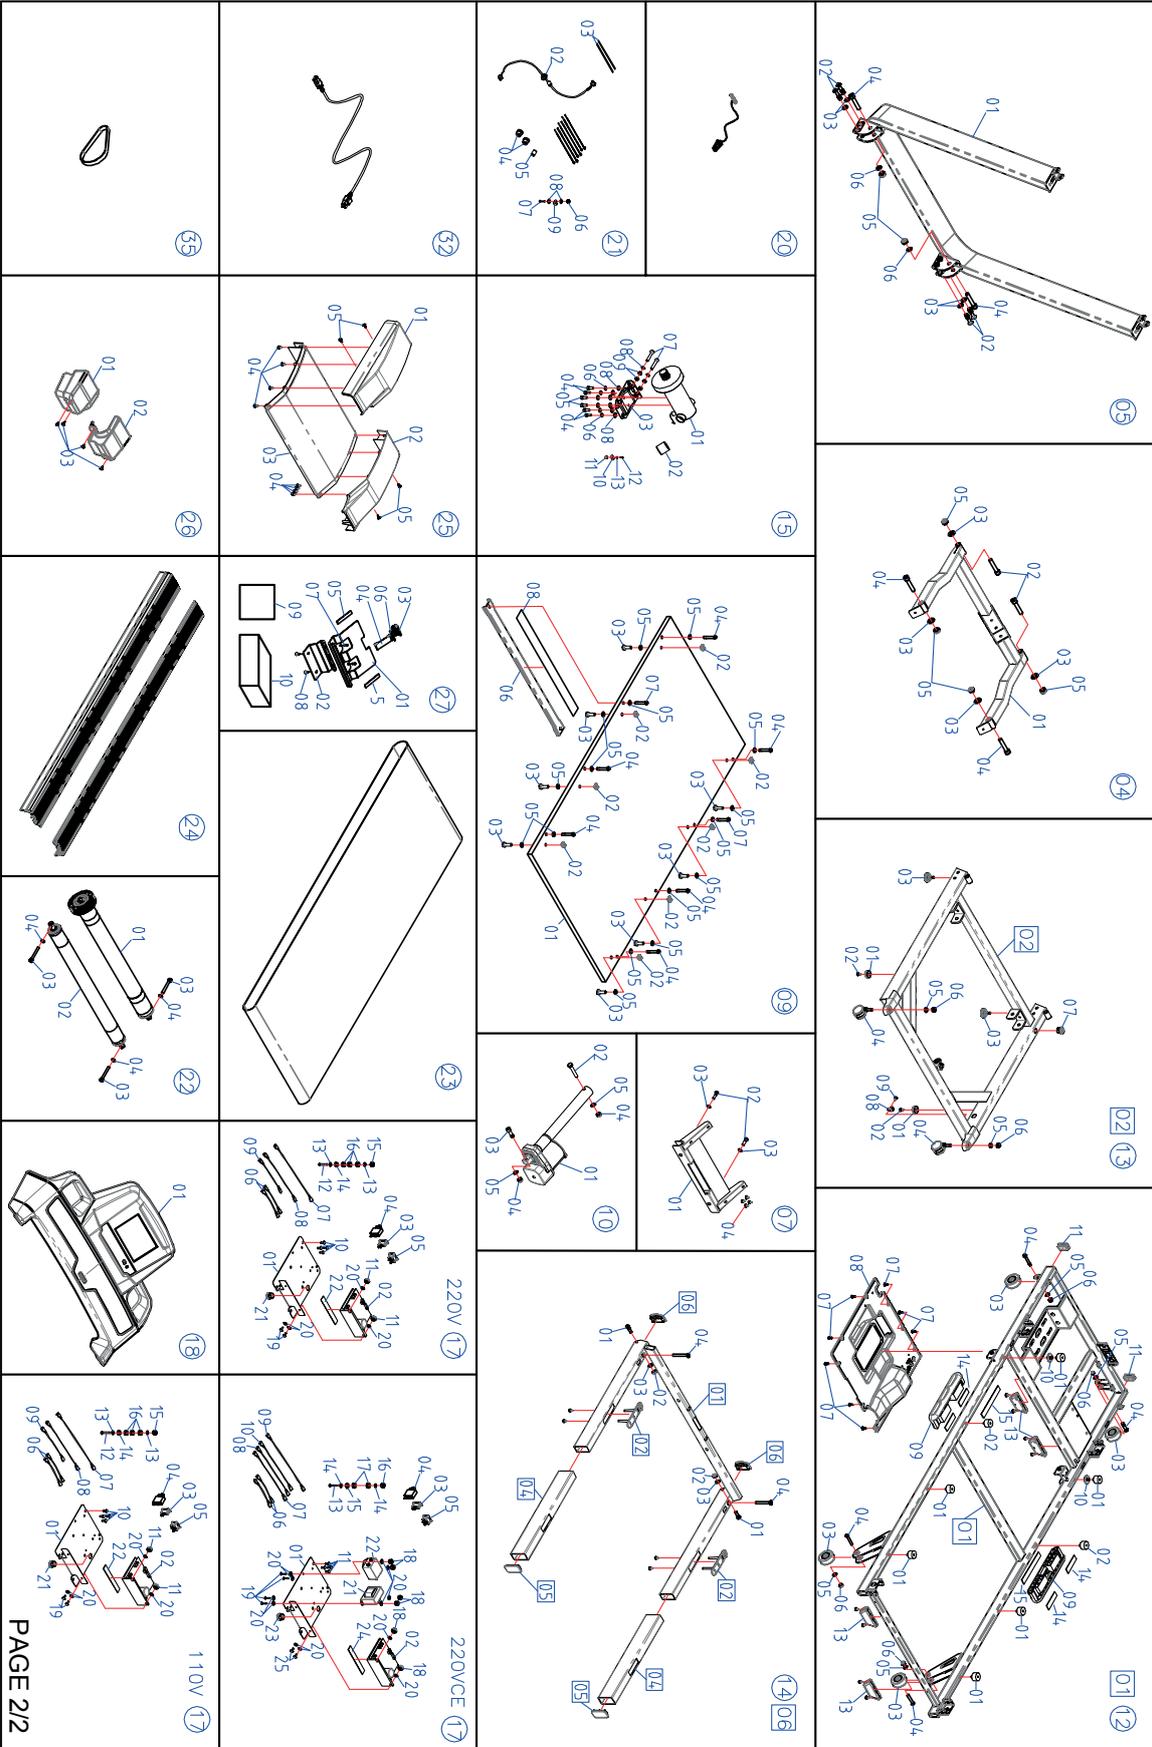

Training equipment from cardiostrong® is subject to strict quality control. However, if a fitness equipment purchased from us does not work perfectly, we take it very seriously and ask you to contact our customer service as indicated. We are happy to help you by phone via our service hotline.

Error Descriptions

Your fitness equipment is developed for long-term, high-quality training. However, should a problem arise, please first read the operating instructions. For further assistance, please contact your contract partner or call our service hotline. To ensure your problem is solved as quickly as possible, please describe the defect as exactly as possible.

In addition to the statutory warranty, we provide a warranty for every fitness equipment purchased from us according to the following provisions.

Your statutory rights are not affected.

Warranty

The warranty is the first/original buyer and/or any person who received a newly purchased product as a gift from the original buyer.

Warranty periods

The following warranty periods begin on delivery of the fitness equipment.

Model	Usage	Full Warranty	Frame	Motor
TX40e-2	Home use	24 Months	30 Years	10 Years

Repair Costs

According to our choice, there will either be a repair, a replacement of individual damaged parts or a complete replacement. Spare parts, that have to be mounted while assembling the equipment, have to be replaced by the warranty personally and are not a part of repair. After the expiration of the warranty period for repair costs, a pure parts warranty applies, which does not include the repair, installation and delivery costs.

The terms of use are defined as follows:

- + Home use: solely for private use in private households up to 3 hours per day
- + Semi-professional use: up to 6 hours per day (e. g. rehabilitation centres, hotels, clubs, company gyms)
- + Professional use: more than 6 hours per day (e. g. commercial gyms)

Warranty Service

Within the warranty period, equipment which develops faults as a result of material or manufacturing defects, will be repaired or replaced at our discretion. Ownership of equipment or parts of equipment which have been replaced is transferred to us. The warranty period is not extended nor does a new warranty period begin following repair or replacement under the warranty.

Warranty Conditions

For the warranty to be valid, the following steps must be taken:

Please contact our customer service by email or phone. If the product under warranty has to be sent in for repair, the seller bears costs. After expiry of the warranty, the buyer bears the costs of transport and insurance. If the fault is covered by our warranty, you will receive a new or repaired equipment in return.

Warranty claims are invalid in case of damage resulting from:

- + misuse or improper handling
- + environmental influences (moisture, heat, electrical surge, dust, etc.)
- + failure to follow the current safety measures for the equipment
- + failure to follow the operating instructions
- + use of force (e. g. hitting, kicking, falling)
- + interventions which were not carried out by one of our authorized service centres
- + unauthorised repair attempts

Proof of Purchase and Serial Number

Please make sure that you are able to provide the appropriate receipt when claiming on your warranty. So that we can clearly identify the model of your equipment, and for the purposes of our quality control, you will need to give the serial number of your equipment, when contacting the service team. Where possible please have your serial number and your customer number ready when you call our service hotline. It will help us to deal with your request swiftly.

If you cannot find the serial number on your fitness equipment, our service team is at your disposal to offer further information.

Service outside of the Warranty Period

We are also happy to issue an individual cost estimate if there is a problem with your fitness equipment after the warranty has expired, or in cases which do not fall under the terms of the warranty, e. g. normal wear and tear. Please contact our customer service team to find a quick and cost-effective solution to your problem. In such a case you will be responsible for the delivery costs.

Communication

Many problems can be solved just by speaking to us as your specialist supplier. We know how important it is to you as a user of the fitness equipment to have problems solved quickly and simply, so you can enjoy working out with minimal interruption. For that reason, we also want to resolve your queries quickly and in a straightforward manner. Thus, please always keep your customer number and the serial number of the faulty equipment handy.

DE	DK	FR
<p>TECHNICAL SUPPORT</p> <p>☎ +49 4621 4210-900 📠 +49 4621 4210-698 ✉ technik@sport-tiedje.de</p> <p>🕒 Mo - Fr 08:00 - 18:00 Sa 09:00 - 18:00</p> <p>SERVICE</p> <p>☎ 0800 20 20277 (Freecall)</p> <p>✉ info@sport-tiedje.de</p> <p>🕒 Mo - Fr 08:00 - 21:00 Sa 09:00 - 21:00 So 10:00 - 18:00</p>	<p>TECHNICAL SUPPORT & SERVICE</p> <p>☎ 80 90 16 50 +49 4621 4210-945 ✉ info@fitshop.dk</p> <p>🕒 Mo - Fr 08:00 - 18:00 Sa 09:00 - 18:00</p>	<p>TECHNICAL SUPPORT & SERVICE</p> <p>☎ +33 (0) 172 770033 +49 4621 4210-933 ✉ service-france@fitshop.fr</p> <p>🕒 Mo - Fr 08:00 - 18:00 Sa 09:00 - 18:00</p>
	PL	BE
	<p>TECHNICAL SUPPORT & SERVICE</p> <p>☎ 22 307 43 21 +49 4621 42 10-948 ✉ info@fitshop.pl</p> <p>🕒 Mo - Fr 08:00 - 18:00 Sa 09:00 - 18:00</p>	<p>TECHNICAL SUPPORT & SERVICE</p> <p>☎ 02 732 46 77 +49 4621 42 10-932 ✉ info@fitshop.be</p> <p>🕒 Mo - Fr 08:00 - 18:00 Sa 09:00 - 18:00</p>

UK	NL	INT
<p>TECHNICAL SUPPORT</p> <p>☎ +44 141 876 3986 ✉ support@powerhousefitness.co.uk</p> <p>SERVICE</p> <p>☎ +44 141 876 3972 🕒 Mo - Fr 9am - 5pm</p>	<p>TECHNICAL SUPPORT & SERVICE</p> <p>☎ +31 172 619961 ✉ info@fitshop.nl</p> <p>🕒 Ma - Do 09:00 - 17:00 Vr 09:00 - 21:00 Za 10:00 - 17:00</p>	<p>TECHNICAL SUPPORT & SERVICE</p> <p>☎ +49 4621 4210-944 ✉ service-int@sport-tiedje.de</p> <p>🕒 Mo - Fr 8am - 6pm Sat 9am - 6pm</p>
	AT	CH
	<p>TECHNICAL SUPPORT & SERVICE</p> <p>☎ 0800 20 20277 (Freecall) +49 4621 42 10-0 ✉ info@sport-tiedje.at</p> <p>🕒 Mo - Fr 08:00 - 18:00 Sa 09:00 - 18:00</p>	<p>TECHNICAL SUPPORT & SERVICE</p> <p>☎ 0800 202 027 +49 4621 42 10-0 ✉ info@sport-tiedje.ch</p> <p>🕒 Mo - Fr 08:00 - 18:00 Sa 09:00 - 18:00</p>

Please find a detailed overview including address and opening hours for all stores of the Sport-Tiedje Group in Germany and abroad on the following website:

www.sport-tiedje.com/en/stores





WE LIVE FITNESS

WEBSHOP AND SOCIAL MEDIA

Sport-Tiedje is Europe's largest specialist store for home fitness equipment with currently 80 stores and one of the world's most renowned online mail order companies for fitness equipment. Private customers order via the 25 web shops in the respective national language or have their desired equipment assembled on site. In addition, the company supplies fitness studios, hotels, sports clubs, companies and physio practices with professional equipment for endurance and strength training.

Sport-Tiedje offers a wide range of fitness equipment from renowned manufacturers, high-quality in-house developments and comprehensive services, such as a build-up service and sports scientific advice before and after the purchase. The company employs numerous sports scientists, fitness trainers and competitive athletes.

Visit us also on our social media platforms or our blog!

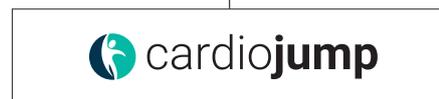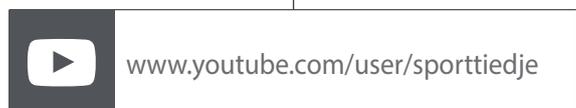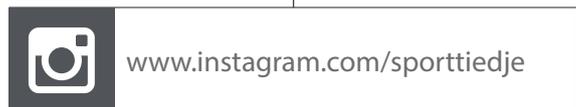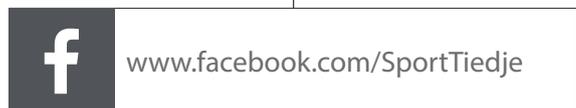

Notes

Notes



Treadmill **TX40e**